

## Cautions

1. The appliance should be taken to avoid exposure, percussion, water, and rain in the transport process, and make the battery positive and negative pole Insulation.
2. The appliance should be stored in a cool dry indoor storage, avoid flooding, rain.
3. No long-term placement in a low voltage state. Appliances do not use the electricity charge to more than 50% of storage, can be stored for more than 6 months, but in order to extend the service life, suggest charging every three months.
4. Do not immerse the appliance in water or become wet.
5. Do not modify or disassemble the appliance.
6. Do not reverse connect the input or output.
7. Be careful not to let the children touch appliance.
8. Do not put the appliance into the fire.
9. Please use qualified charger to charge the appliance.
10. Do not impact heavy and throw the appliance.
11. If the liquid of the appliance gets into your eyes, do not rub your eyes, rinse with water and consult doctors immediately.
12. If there is any abnormal or malfunction when charging please contact your dealer.

## Contact us

For any inquiries or comments concerning our product or any quality-related issue with our product, [or you want to customize any other battery packs](#), please feel free to contact us, we will respond to you as soon as possible and do our best to help you.

Email us: [rome\\_jia@yabopower.com](mailto:rome_jia@yabopower.com)

Website: [www.yabopower.com](http://www.yabopower.com)



# YABO NB7101/NB7102

## Universal instruction manual



Thank you for applying our portable power bank. Please read the user manual carefully and properly keep it for reference.



NB7101



NB7102

### Specification:

Capacity: 3.7V/17500mAh 64.75Wh

Build-in battery: High quality lithium ion batteries (18650)

### Input:

DC socket: 29.4V/0.95A

### Output:

DC1: 24V(29.4V-21V)/3A

DC2: 19.5V/3A

USB-A: 5V/2.4A 12W Max.


### USB-C Output:

**NB7101:** No

**NB7102:** 5V/3A 9V/3A 12V/3A 15V/3A 20V/3A 60W Max.

Size: 160x82x22mm

**Note: Don't use any two of three output ports (DC1, DC2 and the USB-C) to discharge at the same time.**

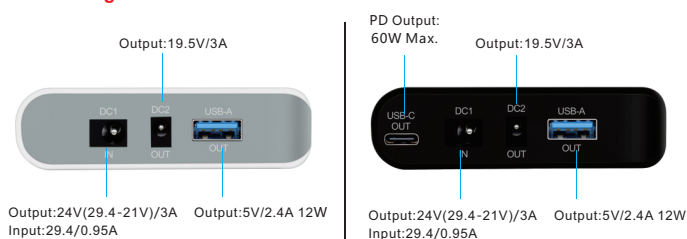

## How to charge the power bank?

**It can only be charged via the DC1 port using the 29.4V AC/DC wall charger.**

The led indicator of AC-DC charger show RED means charging process going.

The led indicator of AC-DC charger show GREEN means charging process completed.

After the unit is fully charged, please remove the AC wall charger in time.

### Note:

1. Please don't use any other charger to charge the power bank via the USB-C port.
2. We recommend that you use only one of the three output ports (DC1, DC2 and USB-C) to discharge at a time.

## Package content:

1x Power Bank

1x DC5521 male to DC4017 male Cable

1x 29.4V/0.95A AC/DC Charger

12x Laptop Charge Connector



29.4V/0.95A  
AC/DC Charger



DC5521 male to  
DC4017 male Cable



Laptop Charge Connector

M Lenovo  
FOR HP 4530 4.5\*3.0 HP  
FORDELL 7406 DELL  
FOR HP 7406 HP  
H 5.0\*10 Samsung  
H 35135 3.5\*1.35 Sharp,DELL  
G 4017 4.\*1.7 Asus,Acer,SONY  
F 4817 4.8\*1.7 HP,In,Compaq,Asus  
E 5517 5.5\*1.7 Acer,SONY  
C 5525 5.5\*2.5 Lite,Fujitsu,Dell,Taiwan  
B 6330 6.3\*3.0 Toshiba  
A 6014 6.0\*1.4 SONY,Fujitsu