Installation Manual

Compatible Model	CVolkswagen CTouareg
Year	2011-2017



. Points to note

- For safety and to ensure the proper use of product, please ask a professional echnician to install. Do not disassemble and install it privately in case of damaging roduct and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. the wiring harnesses crushed by the vehicle interior trim panel buckles and screws
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert erminals into the wiring harness connector first to avoid short circuit between rminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



 Check the function display of instrument panel before installation, whether the tton of the vehicle is working properly, whether the doors and windows work roperly while opening and closing, whether there are scratches on the internal and ternal surfaces of the vehicle; and report to the customers in a timely manner if there

During the process of disassembly and assembly, do not carry metal ornaments and Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid other hard objects with you to prevent damage to the paintwork, seats and interior. But ure to place the removed trim components properly to avoid scratching them.

> All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same





QTY No. Name Picture 1 Strut (2) ECU 1 set Wiring harness 1 set (4) Power latch 1 (5) Added tailgate switch 1 Other parts 6 1 set Omitted (screws, brackets, etc.)



1. Remove the tailgate and trunk trim panels.



2. Remove the driver's side door sill panel and the indicated trim panel.



3. Remove the rear left door sill panel.



. Remove the original gas struts and install the left body



5. Install the right body bracket.



6. Install the left electric strut, L on the left and R on the right (the first letter of the strut code).



7. Install the right electric strut, L on the left and R on the right (the first letter of the strut code).



Thread the strut wiring harnesses into the tailgate through the indicated holes on both sides.



. Route the left and right strut wiring harness as indicated and plug those two holes with hole plugs.



10. Remove the original latch.




11. Cut off all the plastic ribs inside of the latch casing.




12. Connect the plugs of the lock signal harness to the plugs of the power latch.



13. Install the power latch.

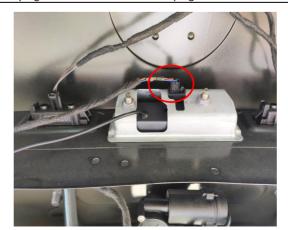


14. Connect the plugs of the lock signal harness to the plugs of original tailgate switch.

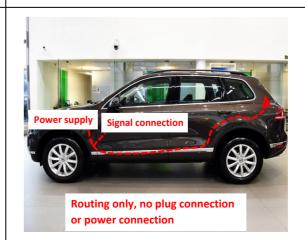

15. Route the power harness as indicated.



16. Route the power harness as indicated (routing only, no terminal insertion or power connection.)

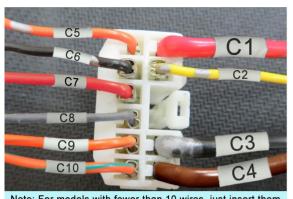


Note: For models with fewer than 10 wires, just insert them according to the corresponding label or color.

17. Insert the power harness terminals into the connector according to the diagram.




18. Ground at the indicated position of the tailgate.

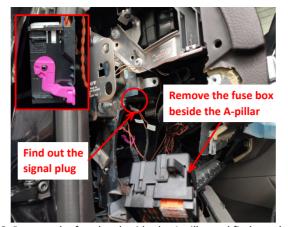


19. Remove the fuse box beside the A-pillar and find out the 20. Connect the power harness to the signal plug and its indicated signal plug.



socket.

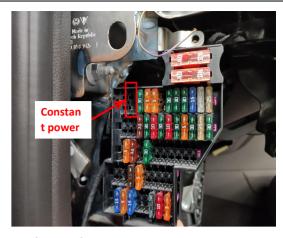

21. The fuse slot for power supply is indicated above.

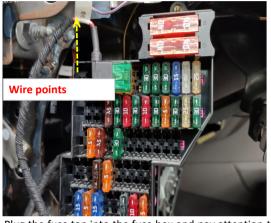

22. Plug the fuse tap into the fuse box and pay attention to the direction of wire.



23. Install the ECU at the indicated position.



24. Insert the left and right strut wiring harnesses (1)(2), lock signal harness (3), and power harness (4) into the ECU in sequence.



once, the system completes initialization, and then test



26. Install the added tailgate switch and reinstall all the trim

1. Press the added tailgate switch button to make the tailgate close automatically; 2. Press the switch button outside the tailgate to open the tailgate and it

- will make a long sound of "beep".
- 3. The system initialization is complete.

5. System initialization method

6. Instructions for the electric tailgate

- L. Methods to open and close the tailgate:
- Press and hold the tailgate button on the remote key;
- Press and hold the tailgate button in the driver's area;
- Press the original tailgate switch button to open; • Press the added tailgate switch button to close.

tailgate will move in reverse. 3. Method to memorize the height:

2. Method to pause the tailgate:

Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep ----". The height memory is complete.

During the operation of the tailgate, press the button with any of the

above methods, and the tailgate will be paused. Press again, and the

Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height with your hand.

4. Meanings of the buzzer sound:

"Beep" once: Receiving an open/close or pause signal, the tailgate will mmediately open/close or pause;

"Beep" twice: The tailgate has been fully opened or closed;

"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on; Long sound of "beep": The height memory is complete.

25. Press the added tailgate switch to close the tailgate each function of the electric tailgate. panels. (remove the original small cover)