

Installation Manual

Compatible Model	CToyota CPrado
Year	2024



8-ETTY-5115-00-00

1. Points to note

• For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.

• Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.

• Because some of the wiring harness terminals (as indicated by the red ellipses below) are not plugged into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as indicated by the blue ellipses below) with the original plugs.




• Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the vehicle internal and exterior surfaces; and report to the customers in a timely manner if there are any problems.

• During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.

• All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

2. Installation tools

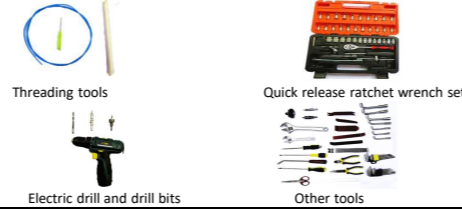

3. Product list

No.	Name	QTY	Picture
①	Strut	2	
②	ECU	1 set	
③	Wiring harness	1 set	
④	Power latch	1	
⑤	Added tailgate switch	1	
⑥	Other parts (screws, brackets, etc.)	1 set	Omitted



1. Remove the indicated front left side trim panels.




2. Remove the indicated front right side door panel and the fuse box trim panel.



3. Remove the indicated rear right side door sill panel and B-pillar trim panel.



4. Remove the indicated trunk trim panels, floor mat and storage box.

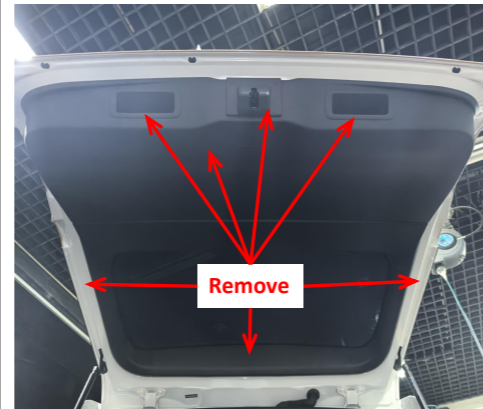

5. Remove the indicated tailgate trim panels.



6. Remove the original gas struts.




7. Replace the left body bracket.



8. Replace the right body bracket.



9. Replace the tailgate brackets on both sides of the tailgate.

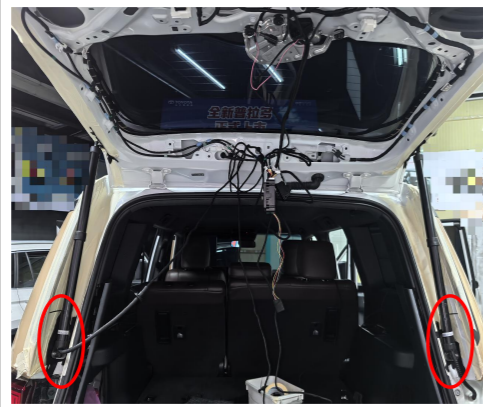

10. Install the electric struts, L on the left and R on the right (the first letter of the strut code). The end with wiring harness should be on the car body.



11. Remove the taillights on both sides.



12. Remove the upper hole plug and thread the strut wiring harness through that hole into the body.



13. Reinstall the taillights and pay attention to the position of the strut wiring harness.




14. Reinstall the trim panels.



15. Route the left and right strut wiring harness to the tailgate as indicated.



16. Route the strut wiring harness along with the original wiring harness.

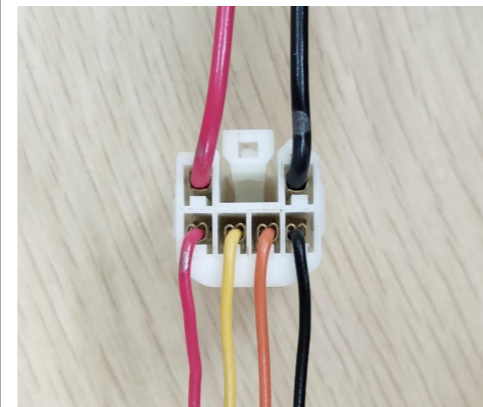

17. Insert the strut wiring harness terminals into the connector according to the diagram. (the connector is inserted on the ECU)



18. Remove the original latch.



19. Connect the plugs of the lock signal harness to the plugs of the power latch.




The power latch has been adjusted to the locked state in the factory. Please unlock it manually.

20. Install the power latch.




21. Connect the plugs of the lock signal harness to the plugs of original tailgate switch.

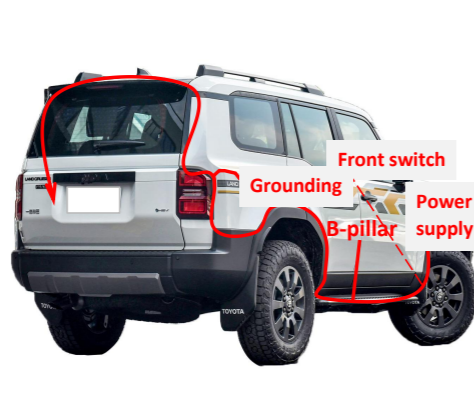

22. Route the power harness to the tailgate as indicated.



23. Ground at the indicated position on the right side of the trunk.

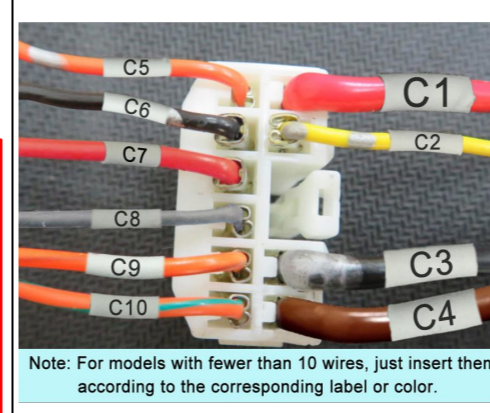


24. Insert the power harness terminals into the connector according to the diagram. (the connector is inserted on the ECU)



25. Thread the plugs of front switch from the passenger side to the driver side.



26. Remove the blank button from the switch panel and install the added front switch.

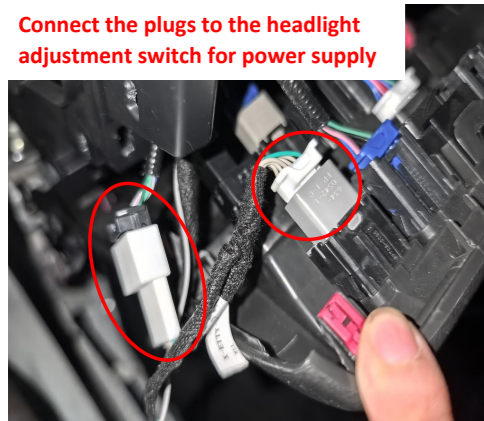


27. Connect the plugs to the headlight adjustment switch for power supply.




28. Install the front switch.




29. Find out the B-pillar plugs at the rear right B-pillar.

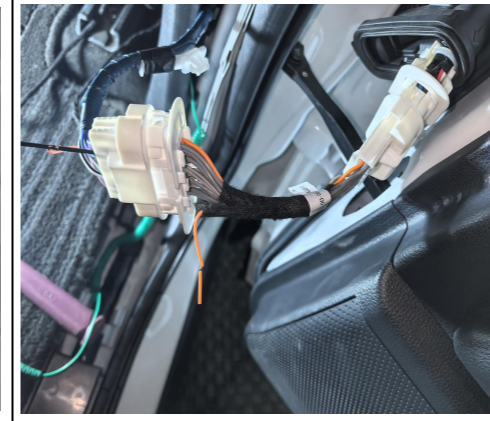


30. Connect to the B-pillar plugs.

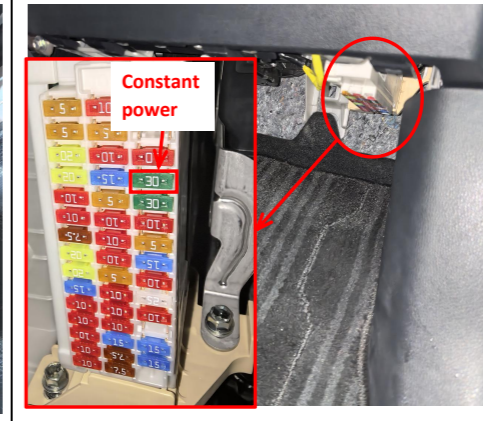

31. The fuse slot for power supply is indicated.

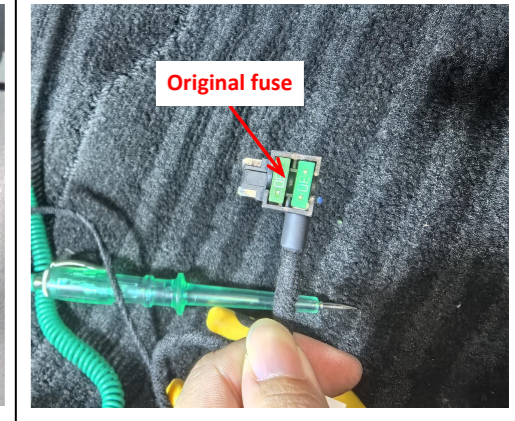

32. Move the fuse from the fuse box to the fuse tap.

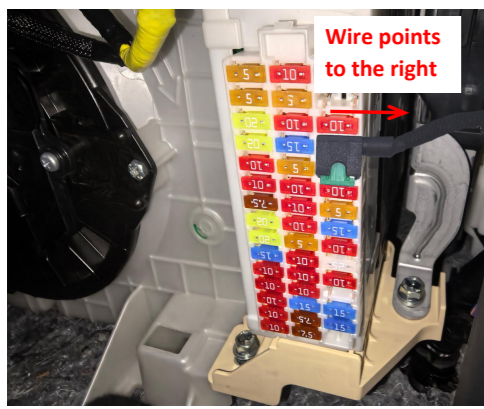

33. Plug the fuse tap into the fuse box and pay attention to the direction.



34. Secure the ECU bracket at the indicated position.



35. Fit the ECU into its bracket and tie the wiring harnesses to the original wiring harnesses.



36. Insert the left and right strut wiring harnesses ①②, lock signal harness ③, and power harness ④ into the ECU in sequence.



37. Press the added tailgate switch to close the tailgate once, the system completes initialization, and then test each function of the electric tailgate.



38. Remove the original tailgate handle, install the added tailgate switch and reinstall all the trim panels.

5. System initialization method

1. Press the added tailgate switch button, and the tailgate will close automatically;
2. Press the tailgate switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".
3. The system initialization is complete.

6. Instructions for the electric tailgate

1. Methods to open and close the tailgate:
 - Press the unlock button on the remote key 3 times;
 - Press the front switch button at the driver's area;
 - Press the original tailgate switch button;
 - Press the added tailgate switch button to close.

2. Method to pause the tailgate:

During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.

3. Instructions for the added tailgate switch

① Closing speed acceleration (5 Settings)

1. Press and hold the switch button until hearing the first short beep sound
2. After releasing the button, you will hear a short beep, indicating that the closing speed acceleration has taken effect.
3. Repeat this step once to increase by one setting.

② Opening speed acceleration (5 Settings)

1. Press and hold the switch button until hearing the second short beep sound
2. After releasing the button, you will hear two short beeps, indicating that the opening speed acceleration has taken effect.
3. Repeat this step once to increase by one setting.

③ Settings of the voice module

1. Press and hold the switch button until hearing the third short beep sound.
2. After releasing the button, you will hear three short beeps, indicating that the voice module has entered configuration mode. (For details, see the voice module operation manual)
- ④ Block the voice module

1. Press and hold the added switch button until hearing the fourth beep sound.

2. After releasing the button, you will hear three four beeps indicating that the voice module has been blocked.

⑤ Height setting

1. Press and hold the switch button until hearing the fifth short beep sound.
2. After releasing the button, you will hear a long beep sound indicating that the height setting has taken effect.

⑥ Switch between quick/slow press of the unlock button on remote key

1. Press and hold the added tailgate switch button until hearing the sixth short beep sound.
2. After releasing the button, you will hear a long beep sound and a short beep sound indicating that the switch between quick press and slow press of the unlock button has taken effect.

⑦ Switch between pressing the unlock button twice/three times

1. Press and hold the switch button until hearing the seventh short beep sound.
2. After releasing the button, you will hear a long beep sound and two short beeps indicating that the switch between pressing the unlock button twice/three times has taken effect.

⑧ Braking force increase (5 Settings)

1. Press and hold the unlock button until hearing the eighth short beep sound.
2. After releasing the button, you will hear a long beep sound and three short beeps indicating that the switch between pressing the unlock button twice/three times has taken effect.

⑨ Restore to factory settings

1. Press and hold the unlock button until hearing the ninth short beep sound.
2. After releasing the button, you will hear a long beep sound and four short beeps indicating that the restoration to the factory setting has taken effect.

4. Meanings of the buzzer sound:

"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;

"Beep" twice: The tailgate has been fully opened or closed;

"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on.

⑩ Braking force increase (5 Settings)

1. Press and hold the unlock button until hearing the eighth short beep sound.
2. After releasing the button, you will hear a long beep sound and three short beeps indicating that the switch between pressing the unlock button twice/three times has taken effect.

⑪ Restore to factory settings

1. Press and hold the unlock button until hearing the ninth short beep sound.
2. After releasing the button, you will hear a long beep sound and four short beeps indicating that the restoration to the factory setting has taken effect.

4. Meanings of the buzzer sound:

"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;

"Beep" twice: The tailgate has been fully opened or closed;

"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on.

⑫ Braking force increase (5 Settings)

1. Press and hold the unlock button until hearing the eighth short beep sound.
2. After releasing the button, you will hear a long beep sound and three short beeps indicating that the switch between pressing the unlock button twice/three times has taken effect.

⑬ Restore to factory settings

1. Press and hold the unlock button until hearing the ninth short beep sound.
2. After releasing the button, you will hear a long beep sound and four short beeps indicating that the restoration to the factory setting has taken effect.

4. Meanings of the buzzer sound:

"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;

"Beep" twice: The tailgate has been fully opened or closed;

"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on.