

Installation Manual

Compatible Model	C-Benz B-Class
Applicable Year	2022-2023



8-ETBZ-5012-00-00


1. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



- Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the internal and external surfaces of the vehicle; and report to the customers in a timely manner if there are any problems.
- During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.
- All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

2. Installation tools

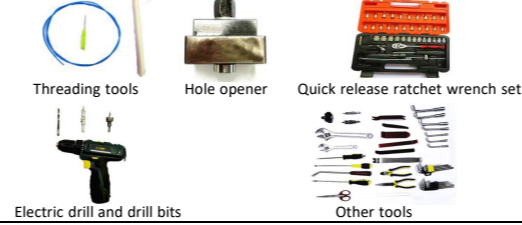

3. Product list

No.	Name	QTY	Picture
①	Strut	2	
②	ECU	1 set	
③	Wiring harness	1 set	
④	Power latch	1	
⑤	Added tailgate switch	1	
⑥	Other parts (screws, brackets, etc.)	1 set	Omitted



1. Remove the front passenger side door sill panel and floor mat.



2. Remove the rear right side door sill panels.




3. Remove the trunk floor mat and the trim panels on the right side of the trunk.




4. Remove the tailgate trim panels.




5. Remove the original gas struts.

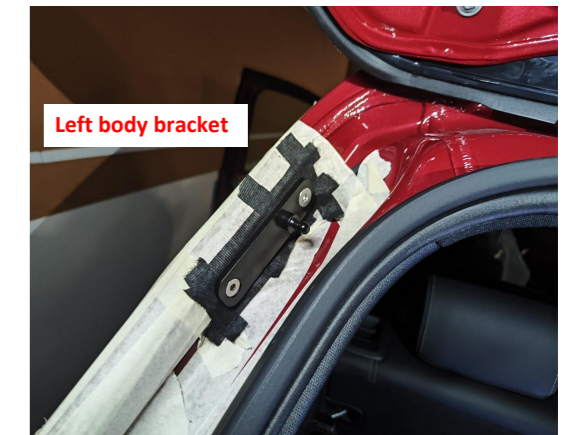

6. Install the left body bracket.

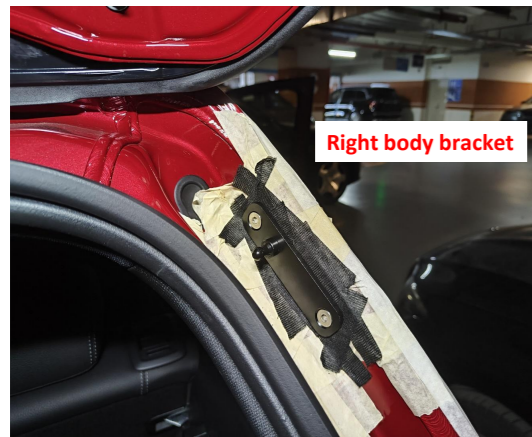

7. Install the right body bracket.

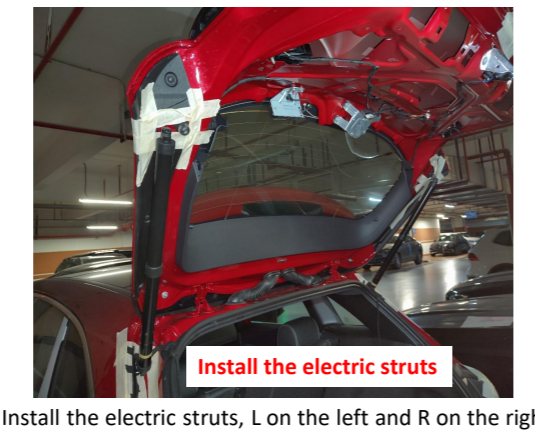

8. Install the electric struts, L on the left and R on the right (the first letter of the strut code), making sure the ends with wiring harnesses are on the car body.




9. Thread the strut wiring harness through the indicated hole.



10. Route the strut wiring harnesses.



11. Plug the holes on both sides of the trunk securely.

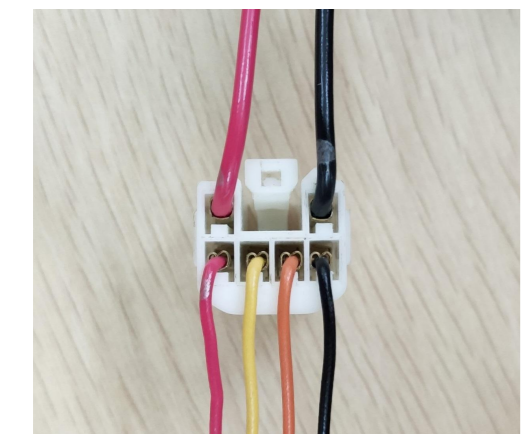

12. Insert the strut wiring harness terminals into the wiring harness connectors.




13. Remove the original latch and connect the lock signal harness with the plugs of the power latch.



14. Install the power latch.



15. Connect the lock signal harness to the plugs of the original tailgate switch.

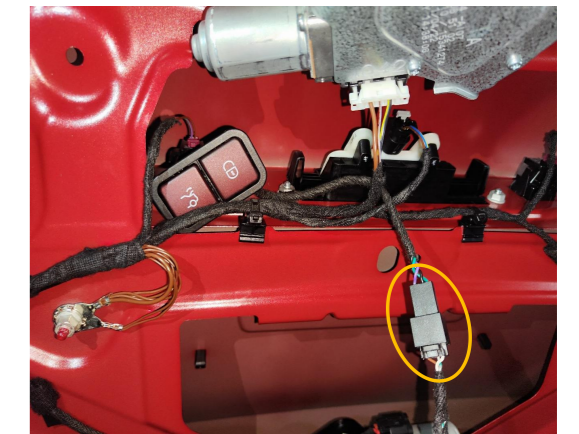

16. Connect the lock signal harness to the added tailgate switch.

Signal connection power supply

Routing only, no plug or power connection

17. Route the power harness (if you need to install the added front switch, route the switch wiring harness in the same way).

Routing only, no plug or power connection

18. Route the power harness to the right side of the tailgate.

Note: For models with fewer than 10 wires, just insert them according to the corresponding label or color.

19. Insert the power harness terminals into the wiring harness connector.

Grounding

20. Ground at the indicated position on the tailgate.

21. Connect the power harness to the indicated signal plugs at the right side of the front passenger seat.

Check if all the plugs are properly connected.

22. Check all the plugs.

Use the original wire connector to connect power

23. Use the original wire connector to connect power from the fuse box under the floor mat of front passenger seat.

24. Remove the indicated cable clip.

Secure with a nut

25. Fix the ECU to the indicated hole.

26. Insert the strut wiring harnesses ①②, lock signal harness ③, and power harness ④ into the ECU in sequence and then mount the ECU onto its bracket.

27. Press the added tailgate switch button to open and close the tailgate once for initializing the system, and then test each function of the electric tailgate.

Remove the cover panel here and fit the added switch in

28. Reinstall all trim panels and install the added tailgate switch (check whether the buttons can bounce back normally. If there is any interference, use a small knife to scrape off the interfering part).

(Optional) Find an appropriate position in the driver's area, drill a $\phi 21\text{mm}$ hole and install the added front switch.

5. System initialization method

1. Press the added tailgate switch button to make the tailgate close automatically;
2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".
3. The system initialization is complete.

6. Instructions for the electric tailgate

1. Methods to open and close the tailgate:

- Press the unlock button on the remote key 3 times;
- Press the unlock button at the driver's area 3 times;
- Press the original tailgate switch button;
- Press the added tailgate switch button;
- Press the added front switch button: press and hold for 4s to open and press once to close.

2. Method to pause the tailgate:
During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.

3. Method to memorize the height:
Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep ----". The height memory is complete.
Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height with your hand.

4. Meanings of the buzzer sound:
"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;
"Beep" twice: The tailgate has been fully opened or closed;
"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on;
Long sound of "beep": The height memory is complete.