

according to the corresponding label or color.


17. Insert the power harness terminals into the wiring harness connector as shown above.



18. Ground at the indicated position on the left side of the trunk.



19. Connect the power harness to the B-pillar plugs at rear left side B-pillar.

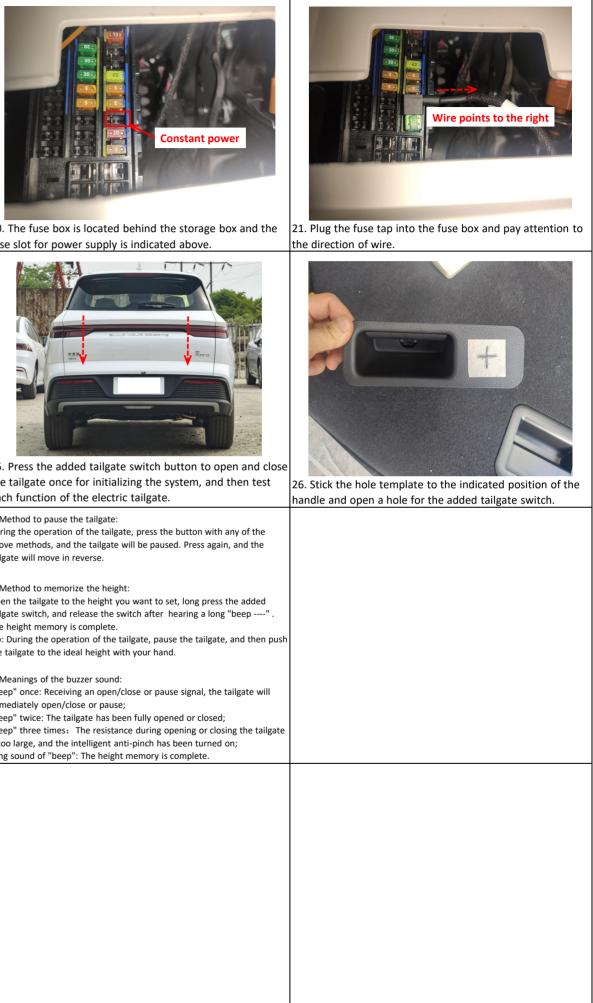

fuse slot for power supply is indicated above.




The screw can be freely adjusted on the bracket. Find an appropriate location for easy installation.

22. Place a bolt on the ECU bracket and then mount the ECU 23. Place the ECU at the indicated position and secure it onto its bracket. with a nut.



27. Fit the added tailgate switch in.

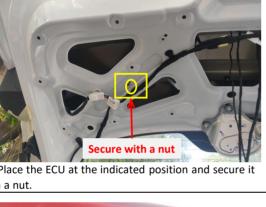



28. Reinstall all trim panels and install the added tailgate switch.




24. Insert the strut wiring harnesses (1)(2), lock signal harness (3), and power harness (4) into the ECU in sequence.

5. System initialization method

. Press the added tailgate switch button to make the tailgate close automatically; 2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep" 3. The system initialization is complete.

. Instructions for the electric tailgate

. Methods to open and close the tailgate: Press the tailgate button on the remote key 2 times; Press the unlock button at the driver's area 3 times; Press the original tailgate switch button; Press the added tailgate switch button.

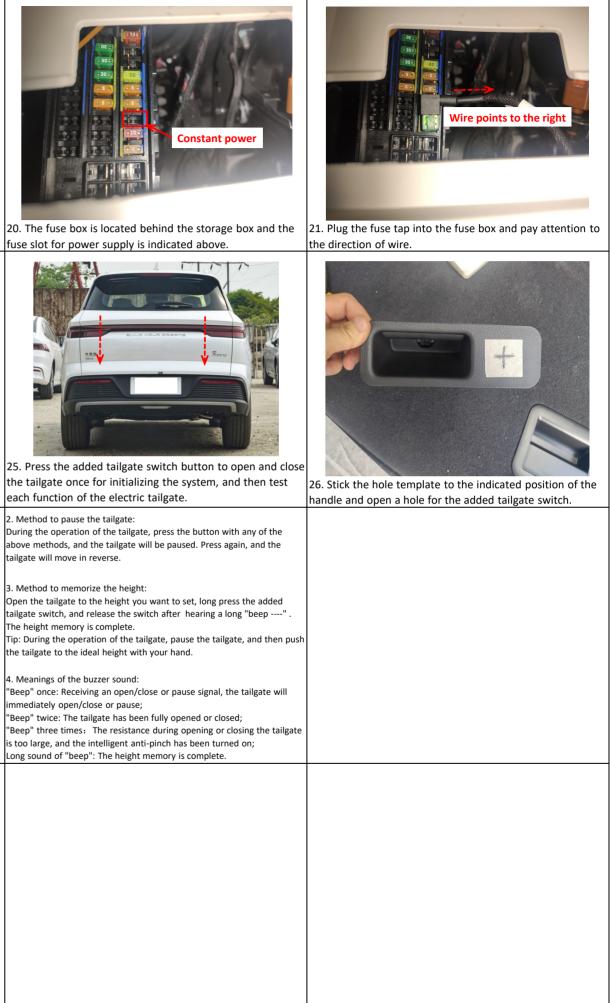

each function of the electric tailgate.

2. Method to pause the tailgate: tailgate will move in reverse.

3. Method to memorize the height: The height memory is complete. the tailgate to the ideal height with your hand. 4. Meanings of the buzzer sound:

"Beep" twice: The tailgate has been fully opened or closed; is too large, and the intelligent anti-pinch has been turned on; Long sound of "beep": The height memory is complete.