## 1. Points to note 3. Product list Check the function display of instrument panel before installation, whether the For safety and to ensure the proper use of product, please ask a professional QTY tton of the vehicle is working properly, whether the doors and windows work No. Name Picture Installation Manual echnician to install. Do not disassemble and install it privately in case of damaging operly while opening and closing, whether there are scratches on the internal and ternal surfaces of the vehicle; and report to the customers in a timely manner if there oduct and installation accidents. 1 2 Strut are any problems Please arrange each wiring harness according to the wiring method in this manual, be Compatible Model CHaval CJolion sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. • During the process of disassembly and assembly, do not carry metal ornaments and 2 ECU 1 set Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid other hard objects with you to prevent damage to the paintwork, seats and interior. Be 2021-2022 Year the wiring harnesses crushed by the vehicle interior trim panel buckles and screws sure to place the removed trim components properly to avoid scratching them. during the installation process. 3 1 set Wiring harness All the pictures in this manual are for reference only, vehicle models with different Because some of the wiring harness terminals (as shown in the red ellipses below) are configurations may have different pictures, but the installation methods are the same not inserted into the wiring harness connectors during manufacture, please insert 4 1 2. Installation tool Power latch minals into the wiring harness connector first to avoid short circuit between ninals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs. 5 Added tailgate switch 1 hreading to ratchet wrench set Other parts 6 1 set Omitted (screws, brackets, etc.) lectric drill and 2. Remove the rear left side door sill panel and B-pillar trim 4. Take out the floor mat and foam storage box from the 3. Remove the tailgate trim panel. 5. Remove the original gas struts. panel. trunk. Remove the left side trim panel and door sill panel. Replace the right body bracket Replace the tailgate ball studs 9. Install the electric struts, L on the left and R on the right (the first letter of the strut code), making sure the ends with 10. Thread the strut wiring harnesses through holes into the 11. Insert the strut wiring harness terminals into the wiring 8. Replace the tailgate ball studs on both sides of the 7. Replace the right body bracket. wiring harnesses are on the vehicle body. tailgate and route them as shown above. tailgate.


12. Remove the original latch and install the power latch.



13. . Connect the plugs of the lock signal harness to the plugs of the power latch.

AND A COMPANY AND A COMPANY 14. Connect the plugs of the lock signal harness to the plugs 15. Connect the plugs of the lock signal harness to the of the original tailgate switch.

added tailgate switch.

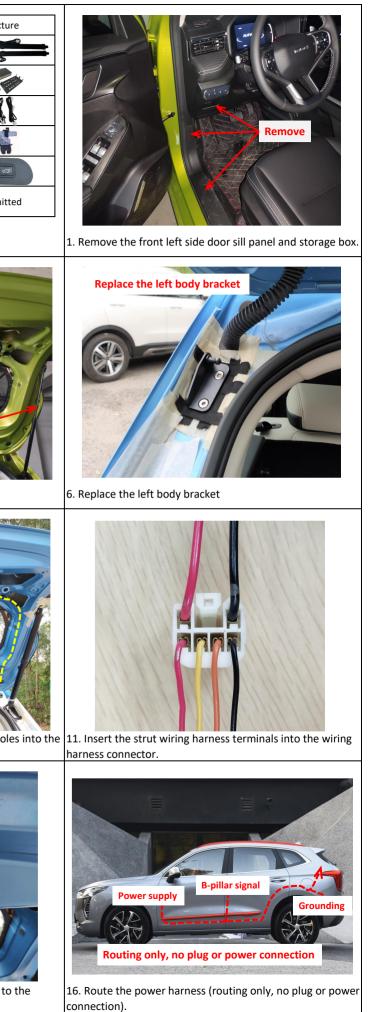




17. Thread power harness to the tailgate (wiring only, no plug or power connection).



22. The fuse box is located at the driver's area and the fuse slot for power supply is indicated above.



27. Reinstall all trim panels and install the added tailgate switch (remove the original small cover panel).

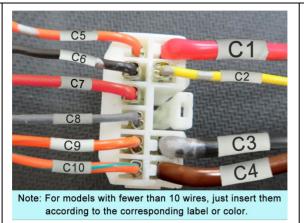

18. Insert the power harness terminals into the wiring harness connector as shown above.




23. Move the fuse from the fuse box to the fuse tap and then plug the fuse tap into the fuse box. Pay attention to the direction.

<ol> <li>System initialization method</li> <li>Press the added tailgate switch button to make the tailgate close automatically;</li> <li>Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".</li> </ol>	2. Method to pause the tailgate: During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.
<ol> <li>The system initialization is complete.</li> <li>Instructions for the electric tailgate</li> <li>Methods to open and close the tailgate:</li> <li>Process the unlock buttee on the samete key 2 times.</li> </ol>	<ol> <li>Method to memorize the height:</li> <li>Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep".</li> <li>The height memory is complete.</li> <li>Tip: During the operation of the tailgate, pause the tailgate, and then put the tailgate to the ideal height with your hand.</li> </ol>
<ul> <li>Press the unlock button on the remote key 3 times;</li> <li>Press the unlock button at the driver's area 3 times;</li> <li>Press the original tailgate switch button;</li> <li>Press the added tailgate switch button.</li> </ul>	<ul> <li>4. Meanings of the buzzer sound:</li> <li>"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;</li> <li>"Beep" twice: The tailgate has been fully opened or closed;</li> <li>"Provent these times. The tailgate and during approximate a closing the tailgate will approximate a second seco</li></ul>




19. Ground at the left side of the trunk.

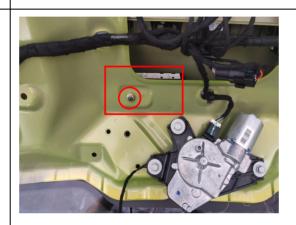


24. Secure the ECU at the indicated position.

vill "Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on; Long sound of "beep": The height memory is complete.

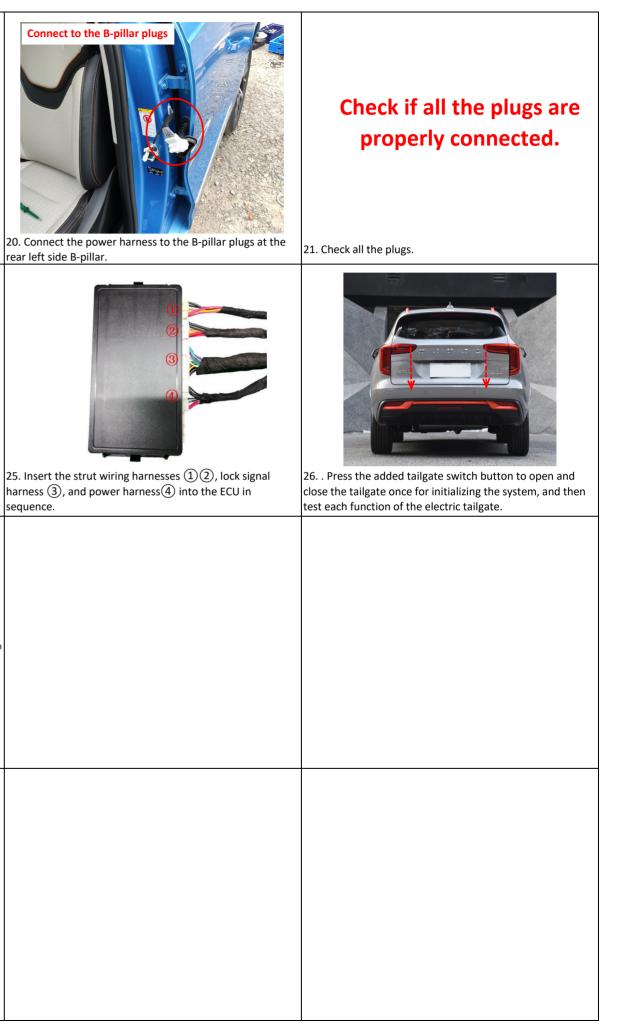

rear left side B-pillar.

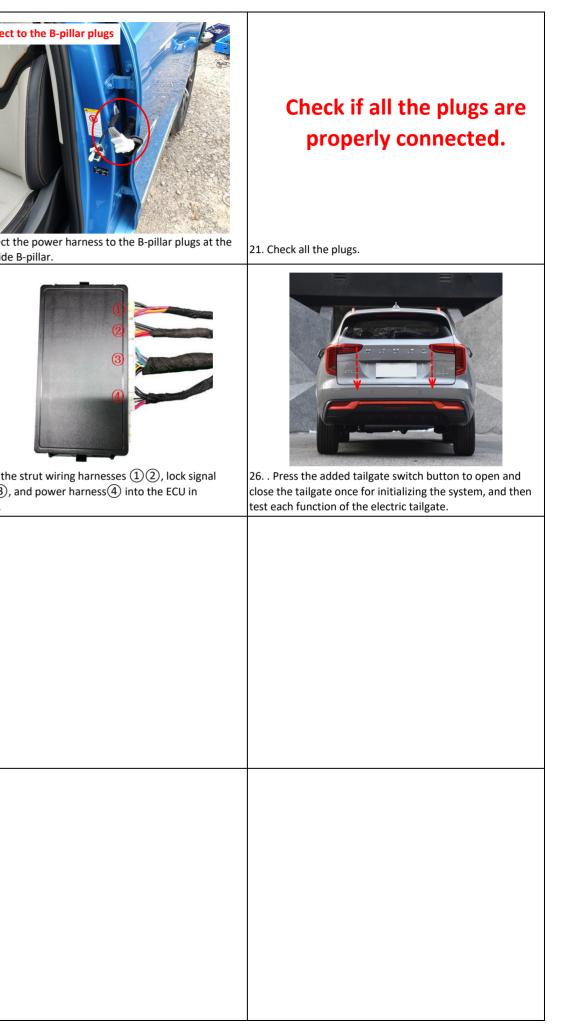

harness ③, and power harness④ into the ECU in sequence.