Installation Manual

Compatible Model	CNissan CX-Trail
Year	2014-2021



. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging roduct and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. he wiring harnesses crushed by the vehicle interior trim panel buckles and screws
- Because some of the wiring harness terminals (as shown in the red ellipses below) ar not inserted into the wiring harness connectors during manufacture, please insert erminals into the wiring harness connector first to avoid short circuit between rminals after the wiring harnesses have been arranged, then connect other plugs of he wiring harnesses (as shown in the blue ellipses below) with the original plugs.



 Check the function display of instrument panel before installation, whether the atton of the vehicle is working properly, whether the doors and windows work roperly while opening and closing, whether there are scratches on the internal and ternal surfaces of the vehicle; and report to the customers in a timely manner if there

 During the process of disassembly and assembly, do not carry metal ornaments and Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid other hard objects with you to prevent damage to the paintwork, seats and interior. But ure to place the removed trim components properly to avoid scratching them.

> All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.





QTY No. Name Picture 1 Strut 2 ECU 1 set Wiring harness 1 set 4 Power latch 1 (5) Added tailgate switch 1 Other parts 1 set Omitted (screws, brackets, etc.)



1. Remove the front left triangular trim panel and door sill panels.



2. Remove the rear left door sill panel and B-pillar trim



3. Take out the trunk floor mat and remove the screws in the circles from the left side trim panel.



4. Remove the trim panel on the left side of the trunk to allow wiring harnesses to pass through.




5. Remove the tailgate trim panels.



6. Remove the original latch.



7. Drill a hole at the indicated bracket behind the lock position for installing the ECU (just need to drill through the bracket).

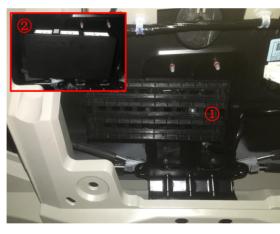

8. Install the ECU bracket and fit the ECU into its bracket.



9. Install our power latch.



of the power latch.




10. Connect the plugs of the lock signal harness to the plugs | 11. Connect the plugs of the lock signal harness to the plugs of the original tailgate switch.



12. Remove the original cover panel and install the added tailgate switch.




13. Remove the original gas struts.

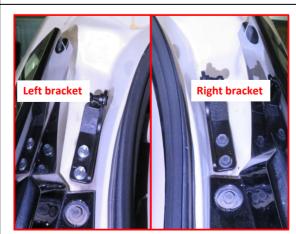

14. Replace the left and right body brackets.



15. Replace the left and right sides ball studs and shims.

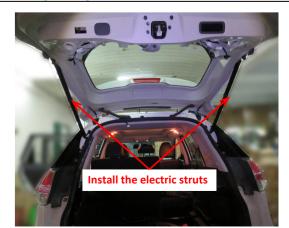

16. Install the electric struts, L on the left, R on the right (the first letter of the strut code).




bit to allow the strut wiring harness to pass through.



18. Pass the strut wiring harness through the shown 17. Drill a hole at the indicated position using a \$\phi 21mm drill position and the drilled hole into the tailgate and then plug the hole with hole plug.



19. Route the power harness to the tailgate (do not connect the power before inserting terminals into the wiring harness 20. Insert the power harness terminals into the wiring connector).

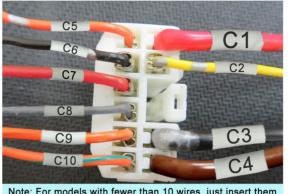


Note: For models with fewer than 10 wires, just insert them according to the corresponding label or color.






22. Ground at the left side of the trunk.

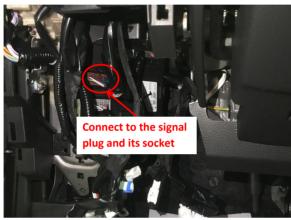

23. Connect the plugs of power harness with the indicated signal plug and its socket.



24. Install the added front switch and connect the plugs behind the panel for backlight.

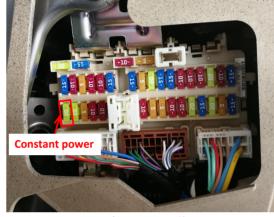

25. The constant power fuse position (first in the second



Front switch Signal connection

26. Move the fuse from from the fuse box to the fuse tap and then plug the fuse tap into the fuse box. Pay attention to the direction.



27. Insert the strut wiring harnesses (1)(2), lock signal harness 3, and power harness 4 into the ECU in sequence and then mount the ECU onto its bracket.



28. Initialize the system once and test each function of the electric tailgate.



29. Reinstall all trim panels.

5. System initialization method

harness connector.

- 1. Press the added tailgate switch button to make the tailgate close automatically;
- 2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".
- 3. The system initialization is complete.

6. Instructions for the electric tailgate

- 1. Methods to open and close the tailgate:
- Press the unlock button on the remote key 3 times;
- Press the unlock button at the driver's area 3 times;
- Press the original tailgate switch button;
- Press the added tailgate switch button;
- Press the added fornt switch button.

2. Method to pause the tailgate:

During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.

3. Method to memorize the height:

Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep ----". The height memory is complete.

Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height with your hand.

4. Meanings of the buzzer sound:

"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;

"Beep" twice: The tailgate has been fully opened or closed;

"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on; Long sound of "beep": The height memory is complete.