

Installation Manual

Compatible Model	CBYD CDolphin
Year	2021-2023



8-ETBY-5003-01-00


1. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



- Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the internal and external surfaces of the vehicle; and report to the customers in a timely manner if there are any problems.
- During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.
- All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

2. Installation tools

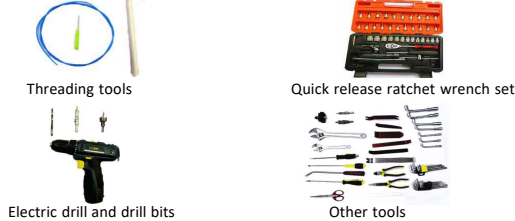

3. Product list

No.	Name	QTY	Picture
①	Strut	2	
②	ECU	1 set	
③	Wiring harness	1 set	
④	Power latch	1	
⑤	Added tailgate switch	1	
⑥	Other parts (screws, brackets, etc.)	1 set	Omitted




1. Remove the front left side trim panel and door sill panel.



2. Remove the rear left side door sill panel and B-pillar trim panel.



3. Remove the tailgate trim panel.

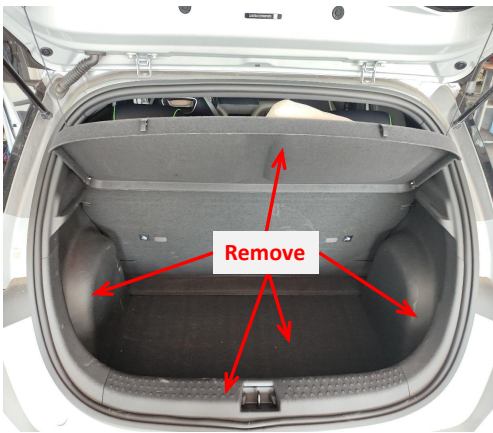

4. Remove the trunk trim panels, floor mat and storage box.



5. Remove the original gas struts.



6. Replace the left tailgate bracket with provided one.




7. Replace the right tailgate bracket with provided one.




8. Replace the left body ball stud with provided one.



9. Replace the right body ball stud with provided one.

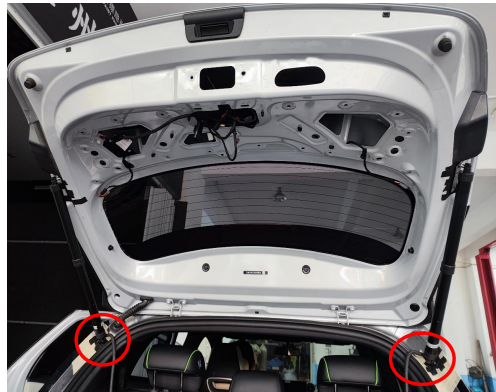


10. Install the electric struts, L on the left and R on the right (the first letter of the strut code), making sure the ends with wiring harnesses are on the vehicle body.

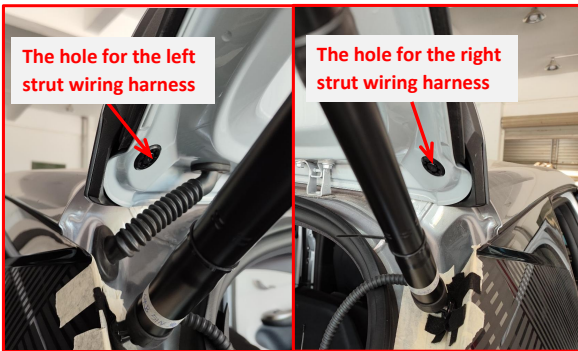


11. Remove the indicated rubber plugs to allow the strut wiring harnesses to pass through.



12. Route the strut wiring harnesses to the tailgate.

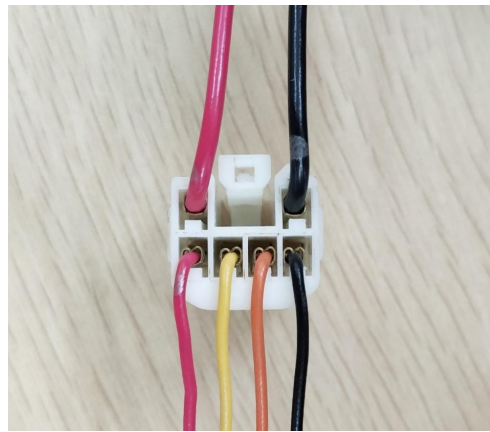

13. Insert the strut wiring harness terminals into the wiring harness connector.

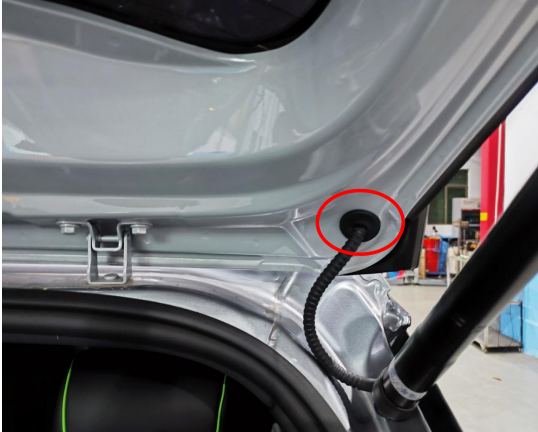

14. Leave a certain length of the rubber tube outside and plug the holes on both sides securely with hole plugs.




15. Remove the original latch.




16. Connect the the plugs of lock signal harness to our power latch.



17. Connect the plugs of lock signal harness to the original tailgate switch behind the power latch.

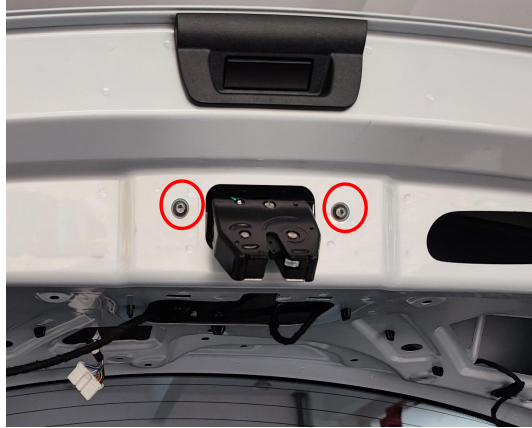

18. Install the power latch and fasten it with provided screws.

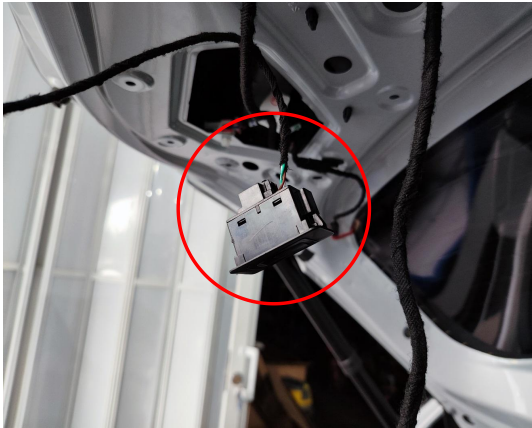


19. Connect the lock signal harness to the added tailgate switch.




20. Route the power harness (wiring only, no plug or power connection).




21. Route the power harness to the tailgate.

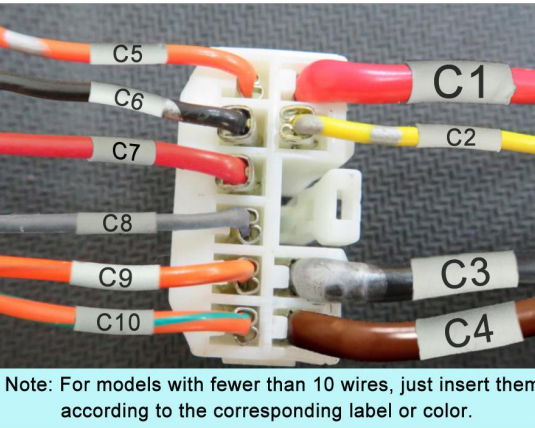

22. Insert the power harness terminals into the wiring harness connector as shown above.

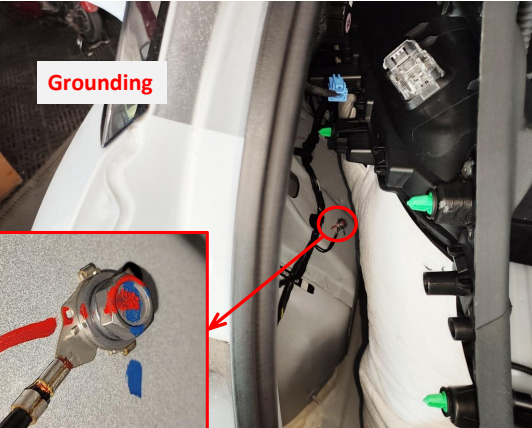


23. Ground at the left side of the trunk.

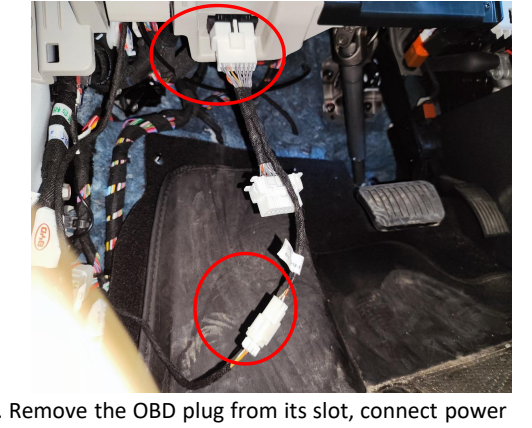


24. Remove the OBD plug from its slot, connect power harness to it, hide the pair of plugs behind the panel and place our OBD plug in the slot of original OBD plug.




24-1. If there is no OBD plug at the driver's area, connect to the B-pillar signal plugs.

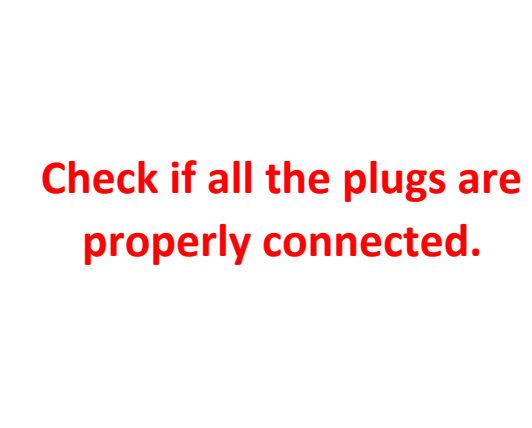


25. Check all the plugs.

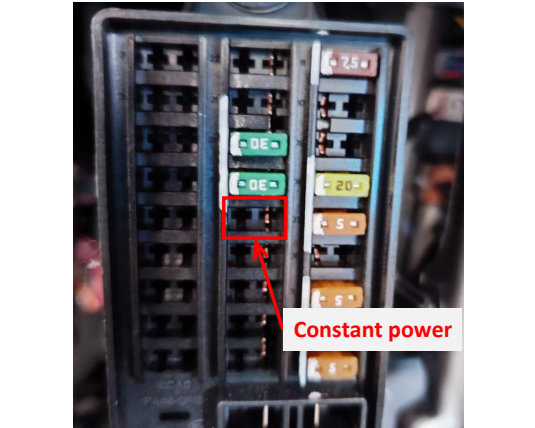

26. The fuse box is located at the driver's area and the fuse slot for power supply is indicated above.

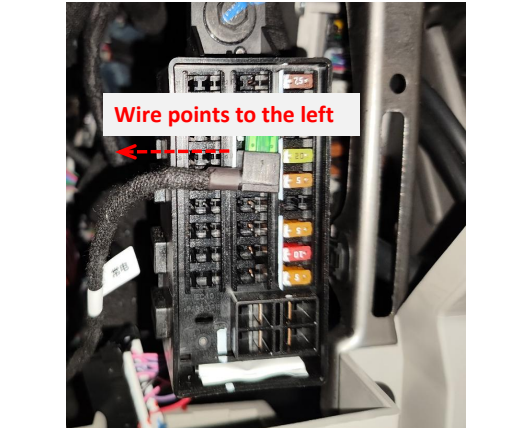


27. Plug the fuse tap into the fuse box and pay attention to the direction.

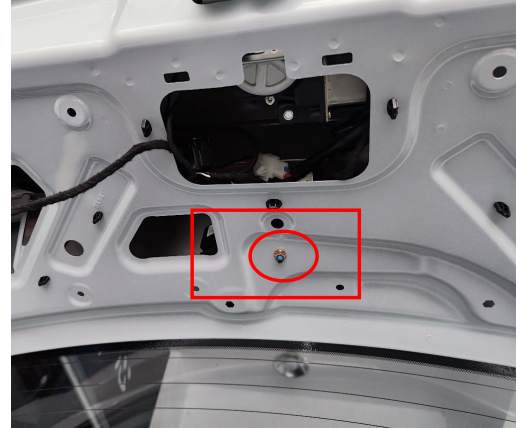

28. Place the ECU at the indicated position and secure it with a nut.



29. Insert the strut wiring harnesses ①②, lock signal harness ③, and power harness ④ into the ECU in sequence.

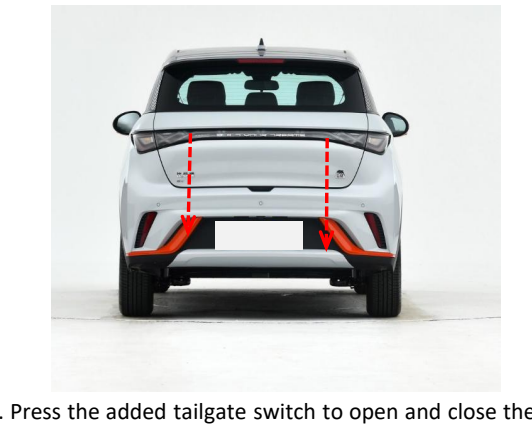

30. Press the added tailgate switch to open and close the tailgate once for initializing the system, and then test the functions of the electric tailgate.



31. Reinstall all trim panels and install the added tailgate switch.



(Optional) Drill a hole with a $\phi 21\text{mm}$ drill bit at an appropriate position and install the added front switch.

5. System initialization method

1. Press the added tailgate switch button to make the tailgate close automatically;
2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".

6. Instructions for the electric tailgate

1. Methods to open and close the tailgate:

- Press the tailgate button on the remote key 2 times (It can also be used when car has started);
- Press the added front switch button: press and hold to open, press once to close;
- Press the original tailgate switch button;
- Press the added tailgate switch button.

2. Method to pause the tailgate:

During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.

3. Instructions for the added tailgate switch

- ① Closing speed acceleration (5 Settings)

1. Press and hold the switch button until hearing the first short beep sound.
2. After releasing the button, you will hear a short beep, indicating that the closing speed acceleration has taken effect.

② Opening speed acceleration (5 Settings)

1. Press and hold the switch button until hearing the second short beep sound
2. After releasing the button, you will hear two short beeps, indicating that the opening speed acceleration has taken effect.

③ Settings of the voice module (see the voice module operation manual)

- ④ Block the voice module (see the voice module operation manual)

⑤ Height setting

1. Press and hold the switch button until hearing the fifth short beep sound.
2. After releasing the button, you will hear a long beep sound indicating that the height setting has taken effect.

⑥ Switch between quick/slow press of the unlock button on remote key

1. Press and hold the switch button until hearing the sixth short beep sound.
2. After releasing the button, you will hear a long beep and a short beep indicating that the switch between quick and slow press of the unlock button has taken effect.

⑦ Switch between pressing the unlock button twice/three times

1. Press and hold the switch button until hearing the seventh short beep sound.
2. After releasing the button, you will hear a long beep sound and two short beeps indicating that the switch between pressing the unlock button twice/three times has taken effect.

⑧ Braking force increase (five settings)

1. Press and hold the switch button until hearing the eighth short beep sound.
2. After releasing the button, you will hear a long beep sound and three short beeps indicating that the switch between pressing the unlock button twice/three times has taken effect.

⑨ Restore to factory settings

1. Press and hold the switch button until hearing the ninth short beep sound.
2. After releasing the button, you will hear a long beep sound and four short beeps indicating that the restoration to the factory setting has taken effect.

4. Meanings of the buzzer sound:

"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;
"Beep" twice: The tailgate has been fully opened or closed;
"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on.