

Installation Manual

Compatible Model	CHonda CXR-V/CVezeL
Year	2015-2022




1. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



- Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the internal and external surfaces of the vehicle; and report to the customers in a timely manner if there are any problems.
- During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.
- All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

2. Installation tools

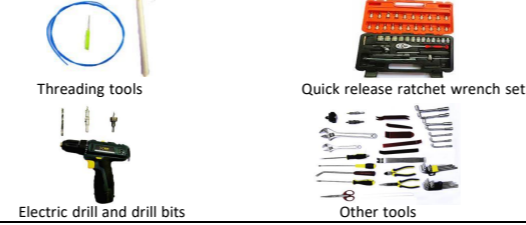

3. Product list

No.	Name	QTY	Picture
①	Strut	2	
②	ECU	1 set	
③	Wiring harness	1 set	
④	Power latch	1	
⑤	Added tailgate switch	1	
⑥	Other parts (screws, brackets, etc.)	1 set	Omitted




1. Remove the front left side trim panel and door sill panel.



2. Remove the B-pillar trim panel and rear left door sill panel.



3. Remove the tailgate trim panels.

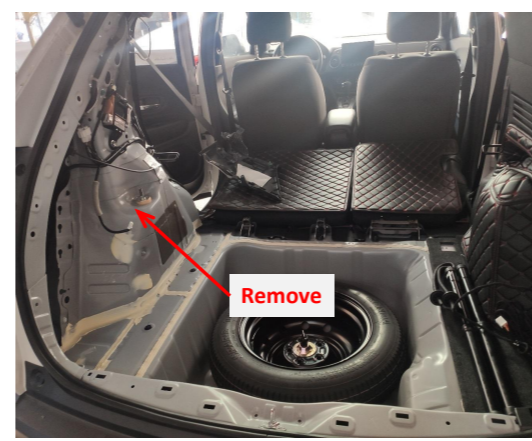

4. Take out the trunk floor mat and foam storage box. Remove the trim panel on the left side of the trunk.



5. Remove the original gas struts.

Replace the ball studs on the tailgate and car body ; These two kinds of ball studs are different; Please pay attention to distinguish them by their packaging bags when installing.

6. Replace the ball studs on the tailgate and the car body.



7. Replace the left and right body ball studs.



8. Replace the left and right tailgate ball studs.




9. Install the electric struts, L on the left R on the right (the first letter of the strut code), making sure the the ends with wiring harnesses are on the tailgate.



10. Drill a hole at the indicated position with a $\phi 21\text{mm}$ drill bit to allow the strut wiring harness to pass through. Both sides are the same.



11. Thread the strut wiring harnesses through the holes and then plug the holes with hole plugs.

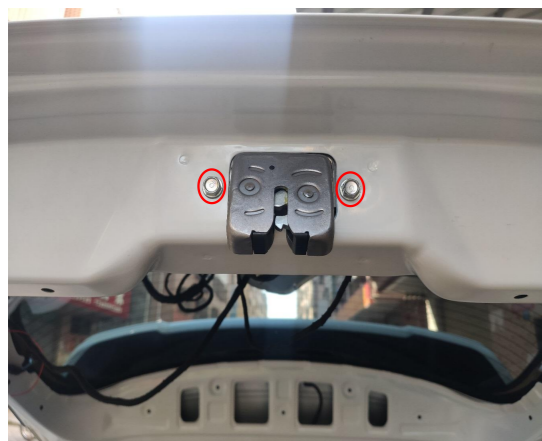

12. Remove the original latch and install our power latch.




13. Connect the plugs of the lock signal harness to the plugs of the original tailgate switch.



14. Connect the plugs of the lock signal harness to the plugs of the power latch.



15. Remove the original tailgate handle and install the added tailgate switch.

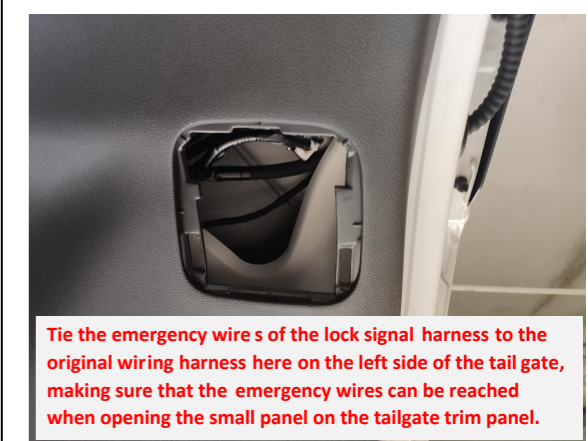


Tie the emergency wires of the lock signal harness to the original wiring harness here on the left side of the tail gate, making sure that the emergency wires can be reached when opening the small panel on the tailgate trim panel.

16. Route the emergency wires of the lock signal harness.




17. Route the power harness to the tailgate.

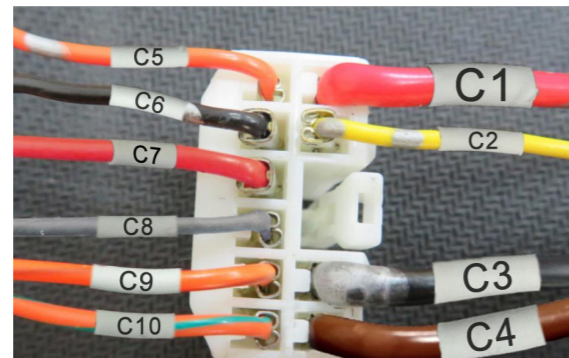


Note: For models with fewer than 10 wires, just insert them according to the corresponding label or color.

18. Insert the power harness terminals into the wiring harness connector.

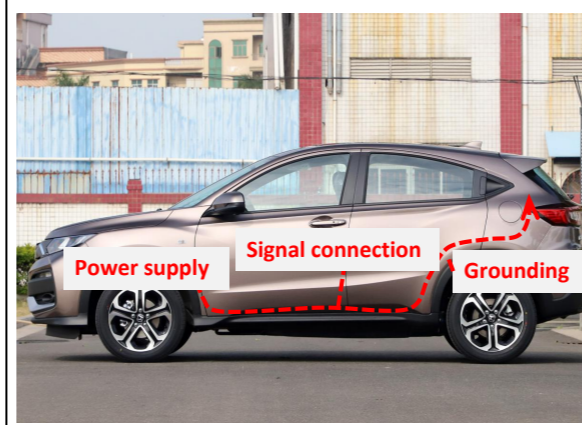


19. Route the power harness.

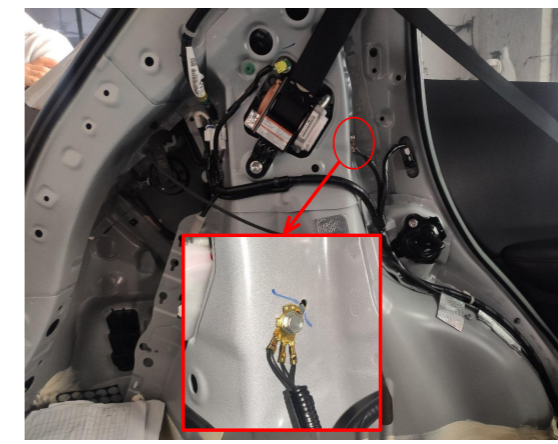

20. Ground at the left side of the trunk.




21. Connect the plugs of the power harness to the indicated plugs on the rear left side B-pillar.

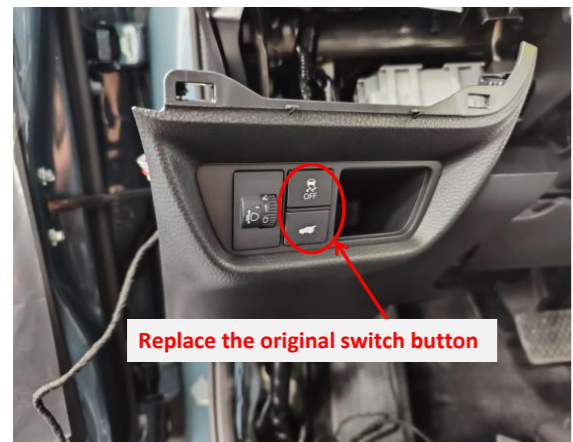


Replace the original switch button

22. Replace the original button with the added front switch button.

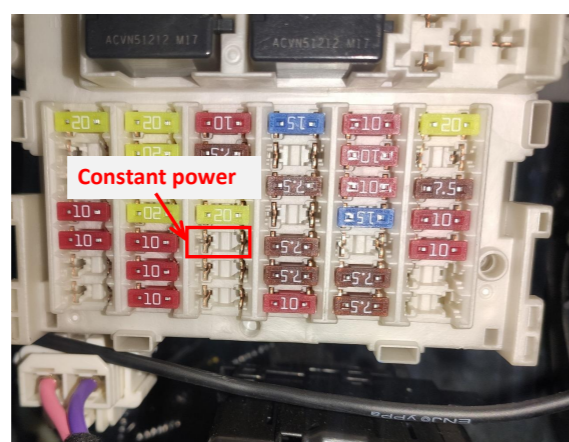


Constant power

23. The fuse slot for power supply is indicated above.

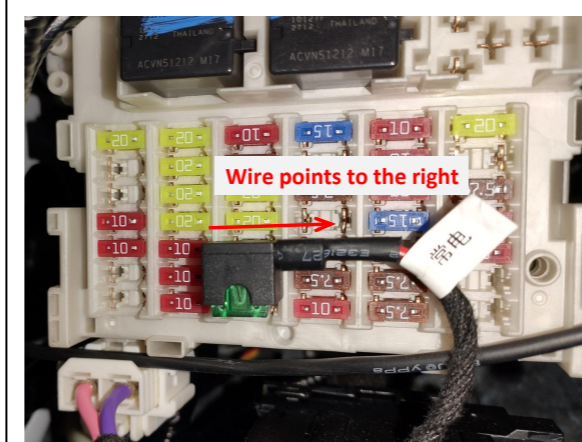

Wire points to the right

24. Plug the fuse tap into the fuse box with wire pointing to the right.

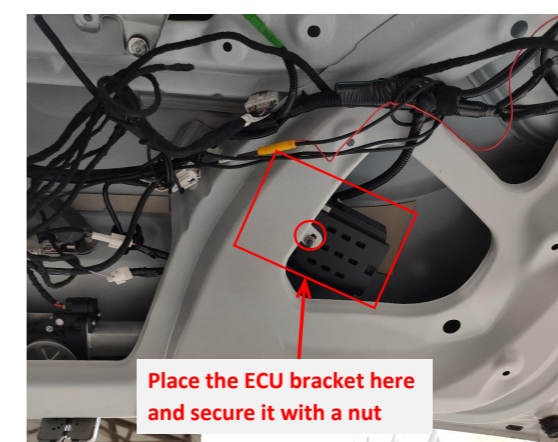

Place the ECU bracket here and secure it with a nut

25. Place the ECU bracket at the indicated position and secure it with a nut.



26. Insert the strut wiring harnesses ①②, lock signal harness ③, and power harness ④ into the ECU in sequence and mount the ECU onto its bracket.



27. Press the added tailgate switch button to close the tailgate once for initializing the system and then test each function of the electric tailgate.



28. Reinstall all trim panels and and install the added tailgate switch.

5. System initialization method

1. Press the added tailgate switch button to make the tailgate close automatically;
2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".
3. The system initialization is complete.

6. Instructions for the electric tailgate

1. Methods to open and close the tailgate:
 - Press the unlock button on the remote key 3 times;
 - Press the unlock button at the driver's area 3 times;
 - Press the original tailgate switch button;
 - Press the added tailgate switch button;
 - Press the added front switch button: press and hold to open and press once to close.

2. Method to pause the tailgate:

During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.

3. Method to memorize the height:

Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep ----". The height memory is complete.
Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height with your hand.

4. Meanings of the buzzer sound:

"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;
"Beep" twice: The tailgate has been fully opened or closed;
"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on;
Long sound of "beep": The height memory is complete.