

Installation Manual

Compatible Model	CGeely CAZkarra
Year	2019-2022



1. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



- Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the internal and external surfaces of the vehicle; and report to the customers in a timely manner if there are any problems.

- During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.

- All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

2. Installation tools



3. Product list

No.	Name	QTY	P
①	Strut		
②	ECU	1 set	
③	Wiring harness	1 set	
④	Latch and actuator		
⑤	Added tailgate switch		
⑥	Other parts (screws, brackets, etc.)	1 set	On



1. Remove the front left side trim panel, door sill panel ; storage box.



2. Remove the rear left side door sill panel and B-pillar trim panel.



3. Remove the trim panel on the left side of the trunk



4. Remove the tailgate trim panels.



5. Remove the original latch.



6. Connect the plugs of the lock signal harness to the pc latch.



7. Connect the plugs of the lock signal harness to the original tailgate switch button.



8. Connect the lock signal harness to the plugs of the lock actuator and the added switch.



9. Remove the original gas struts.



10. Replace the left body bracket.



11. Replace the right body bracket.



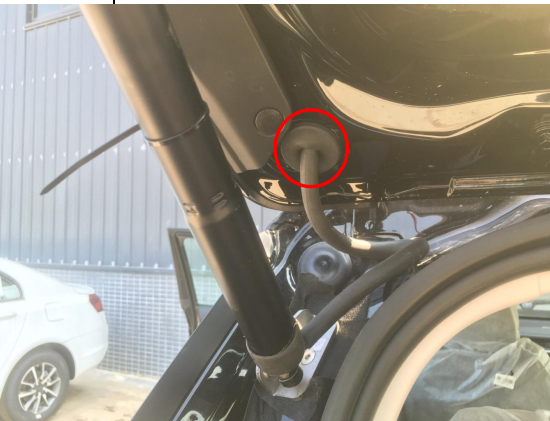
12. Replace the left and right ball studs.



13. Install the electric struts, L on the left and R on the right (the first letter of the strut code).



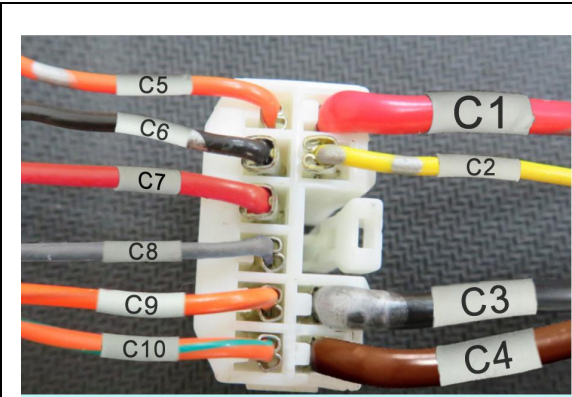
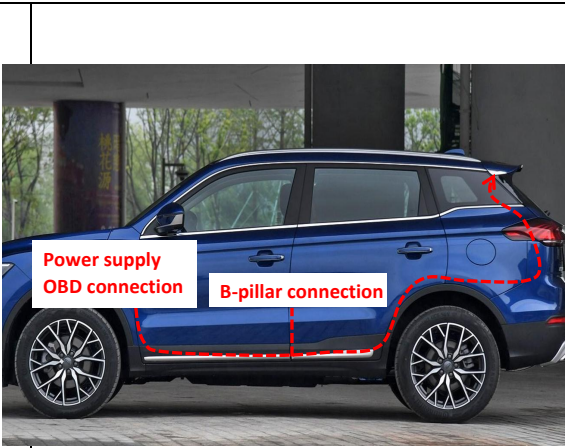

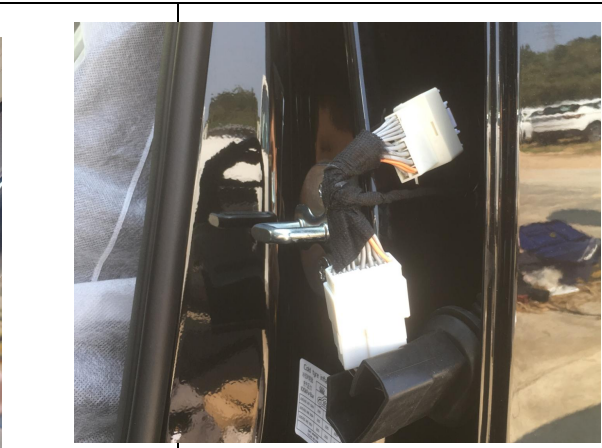


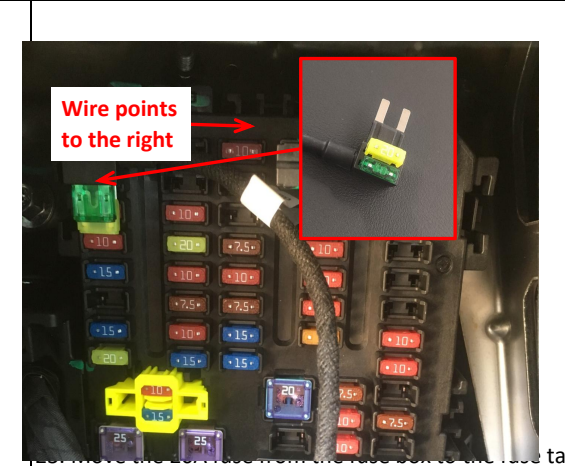

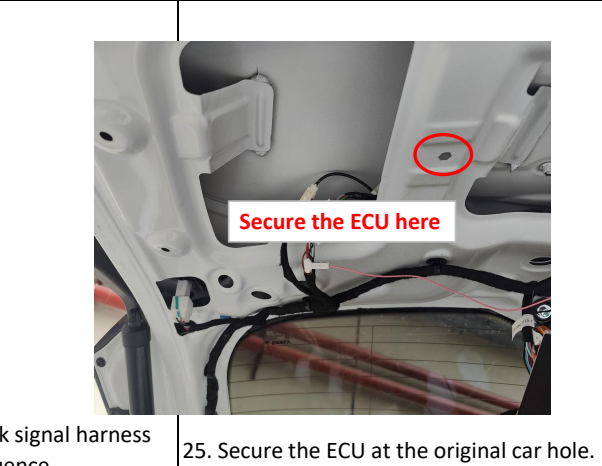
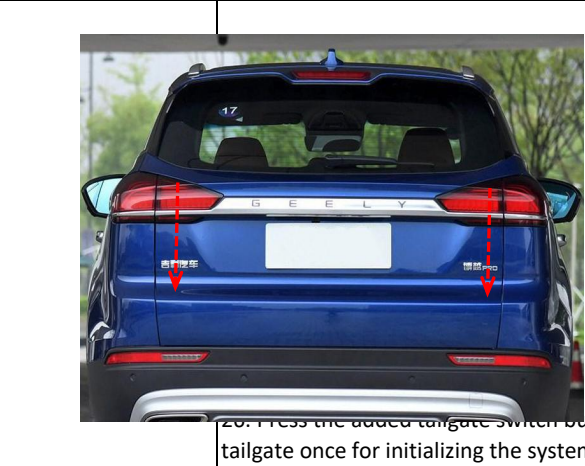

14. Thread the strut wiring harness into the tailgate through the hole on the tailgate.



15. Fit the grommets on both sides securely.



16. Route the power harness to the tailgate (no plug cord before inserting terminals into the connector).

<div data-bbox="35 113 605 531"><p>Note: For models with fewer than 10 wires, just insert them according to the corresponding label or color.</p></div> <div data-bbox="35 531 605 583"><p>17. Insert the power harness terminals into the wiring harness connector as shown above.</p></div>	<div data-bbox="605 113 1133 531"><p>Power supply OBD connection</p><p>B-pillar connection</p></div> <div data-bbox="605 531 1133 583"><p>18. Route the power harness as indicated.</p></div>	<div data-bbox="1133 113 1665 531"><p>Grounding</p></div> <div data-bbox="1133 531 1665 583"><p>19. Ground at the tailgate.</p></div>	<div data-bbox="1665 113 2226 531"></div> <div data-bbox="1665 531 2226 583"><p>20. Connect the power harness to the B-pillar plugs.</p></div>	<div data-bbox="2226 113 2772 531"><p>OBD location</p></div> <div data-bbox="2226 531 2772 583"><p>21. Connect the power harness to the OBD plug (connector inside the trim panel and place the white plug at the slo OBD plug).</p></div>
<div data-bbox="35 583 605 1018"></div> <div data-bbox="35 1018 605 1050"><p>22. (row).</p></div>	<div data-bbox="605 583 1133 1018"><p>Wire points to the right</p></div> <div data-bbox="605 1018 1133 1050"><p>23. Insert the power harness terminals into the fuse box and tap and plug the fuse tap into the fuse box.</p></div>	<div data-bbox="1133 583 1665 1018"></div> <div data-bbox="1133 1018 1665 1050"><p>24. Insert the strut wiring harnesses (1)(2), lock signal harness (3), and power harness(4) into the ECU in sequence.</p></div>	<div data-bbox="1665 583 2226 1018"><p>Secure the ECU here</p></div> <div data-bbox="1665 1018 2226 1050"><p>25. Secure the ECU at the original car hole.</p></div>	<div data-bbox="2226 583 2772 1018"></div> <div data-bbox="2226 1018 2772 1050"><p>26. Press the added tailgate switch button to open and tailgate once for initializing the system, and then test the function of the electric tailgate.</p></div>
<div data-bbox="35 1050 605 1518"><p>27. (remove the small cover panel).</p></div>	<div data-bbox="605 1050 1133 1518"><p>5. System initialization method</p><p>1. Press the added tailgate switch button to make the tailgate close automatically;</p><p>2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".</p><p>3. The system initialization is complete.</p><p>6. Instructions for the electric tailgate</p><p>1. Methods to open and close the tailgate:</p><ul style="list-style-type: none">●Press and hold the tailgate button on the remote key;●Press the unlock button on the remote key 3 times;●Press the unlock button at the driver's area 3 times;●Press the original tailgate switch button;●Press the added tailgate switch button.<p>2. Method to pause the tailgate:</p><p>During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.</p></div>	<div data-bbox="1133 1050 1665 1518"><p>3. Instructions for the added tailgate switch</p><p>①Closing speed acceleration</p><p>Press and hold the added switch button on tailgate until hearing a beep sound. When the tailgate makes a short beep sound again, the close speed acceleration is complete. (There are five speed settings. Repeat this step once to increase by one setting.)</p><p>②Opening speed acceleration</p><p>Press and hold the added switch button on tailgate until hearing two beep sounds. When the tailgate makes two short beep sounds again, the open speed acceleration is complete. (There are five speed settings. Repeat this step once to increase by one setting.)</p><p>③Height setting</p><p>Press and hold the added switch button on tailgate until hearing three beep sounds. When the tailgate makes three short beep sounds again, the height setting is complete. Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height.</p><p>④Switch between quick/slow press of the unlock button on remote key</p><p>Press and hold the added switch button on tailgate until hearing four beep sounds. When the tailgate makes four short beep sounds again, the switch of pressing way is complete.</p></div>	<div data-bbox="1665 1050 2226 1518"><p>⑤Switch between pressing the unlock button twice/three times</p><p>Press and hold the added switch button on tailgate until hearing five beep sounds. When the tailgate makes a long beep sound, the switch of pressing times is complete.</p><p>⑥Braking force increase (Retention force for open)</p><p>Press and hold the added switch button on tailgate until hearing six beep sounds. When the tailgate makes two long beep sounds, the braking force increase is complete. (There are five speed settings. Repeat this step once to increase by one setting.)</p><p>⑦Restore to factory settings</p><p>Press and hold the added switch button on tailgate until hearing seven beep sounds. When the tailgate makes three long beep sounds, the reset is complete.</p><p>4. Meanings of the buzzer sound:</p><p>"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;</p><p>"Beep" twice: The tailgate has been fully opened or closed;</p><p>"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on;</p><p>Long sound of "beep": The height memory is complete.</p></div>	