## **Installation Manual**

Compatible Model	CGeely CStarray
Year	2023



#### . Points to note

- For safety and to ensure the proper use of product, please ask a professional echnician to install. Do not disassemble and install it privately in case of damaging roduct and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be ure to tie each wiring harness to the vehicle's original wiring harness with cable ties. he wiring harnesses crushed by the vehicle interior trim panel buckles and screws
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert rminals into the wiring harness connector first to avoid short circuit between rminals after the wiring harnesses have been arranged, then connect other plugs of he wiring harnesses (as shown in the blue ellipses below) with the original plugs.



 Check the function display of instrument panel before installation, whether the tton of the vehicle is working properly, whether the doors and windows work roperly while opening and closing, whether there are scratches on the internal and ternal surfaces of the vehicle; and report to the customers in a timely manner if there

 During the process of disassembly and assembly, do not carry metal ornaments and Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid other hard objects with you to prevent damage to the paintwork, seats and interior. Be ure to place the removed trim components properly to avoid scratching them.

> All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.





QTY No. Name Picture 1 Strut 2 ECU 1 set Wiring harness 1 set 4 Power latch 1 (5) Added tailgate switch 1 Other parts Omitted 1 set (screws, brackets, etc.)



1. Remove the front left side door sill panels.




2. Remove the rear left side door sill panel and B-pillar trim



3. Remove the trim panels on the left side of the trunk and the trunk floor mat.



4. Remove the tailgate trim panels.

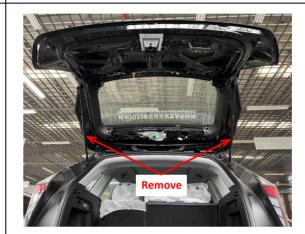

5. Remove the original gas struts.



6. Replace the brackets on both sides of the car body and pay attention to the direction of the ball studs.




7. Install the electric struts, L on the left and R on the right (the first letter of the strut code), making sure the ends with wiring harnesses are on the tailgate.




8. Thread the strut wiring harness through the indicated hole into the tailgate; both sides are the same.



9. Route the strut wiring harnesses as indicated above.

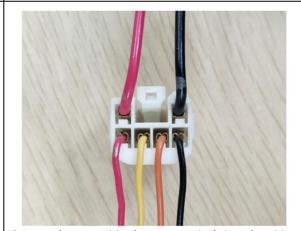

10. Insert the strut wiring harness terminals into the wiring harness connector.

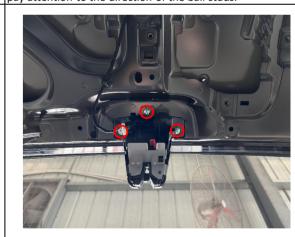

11. Remove the original latch.



12. Connect the lock signal harness to the plugs of the power latch.



13. Install the power latch



14. Connect the lock signal harness to the plugs of the original tailgate switch.




Routing only, no plug or power connection

15. Route the power harness.



16. Ground at the left side of the trunk.

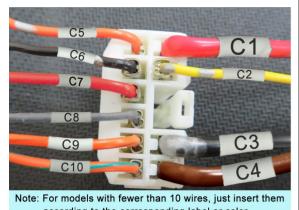


according to the corresponding label or color.

17. Insert the power harness terminals into the wiring

harness connector.




18. Connect the power harness to the white plugs of th CNA signal.

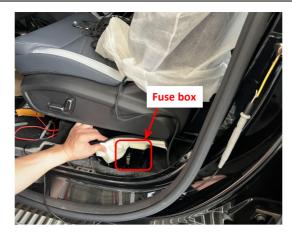

19. The fuse box is located at the indicated position.



20. The fuse slot for power supply is indicated above.

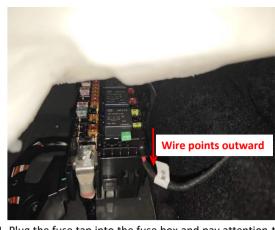

21. Plug the fuse tap into the fuse box and pay attention to the direction.



22. Drill a hole at the indicated position with a  $\phi$ 6mm drill bit for installing the ECU.



23. Install the ECU and secure it with a nut.



24. Insert the left and right strut wiring harnesses ①②, lock signal harness ③, and power harness ④ into the ECU in sequence.



25. Press the added tailgate switch button to open and close the tailgate once for initializing the system, and then test each function of the electric tailgate.



26. Remove the indicated small panel for installing the added tailgate switch.



27. Install the added tailgate switch and reinstall all trim panels.



28. If the tailgate closing is interfered with the bump stops on the striker, properly cut off the inside part of them.

# 5. System initialization method 1. Press the added tailgate switch

- Press the added tailgate switch button to make the tailgate close automatically;
- 2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".
- 3. The system initialization is complete.

#### 6. Instructions for the electric tailgate

- 1. Methods to open and close the tailgate:
- Press the unlock button on the remote key 3 times;
- Press the lock/unlock button at the driver's area 6 times;
- Press the original tailgate switch button;
- Press the added tailgate switch button.

### 2. Method to pause the tailgate:

During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse

#### 3. Method to memorize the height:

Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep ----". The height memory is complete.

Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height with your hand.

#### 4. Meanings of the buzzer sound:

"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;

"Beep" twice: The tailgate has been fully opened or closed;

"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on; Long sound of "beep": The height memory is complete.