

# Installation Manual

Compatible Model	CCadillac CXT4
Year	2024



## 1. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



- Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the internal and external surfaces of the vehicle; and report to the customers in a timely manner if there are any problems.
- During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.
- All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

## 2. Installation tools



## 3. Product list

No.	Name	QTY	Picture
①	Strut	2	
②	ECU	1 set	
③	Wiring harness	1 set	
④	Power latch	1	
⑤	Added tailgate switch	1	
⑥	Other parts (screws, brackets, etc.)	1 set	Omitted



1. Remove the indicated trim panel.



2. Remove the indicated door sill panels and the trim panel of fuse box.



3. Remove the indicated trim panel.



4. Remove the rear left door sill panel.



5. Remove the indicated panel to allow wiring harnesses to pass through.



6. Remove the indicated trim panels from the tailgate.



7. Remove the original gas struts.



8. Replace the left body bracket.



9. Replace the right body bracket.



10. Drill a hole at the indicated location on both sides with a  $\phi 21\text{mm}$  drill bit to allow the wiring harnesses to pass through.



11. Install the electric struts, L on the left and R on the right (the first letter of the strut code).



12. Tie the rubber tube as shown above.



13. Route the strut wiring harnesses as indicated above.



14. Remove the original latch.



15. Connect the lock signal harness to the plugs of the power latch.



16. Install the power latch.



17. Connect the plugs of the lock signal harness to the original tailgate switch.




18. Connect the plug of the lock signal harness to the added tailgate switch.




Routing only, no plug or power connection

19. Route the strut wiring harness as indicated above.

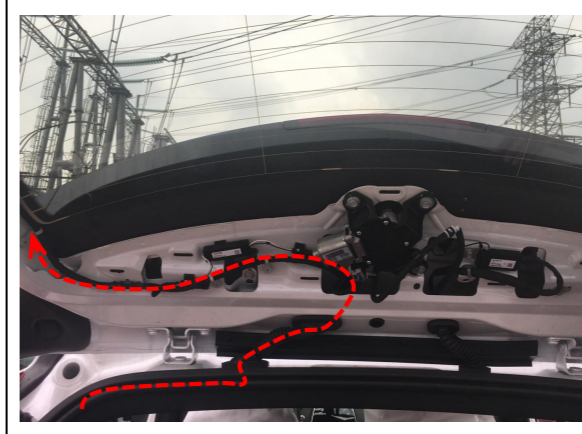

20. Route the power harness to the tailgate.

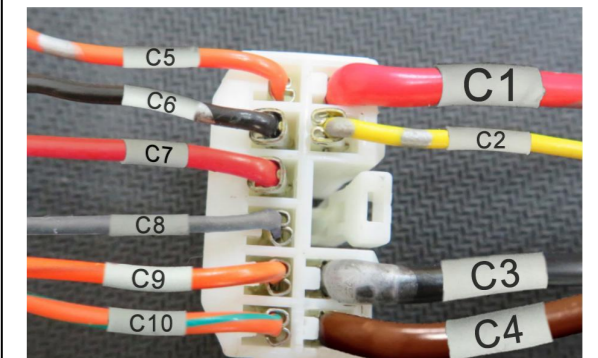

Note: For models with fewer than 10 wires, just insert them according to the corresponding label or color.

21. Insert the power harness terminals into the connector.



Grounding

22. Ground at the indicated position



Thread the signal wire to the passenger's position

23. Thread the signal plug of the power harness to the front passenger's area.



Connect with the green plug

24. Connect the signal plug to the indicated green plug.


Check if all the plugs are properly connected.

25. Check all the plugs.



Constant power

26. The fuse slot for power supply is indicated above.

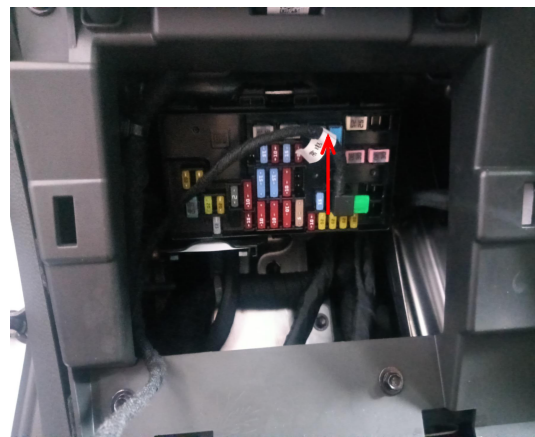


27. Plug the fuse tap into the fuse box.



Remove

28. Remove the indicated wire clip.

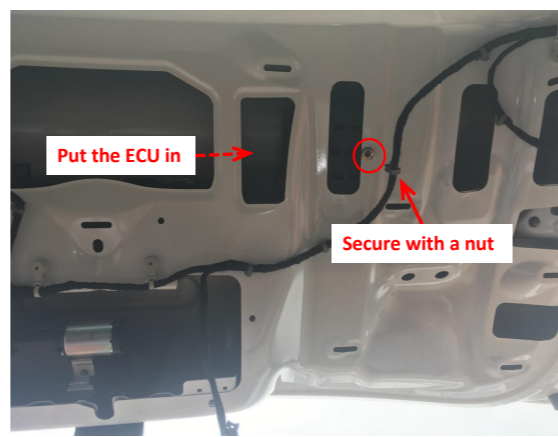

Put the ECU in

Secure with a nut

29. Secure the ECU at the indicated position.



30. Insert the left and right strut wiring harnesses ①②, lock signal harness ③, and power harness ④ into the ECU in sequence.



31. Press the added tailgate switch button to open and close the tailgate once, the system will complete initialization, and then test the each function of the electric tailgate.



32. Install the added tailgate switch and reinstall all trim panels.

**5. System initialization method**

1. Press the added tailgate switch button to make the tailgate close automatically;
2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".
3. The system initialization is complete.

**6. Instructions for the electric tailgate**

**1. Methods to open and close the tailgate:**

- Press the unlock button on the remote key 3 times;
- Press the unlock button at the driver's area 3 times;
- Press the original tailgate switch button;
- Press the added tailgate switch button.

**2. Method to pause the tailgate:**

During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.

**3. Method to memorize the height:**

Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep ----". The height memory is complete.  
Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height with your hand.

**4. Meanings of the buzzer sound:**

"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;  
"Beep" twice: The tailgate has been fully opened or closed;  
"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on;  
Long sound of "beep": The height memory is complete.