

# Installation Manual

Compatible Model	CAudi CQ2L
Year	2018-2022



## 1. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



- Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the internal and external surfaces of the vehicle; and report to the customers in a timely manner if there are any problems.
- During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.
- All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

## 2. Installation tools



## 3. Product list

No.	Name	QTY	Picture
①	Strut	2	
②	ECU	1 set	
③	Wiring harness	1 set	
④	Lock latch	1	
⑤	Lock actuator	1	
⑥	Added tailgate switch		
⑦	Other parts (screws, brackets, etc.)	1 set	Omitted



1. Remove the front left side trim panel, door sill panel and the storage box.



2. Remove the rear left door sill panel and B-pillar trim panel.



3. Remove the screws from the tailgate trim panels.



4. Remove the tailgate trim panels.



5. Take out the trunk floor mat.



6. Remove the trim panel on the left side of the trunk.



7. Route the lock signal harness to the left side of the trunk (do not connect plugs for now).




Note: For models with fewer than 14 wires, just insert them according to the corresponding label or color.


8. Insert the lock signal harness terminals into the wiring harness connector and then fasten the connector.




9. Connect the plugs of lock signal harness to the original tailgate switch.

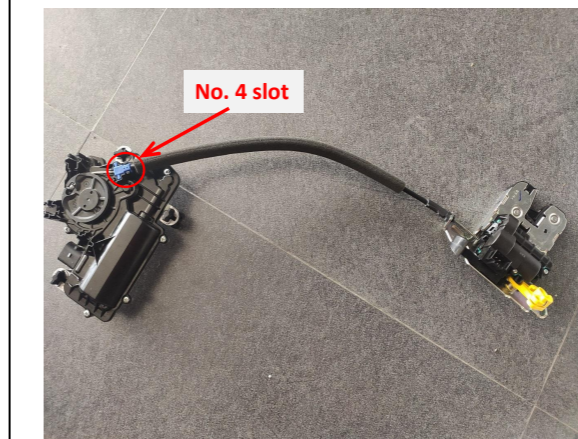


10. Assemble the lock latch and lock actuator together.

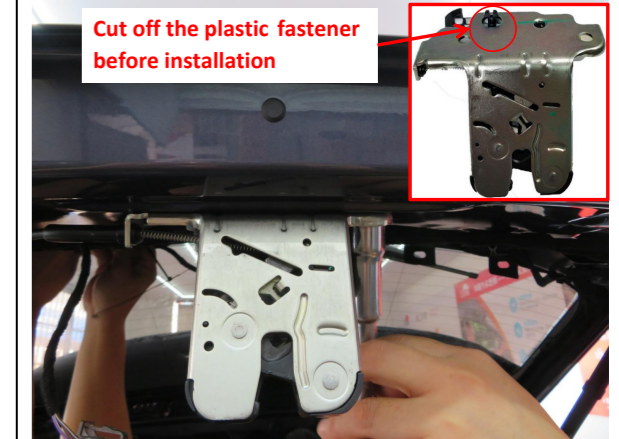

11. Remove the original latch and install our latch (cut off the plastic fastener before installation).

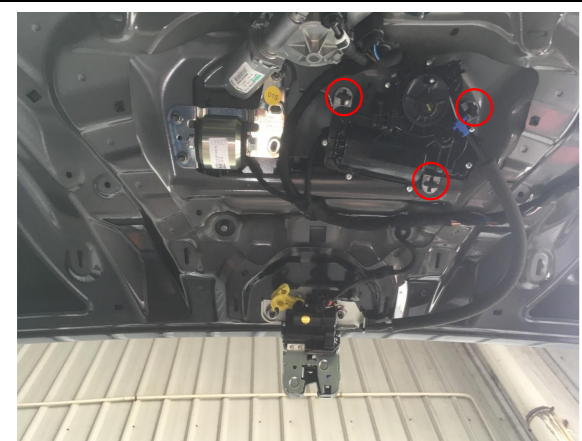

12. Install the lock actuator at the indicated mounting holes.

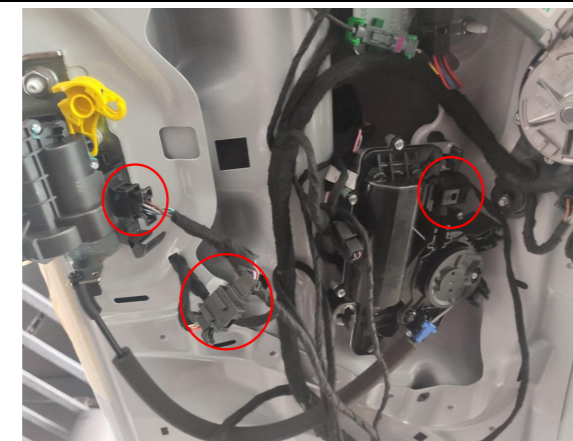


13. Connect the plugs of the lock signal harness to the lock actuator.



14. Connect the plug of lock signal harness with the added tailgate switch.




15. Remove the gas struts.

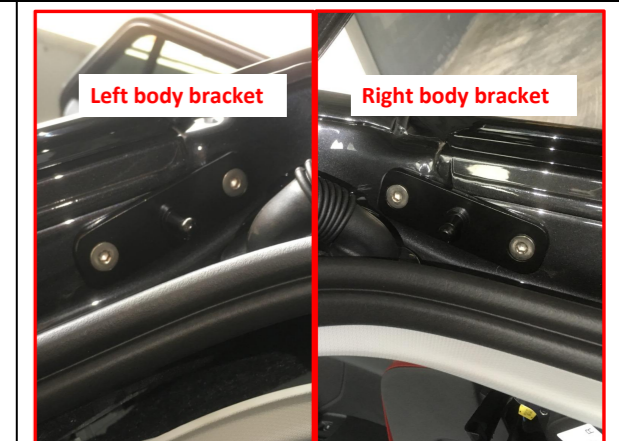

16. Replace the body brackets.




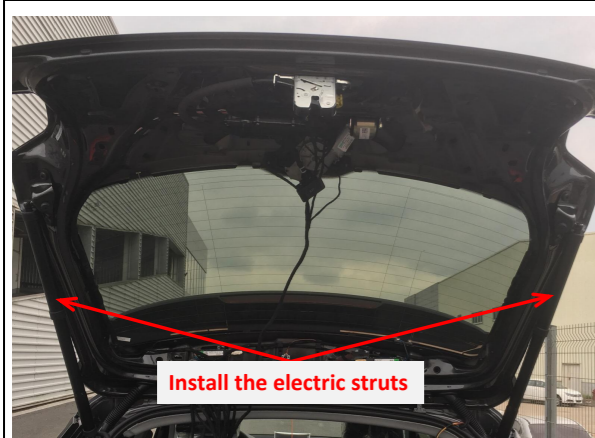


17. Install the electric struts, L on the left and R on the right (the first letter of the strut code).



18. Drill a hole at the indicated position with a  $\phi 21\text{mm}$  drill bit and do the same on the other side.

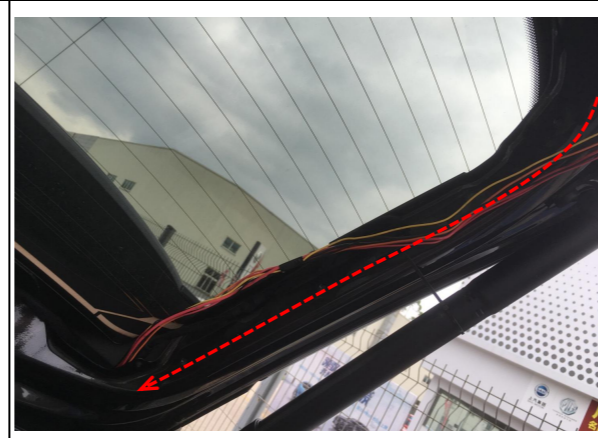

19. Route the left and right strut wiring harnesses as shown above; both sides are the same.

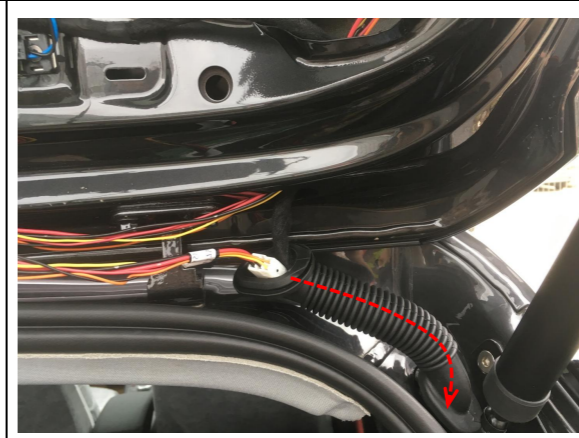


20. Thread the strut wiring harness through the rubber tube to the right side of the trunk.




21. Route the power harness.




22. Ground at the left side of the trunk.

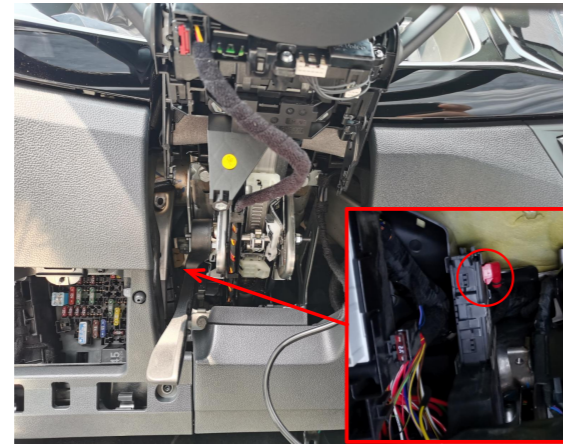

23. Connect the plugs of power harness to the indicated signal plug and its socket.

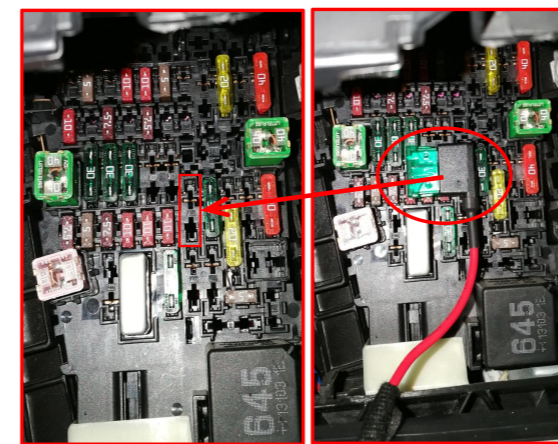


24. Plug the fuse tap into the indicated slot.

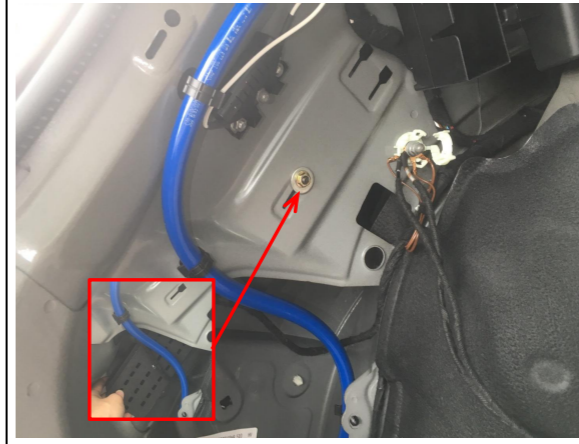

25. Fix the ECU bracket to the indicated hole on the left side of the trunk.



26. Insert the strut wiring harnesses ①②, lock signal harness ③, and power harness ④ into the ECU in sequence and mount the ECU onto its bracket.

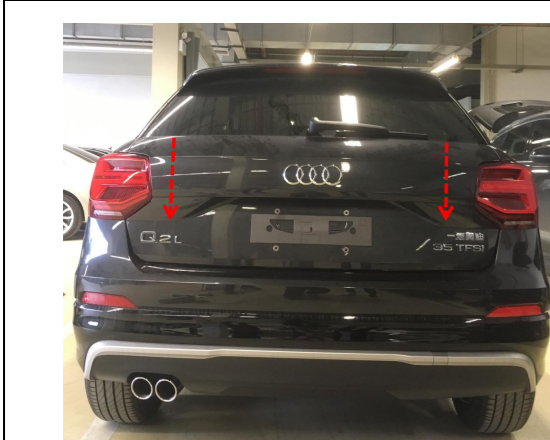


27. Initiate the system once and test each function of the electric tailgate.

2. Method to pause the tailgate:  
During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.

3. Method to memorize the height:  
Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep ----". The height memory is complete.  
Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height with your hand.

4. Meanings of the buzzer sound:  
"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;  
"Beep" twice: The tailgate has been fully opened or closed;  
"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on;  
Long sound of "beep": The height memory is complete.

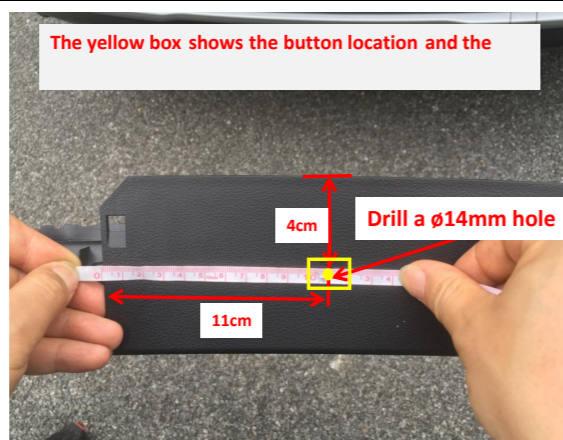

28. Drill a hole at the right side of the tailgate trim panel with a  $\phi 14\text{mm}$  drill bit.



29. Use the hole opener to open the hole.



30. Reinstall all the trim panel and fit the added tailgate switch in.

5. System initialization method  
1. Press the added tailgate switch button to make the tailgate close automatically;  
2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".  
3. The system initialization is complete.

6. Instructions for the electric tailgate  
1. Methods to open and close the tailgate:  
● Press and hold the tailgate button on the remote key;  
● Press the unlock button at the driver's area 3 times;  
● Press the original tailgate switch button;  
● Press the added tailgate switch button.