

Installation Manual

Compatible Model	CFord CEEdge L
Year	2023




1. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



- Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the internal and external surfaces of the vehicle; and report to the customers in a timely manner if there are any problems.
- During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.
- All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

2. Installation tools

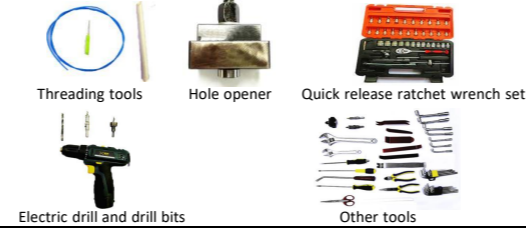

3. Product list


No.	Name	QTY	Picture
①	Strut	2	
②	ECU	1 set	
③	Wiring harness	1 set	
④	Power latch	1	
⑤	Added tailgate switch	1	
⑥	Other accessories (screws, brackets, etc.)	1 set	Omitted



1. Remove the front passenger side trim panel and door sill panel. The fuse box is located behind the door sill panel.



2. Remove the rear right side door sill panel.

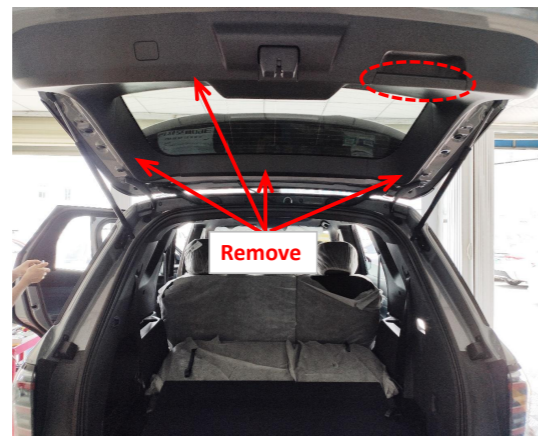

3. Remove the tailgate trim panels (there are screws inside ellipse).



4. Remove the trunk floor mat and the trim panel on the right side of the trunk.




5. Remove the original gas struts.




6. Install the left body bracket.




7. Install the right body bracket.

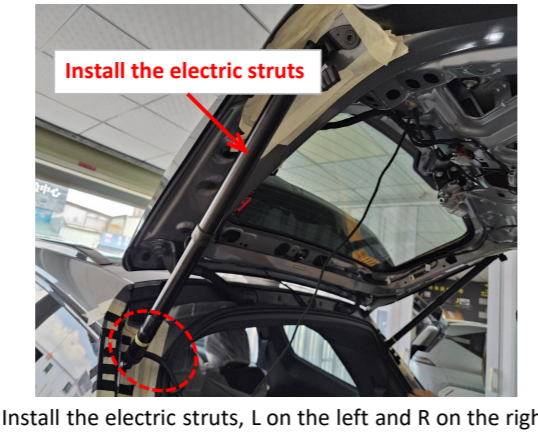

8. Install the electric struts, L on the left and R on the right (the first letter of the strut code), making sure the ends with wiring harnesses are on the car body.

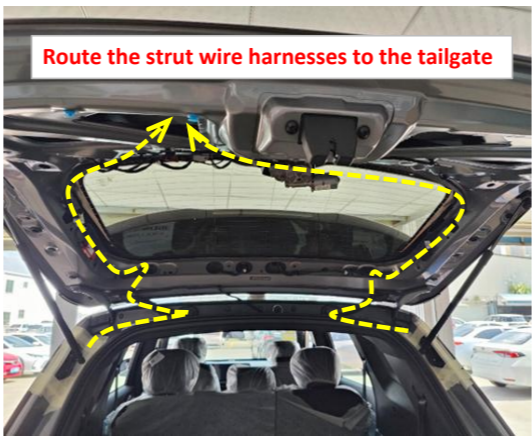

9. Route the left and right strut wiring harnesses to the tailgate.

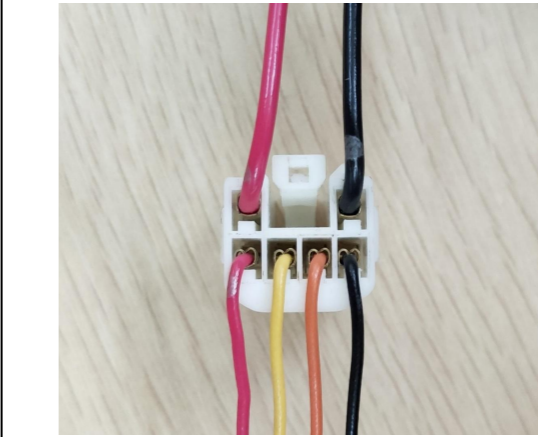

10. Insert the strut wiring harness terminals into the wiring harness connector as shown above.




11. Thread the strut wiring harness through the indicated hole.




12. Remove the original latch.



13. Connect the three plugs of the lock signal harness to the plugs of the power latch.

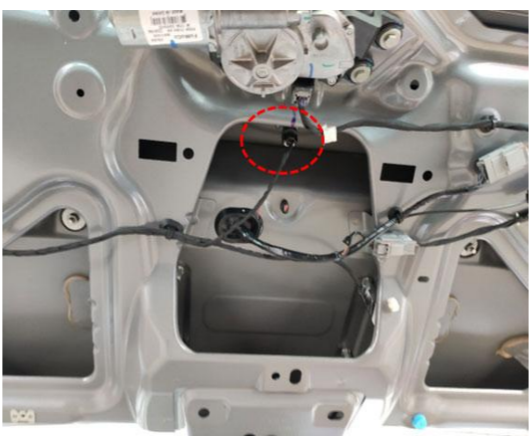


14. Connect the pair of plugs of the lock signal harness to the plugs of the original tailgate switch.

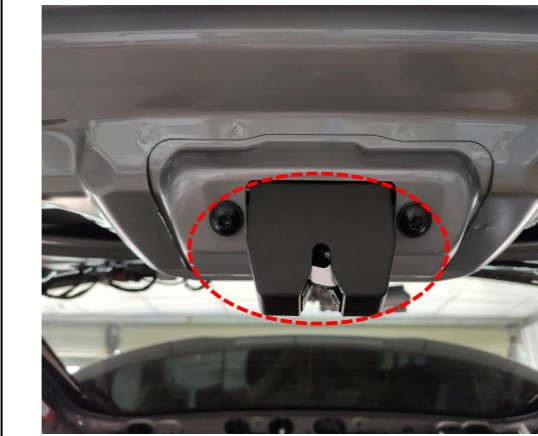


15. Install the power latch.



16. Route the power harness (do not connect plugs before inserting terminals into wiring harness connector).

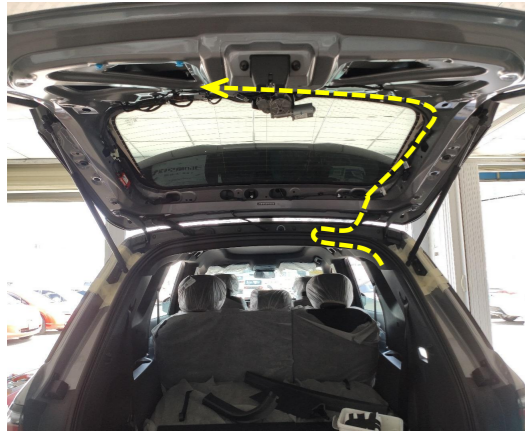

17. Thread the power harness to the tailgate.

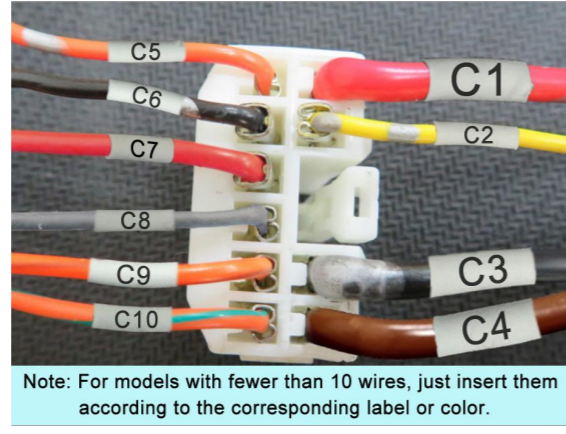


Note: For models with fewer than 10 wires, just insert them according to the corresponding label or color.

18. Insert the power harness terminals into the wiring harness connector as shown above.




Ground at the tailgate

19. Ground at the indicated position of tailgate.

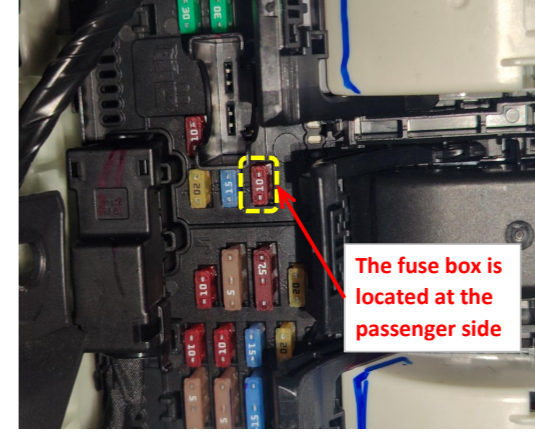

The fuse box is located at the passenger side

20. The fuse box is located near the front passenger seat and the fuse slot for power supply is indicated above.

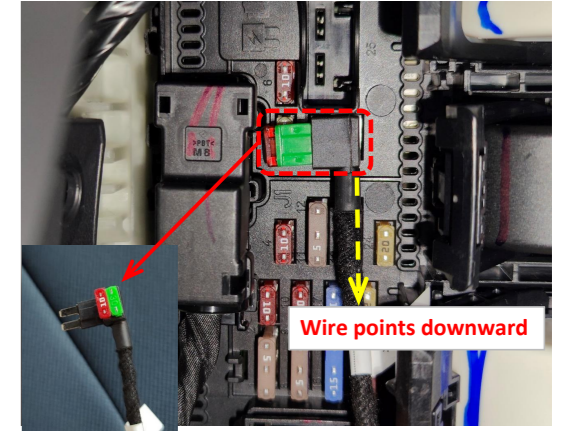

Wire points downward

21. Move the original fuse from the fuse box to the fuse tap and then plug the fuse tap into the fuse box.



Connect them with the signal plugs of power harness

22. Connect the signal plugs of the power harness to the indicated two plugs at B-pillar..



23. Insert the strut wiring harnesses ①②, lock signal harness ③, and power harness ④ into the ECU in sequence.



Drill a mounting hole here with a $\Phi 6\text{mm}$ drill bit for the ECU

24. Stick the hole template to the marked position and drill a mounting hole for the ECU with a $\phi 6\text{mm}$ drill bit.



25. Press the added switch on the tailgate to open and close the tailgate once for initializing the system, and then test each function of the electric tailgate.



Drill a hole at the central point with a $\Phi 21\text{mm}$ drill bit

26. Mark the central point of the small panel and drill a hole with a $\phi 21\text{mm}$ drill bit.



27. Install the added tailgate switch and reinstall all trim panels.

5. System initialization method

1. Press the added tailgate switch button to make the tailgate close automatically;
2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".
3. The system initialization is complete.

6. Instructions for the electric tailgate

1. Methods to open and close the tailgate:
 - Press the tailgate button on the remote key 2 times;
 - Press the unlock button at the driver's area 3 times;
 - Press the original tailgate switch button;
 - Press the added tailgate switch button.

2. Method to pause the tailgate:

During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.

3. Method to memorize the height:

Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep ----". The height memory is complete.
Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height with your hand.

4. Meanings of the buzzer sound:

"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;
"Beep" twice: The tailgate has been fully opened or closed;
"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on;
Long sound of "beep": The height memory is complete.