

Installation Manual

Compatible Model	CNissan CX-Trail (RHD)
Year	2014-2021



8-ETNS-5010-00-00


1. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



- Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the internal and external surfaces of the vehicle; and report to the customers in a timely manner if there are any problems.
- During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.
- All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

2. Installation tools

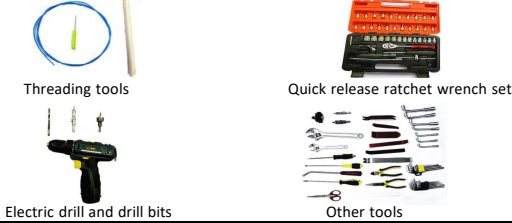

3. Product list

No.	Name	QTY	Picture
①	Strut	2	
②	ECU	1 set	
③	Wiring harness	1 set	
④	Power latch	1	
⑤	Added tailgate switch	1	
⑥	Other parts (screws, brackets, etc.)	1 set	Omitted



1. Remove the indicated triangular trim panel and door sill panels.




2. Remove the rear right door sill panel and B-pillar trim panel.



3. Take out the trunk floor mat and remove the screws in the circles from the right side trim panel.



4. Remove the trim panel on the right side of the trunk to allow wiring harnesses to pass through.

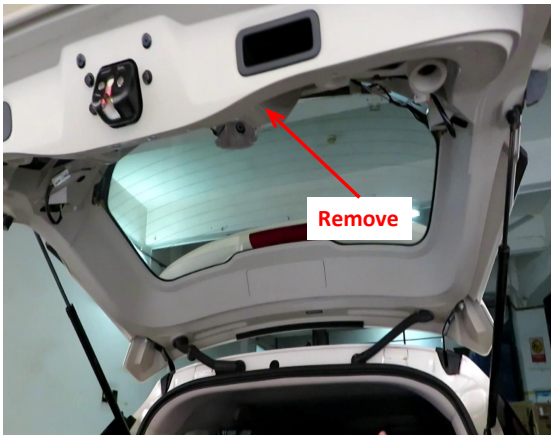


5. Remove the tailgate trim panels.



6. Remove the original latch.



7. Drill a hole at the indicated bracket behind the latch position for installing the ECU (just need to drill through the bracket).

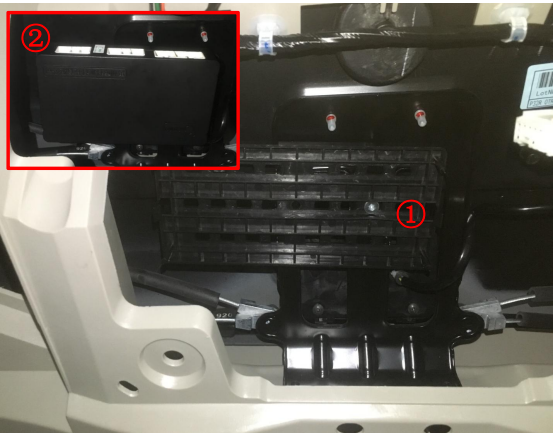

8. Install the ECU bracket and fit the ECU into its bracket.



9. Install our power latch.




10. Connect the plugs of the lock signal harness to the plugs of the power latch.




11. Connect the plugs of the lock signal harness to the plugs of the original tailgate switch.



12. Remove the original cover panel and install the added tailgate switch.

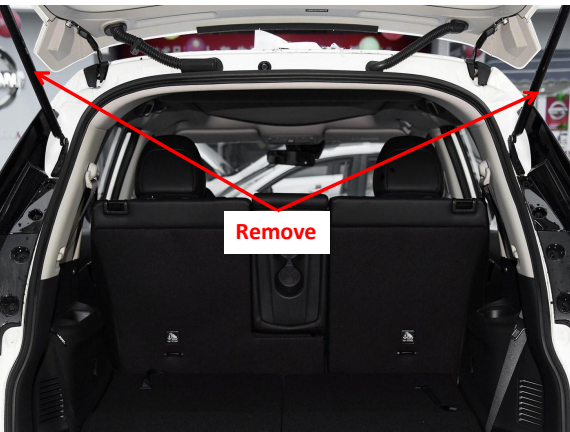


13. Remove the original gas struts.

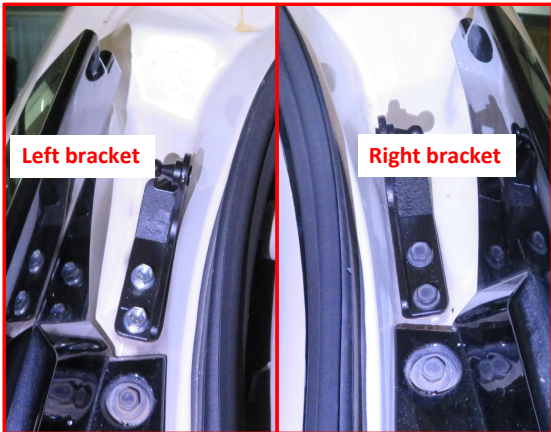

14. Replace the left and right body brackets.




15. Replace the left and right sides ball studs and shims.

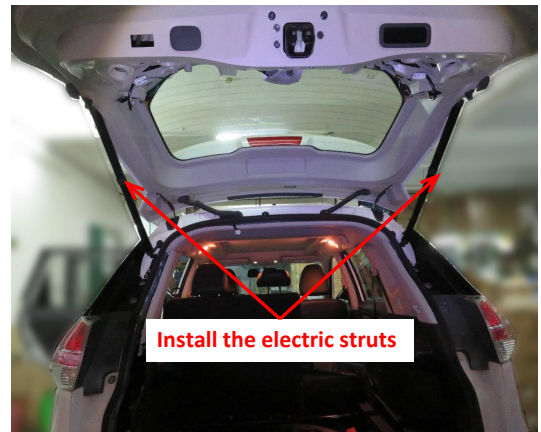

16. Install the electric struts, L on the left, R on the right (the first letter of the strut code).



 <p>17. Drill a hole at the indicated position using a φ21mm drill bit to allow the strut wiring harness to pass through.</p>	 <p>18. Pass the strut wiring harness through the shown position and the drilled hole into the tailgate and then plug the hole with hole plug.</p>	 <p>19. Route the power harness to the tailgate (do not connect the power before inserting terminals into the wiring harness connector).</p>	 <p>20. Insert the power harness terminals into the wiring harness connector.</p>	 <p>21. Route the power harness as indicated.</p>
 <p>22. Ground at the right side of the trunk.</p>	 <p>23. Connect the plugs of power harness to the indicated signal plug and its socket at the driver's area.</p>	 <p>24. Install the added front switch and connect the plugs behind the panel for backlight.</p>	 <p>25. The constant power fuse position (first in the second row).</p>	 <p>26. Move the fuse from from the fuse box to the fuse tap and then plug the fuse tap into the fuse box. Pay attention to the direction.</p>
 <p>27. Insert the strut wiring harnesses ①②, lock signal harness ③, and power harness④ into the ECU in sequence and then mount the ECU onto its bracket.</p>	 <p>28. Initialize the system once and test each function of the electric tailgate.</p>	 <p>29. Reinstall all trim panels.</p>	<p><b>5. System initialization method</b></p> <ol style="list-style-type: none"><li>1. Press the added tailgate switch button to make the tailgate close automatically;</li><li>2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".</li><li>3. The system initialization is complete.</li></ol> <p><b>6. Instructions for the electric tailgate</b></p> <ol style="list-style-type: none"><li>1. Methods to open and close the tailgate:<ul style="list-style-type: none"><li>●Press the unlock button on the remote key 3 times;</li><li>●Press the unlock button at the driver's area 3 times;</li><li>●Press the original tailgate switch button;</li><li>●Press the added tailgate switch button;</li><li>●Press the added fornt switch button.</li></ul></li></ol> <p>2. Method to pause the tailgate: During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.</p> <p>3. Method to memorize the height: Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep ----" . The height memory is complete. Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height with your hand.</p> <p>4. Meanings of the buzzer sound: "Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause; "Beep" twice: The tailgate has been fully opened or closed; "Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on; Long sound of "beep": The height memory is complete.</p>	