

Installation Manual

Compatible Model	CNissan CMurano
Year	2015-2021



8-ETNS-5007-00-00


1. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



- Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the internal and external surfaces of the vehicle; and report to the customers in a timely manner if there are any problems.
- During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.
- All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

2. Installation tools

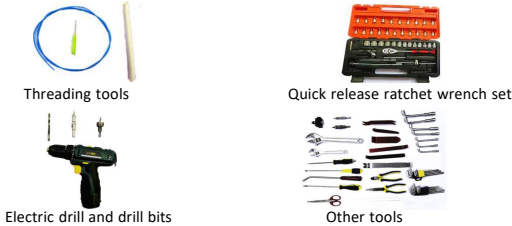

3. Product list

No.	Name	QTY	Picture
①	Strut	2	
②	ECU	1 set	
③	Wiring harness	1 set	
④	Power latch	1	
⑤	Added tailgate switch	1	
⑥	Other parts (screws, brackets, etc.)	1 set	Omitted




1. Remove the front left side door sill panel, switch panel and the exterior trim panel of the fuse box.




2. Remove the rear left side door sill trim panel and B-pillar trim panel.




3. Remove the trim panel on the left side of the trunk to allow wiring harnesses to pass through.

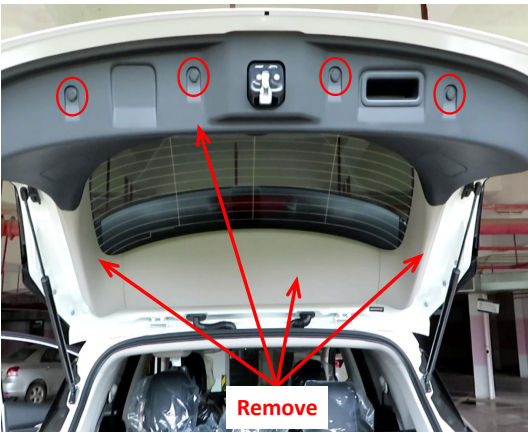


4. Remove the tailgate trim panels.

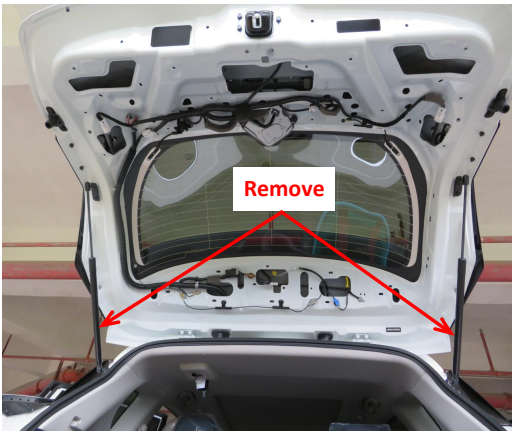

5. Remove the original gas struts.

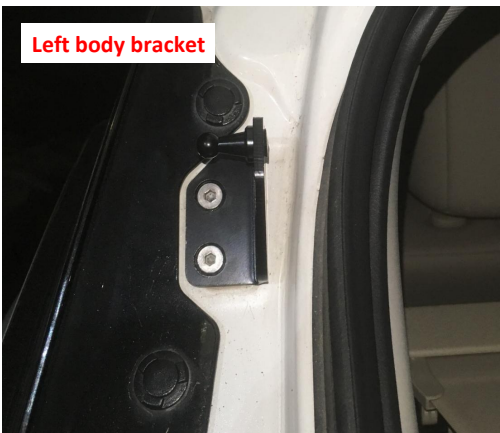

6. Replace the left body bracket.

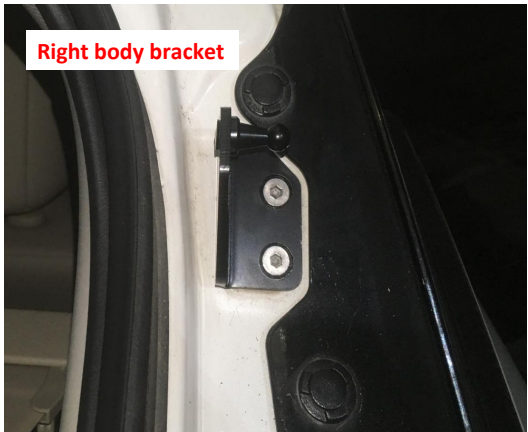

7. Replace the right body bracket.



8. Replace the left tailgate bracket.



9. Replace the right tailgate bracket.



10. Install the electric struts, L on the left and R on the right (the first letter of the strut code), making sure the ends with wiring harnesses are on the vehicle body.




11. Drill a hole at the indicated position with a φ21mm drill to allow the strut wiring harnesses to pass through.




12. Thread the strut wiring harnesses to the tailgate.




13. Remove the original latch and install our power latch.

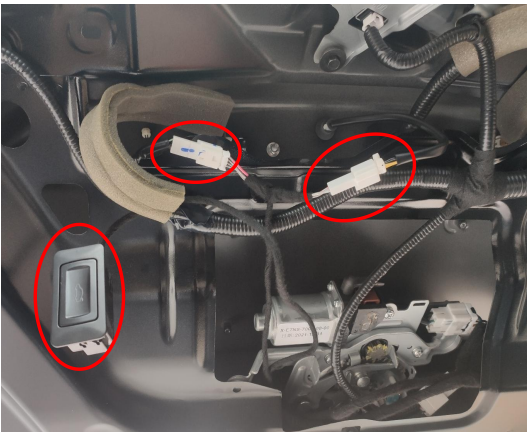

14. Connect the plugs of the lock signal harness to the plugs of the original tailgate switch and the added switch.



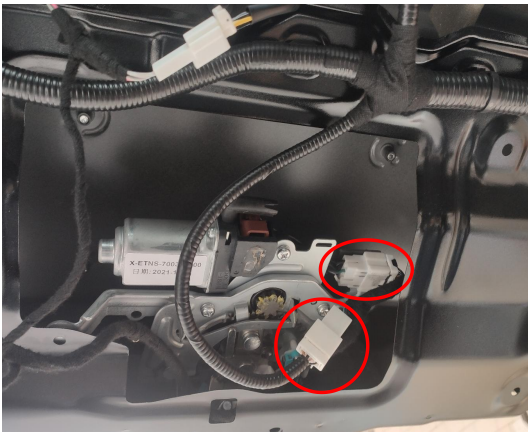

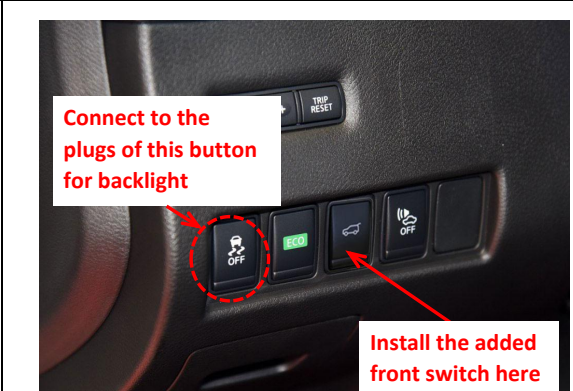
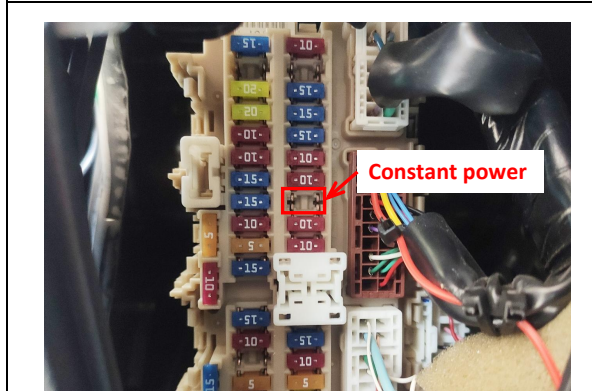
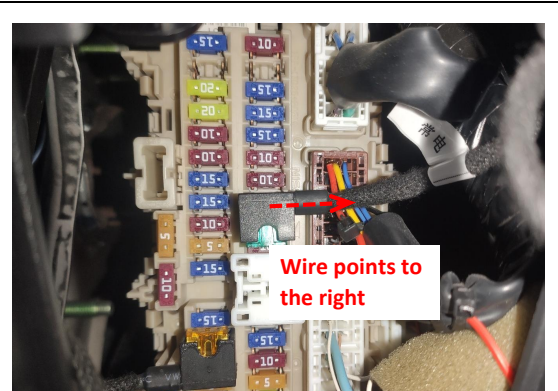
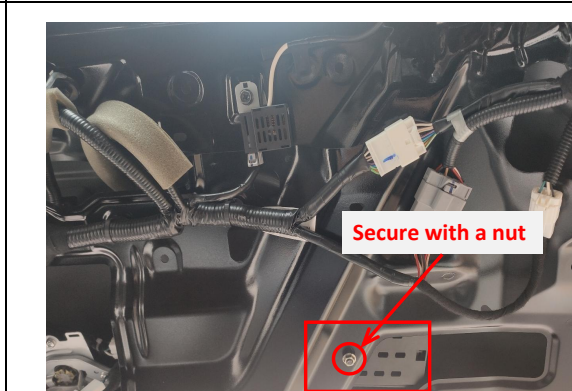


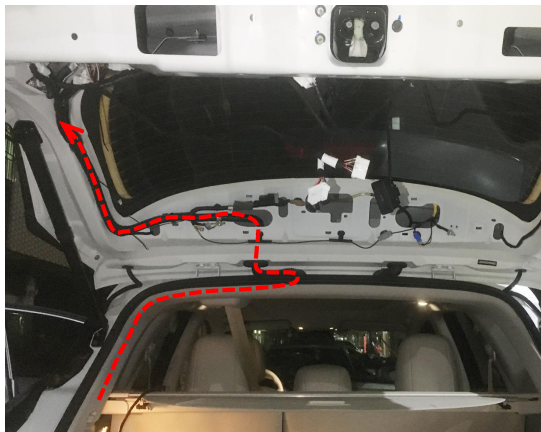


15. Connect the plugs of the lock signal harness to the plugs of the power latch.



16. Thread the power harness to the tailgate (no power connection before inserting terminals into the connector).

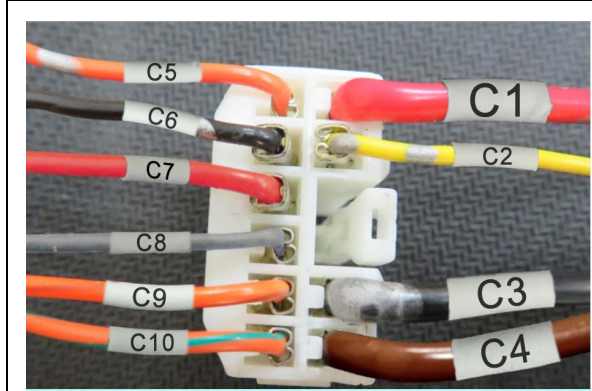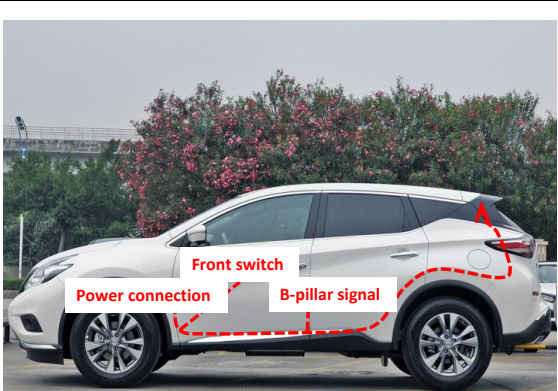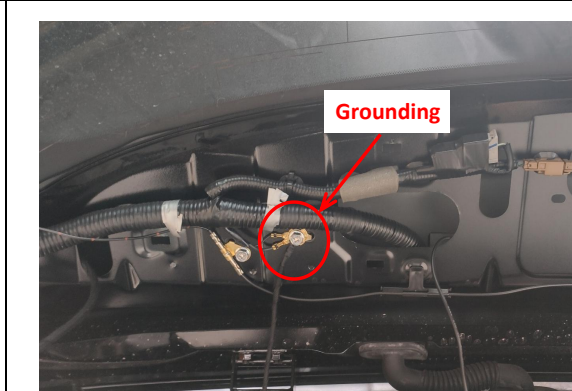

<div data-bbox="65 92 617 512"><p>Note: For models with fewer than 10 wires, just insert them according to the corresponding label or color.</p></div> <div data-bbox="65 512 617 569"><p>17. Insert the power harness terminals into the wiring harness connector.</p></div>	<div data-bbox="658 92 1178 512"></div> <div data-bbox="658 512 1178 569"><p>18. Route the power harness.</p></div>	<div data-bbox="1196 92 1730 512"><p>Grounding</p></div> <div data-bbox="1196 512 1730 569"><p>19. Ground at the top of the tailgate.</p></div>	<div data-bbox="1760 92 2300 512"></div> <div data-bbox="1760 512 2300 569"><p>20. Connect the power harness to the indicated B-pillar signal plugs.</p></div>	<div data-bbox="2329 92 2864 512"><p>Connect to the plugs of this button for backlight</p><p>Install the added front switch here</p></div> <div data-bbox="2329 512 2864 569"><p>21. Remove the blank button, install the added front switch button and connect the plugs of backlight.</p></div>
<div data-bbox="65 569 617 989"><p>Constant power</p></div> <div data-bbox="65 989 617 1045"><p>22. The fuse slot for power supply is indicated above.</p></div>	<div data-bbox="658 569 1178 989"><p>Wire points to the right</p></div> <div data-bbox="658 989 1178 1045"><p>23. Plug the fuse tap into the fuse box and pay attention to the direction.</p></div>	<div data-bbox="1196 569 1730 989"><p>Secure with a nut</p></div> <div data-bbox="1196 989 1730 1045"><p>24. Place the ECU bracket at the indicated position and secure it with a nut.</p></div>	<div data-bbox="1760 569 2300 989"></div> <div data-bbox="1760 989 2300 1045"><p>25. Insert the strut wiring harnesses ①②, lock signal harness ③, and power harness ④ into the ECU in sequence and then mount the ECU onto its bracket.</p></div>	<div data-bbox="2329 569 2864 989"></div> <div data-bbox="2329 989 2864 1045"><p>26. Press the added tailgate switch button to close the tailgate once for initializing the system and then test each function of the electric tailgate.</p></div>
<div data-bbox="65 1045 617 1528"></div> <div data-bbox="65 1528 617 1585"><p>27. Reinstall all trim panels and install the added tailgate switch.</p></div>	<div data-bbox="658 1045 1178 1528"><p><b>5. System initialization method</b></p><p>1. Press the added tailgate switch button to make the tailgate close automatically;</p><p>2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".</p><p>3. The system initialization is complete.</p><p><b>6. Instructions for the electric tailgate</b></p><p>1. Methods to open and close the tailgate:</p><ul style="list-style-type: none"><li>●Press the unlock button on the remote key 3 times;</li><li>●Press the unlock button at the driver's area 3 times;</li><li>●Press the original tailgate switch button;</li><li>●Press the added tailgate switch button;</li><li>●Press the added front switch button: press and hold for 4s to open and press once to close.</li></ul></div> <div data-bbox="658 1528 1178 2007"></div>	<div data-bbox="1196 1045 1730 1528"><p>2. Method to pause the tailgate:</p><p>During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.</p><p>3. Method to memorize the height:</p><p>Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep ----". The height memory is complete.</p><p>Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height with your hand.</p><p>4. Meanings of the buzzer sound:</p><p>"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;</p><p>"Beep" twice: The tailgate has been fully opened or closed;</p><p>"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on;</p><p>Long sound of "beep": The height memory is complete.</p></div> <div data-bbox="1196 1528 1730 2007"></div>	<div data-bbox="1760 1045 2300 1528"></div> <div data-bbox="1760 1528 2300 2007"></div>	<div data-bbox="2329 1045 2864 1528"></div> <div data-bbox="2329 1528 2864 2007"></div>