

Installation Manual

Compatible Model	CSkoda COctavia Pro
Year	2021-2024




1. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



- Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the internal and external surfaces of the vehicle; and report to the customers in a timely manner if there are any problems.
- During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.
- All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

2. Installation tools

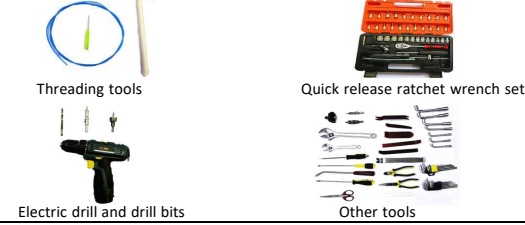

3. Product list

No.	Name	QTY	Picture
①	Strut	2	
②	ECU	1 set	
③	Wiring harness	1 set	
④	Lock latch	1	
⑤	Lock actuator	1	
⑥	Added tailgate switch	1	
⑦	Other parts (screws, brackets, etc.)	1 set	Omitted



1. Separate the two steering column trim panels.



2. Remove the front left side trim panel, door sill panel and storage box.




3. Remove the rear left side door sill panel and B-pillar trim panel.




4. Remove the tailgate trim panels.




5. Take out the trunk floor mat and remove the left side trim panels.

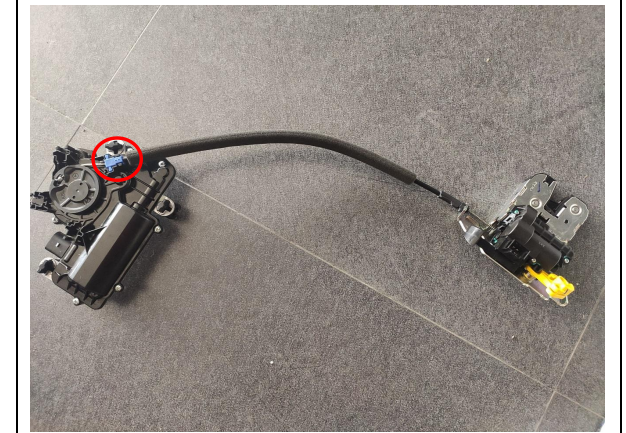

6. Assemble the lock latch and actuator.

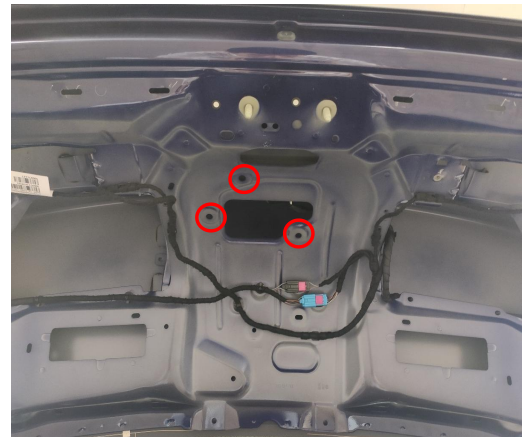

7. Locate the mounting holes of the lock actuator.

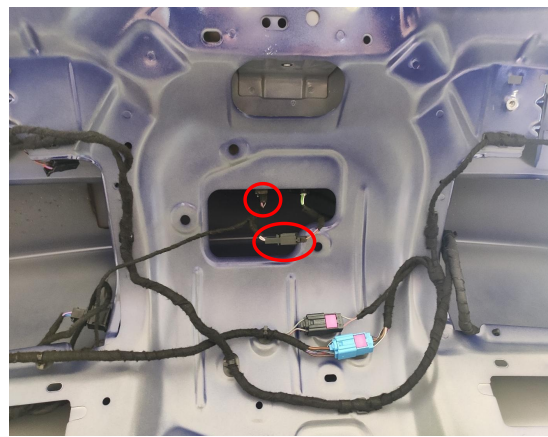

8. Connect the plugs of the lock signal harness to the plugs of the original tailgate switch.



9. Remove the original latch and install our latch and actuator.



10. Connect the plugs of the lock signal harness to the plugs of the lock latch, actuator and the added tailgate switch.



11. Remove the original gas struts.




12. Remove the ball stud from the tailgate and move the plug from its original position to the threaded hole of the ball stud. Both sides are the same.



13. Install the new ball studs on the tailgate. Both sides are the same.



14. Replace the ball studs on the car body.

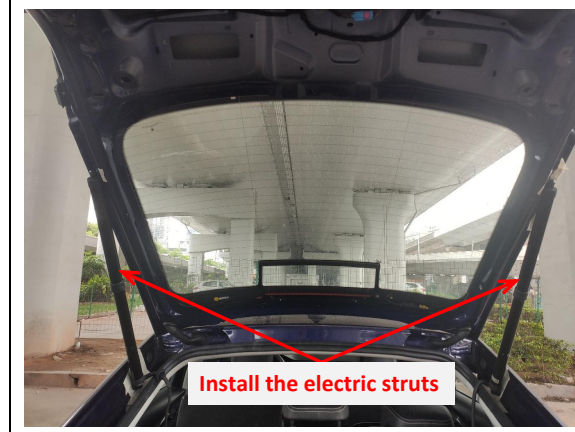


15. Install the electric struts, L on the left and R on the right (the first letter of the strut code).



16. Thread the strut wiring harnesses through the car hole and plug the hole tightly. Both sides are the same.




17. Route the strut wiring harnesses.

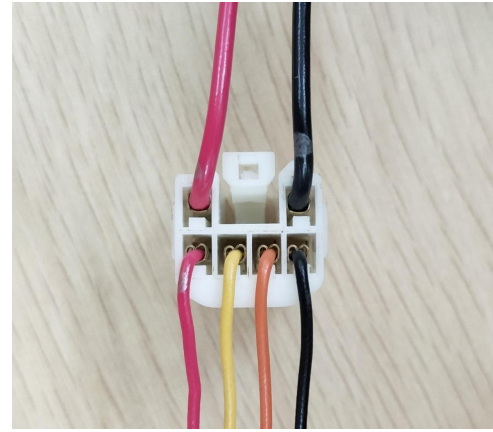

18. Insert the strut wiring harness terminals into the wire harness connector.




19. Thread the power harness to the tailgate.

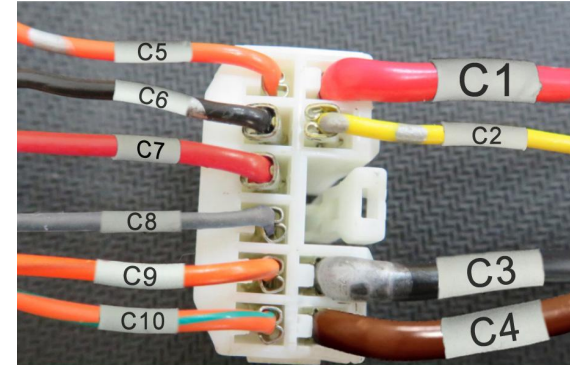


Note: For models with fewer than 10 wires, just insert them according to the corresponding label or color.

20. Insert the power harness terminals into the wiring harness connector as shown above.

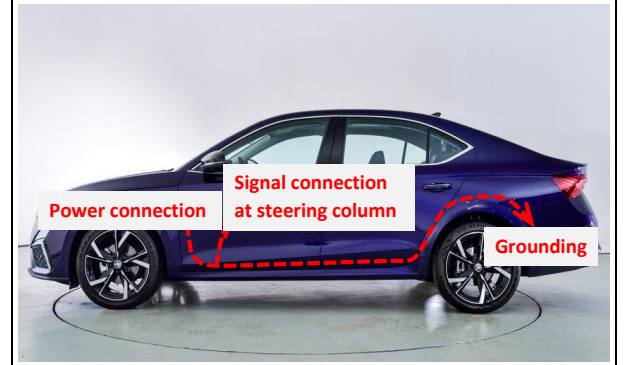


21. Route the power harness.

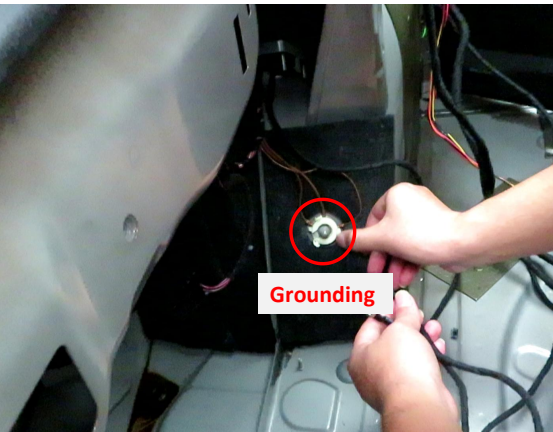


22. Ground at the indicated position on the left side of the trunk.



23. Connect the plugs of the power harness with the indicated signal plug and its socket.

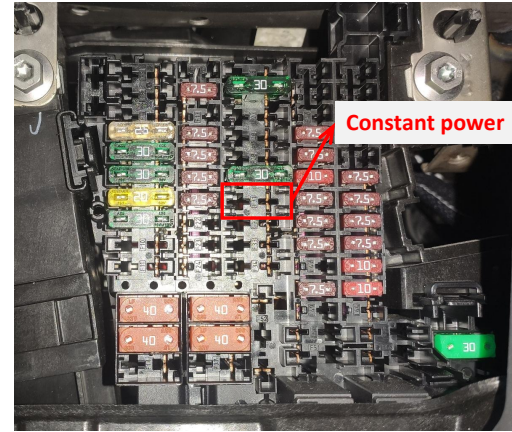

24. The fuse slot for power supply is indicated above.

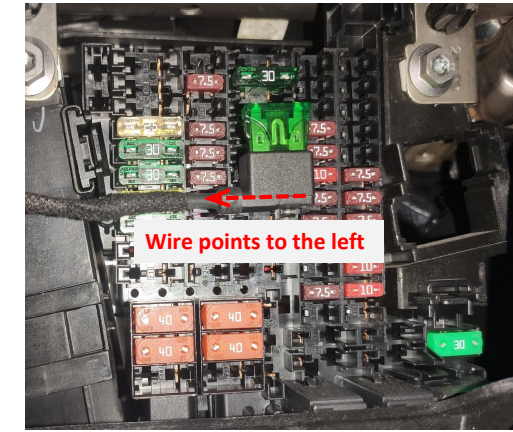

25. Plug the fuse tap into the fuse box and pay attention to the direction.




26. Secure the ECU bracket at the indicated hole on the left side of the tailgate.



27. Insert the strut wiring harnesses ①②, lock signal harness ③, and power harness ④ into the ECU in sequence.



28. Press the tailgate switch buttons to open and close the tailgate once for initializing the system, and then test each function of the electric tailgate.

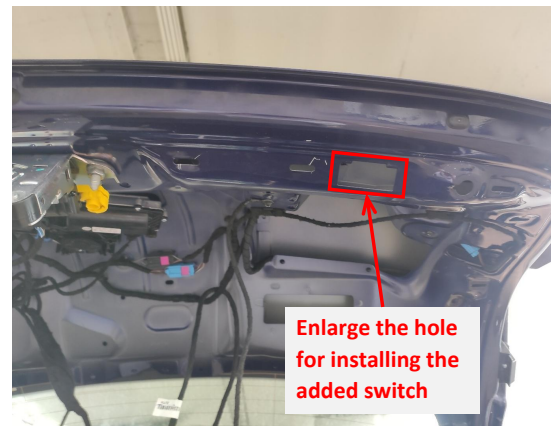

29. Enlarge the indicated hole for the installation of the added tailgate switch.



30. Align the trim panel with the enlarged hole on the tailgate and open a hole for the added tailgate switch.



31. Reinstall all trim panels and fit the added tailgate switch in.

5. System initialization method

1. Press the added tailgate switch button to make the tailgate close automatically;
2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".
3. The system initialization is complete.

6. Instructions for the electric tailgate

1. Methods to open and close the tailgate:

- Press and hold the tailgate button on the remote key;
- Press the unlock button at the driver's area 5-6 times;
- Press the original tailgate switch button;
- Press the added tailgate switch button to close.

2. Method to pause the tailgate:
During the operation of the tailgate, press the button with any of the above methods, and the tailgate will be paused. Press again, and the tailgate will move in reverse.

3. Method to memorize the height:
Open the tailgate to the height you want to set, long press the added tailgate switch, and release the switch after hearing a long "beep ----". The height memory is complete.
Tip: During the operation of the tailgate, pause the tailgate, and then push the tailgate to the ideal height with your hand.

4. Meanings of the buzzer sound:
"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;
"Beep" twice: The tailgate has been fully opened or closed;
"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on;
Long sound of "beep": The height memory is complete.