

Installation Manual

Compatible Model	CVolvo CXC40
Year	2020-2023



8-ETVL-5004-00-00


1. Points to note

- For safety and to ensure the proper use of product, please ask a professional technician to install. Do not disassemble and install it privately in case of damaging product and installation accidents.
- Please arrange each wiring harness according to the wiring method in this manual, be sure to tie each wiring harness to the vehicle's original wiring harness with cable ties. Make sure the wiring harnesses are not located at the fasteners or screw holes to avoid the wiring harnesses crushed by the vehicle interior trim panel buckles and screws during the installation process.
- Because some of the wiring harness terminals (as shown in the red ellipses below) are not inserted into the wiring harness connectors during manufacture, please insert terminals into the wiring harness connector first to avoid short circuit between terminals after the wiring harnesses have been arranged, then connect other plugs of the wiring harnesses (as shown in the blue ellipses below) with the original plugs.



- Check the function display of instrument panel before installation, whether the button of the vehicle is working properly, whether the doors and windows work properly while opening and closing, whether there are scratches on the internal and external surfaces of the vehicle; and report to the customers in a timely manner if there are any problems.
- During the process of disassembly and assembly, do not carry metal ornaments and other hard objects with you to prevent damage to the paintwork, seats and interior. Be sure to place the removed trim components properly to avoid scratching them.
- All the pictures in this manual are for reference only, vehicle models with different configurations may have different pictures, but the installation methods are the same.

2. Installation tools

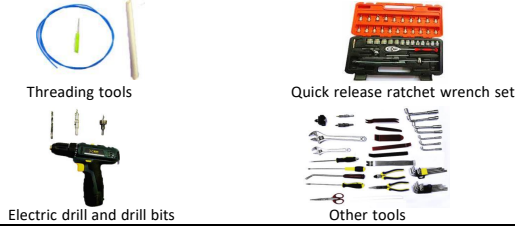

3. Product list

No.	Name	QTY	Picture
①	Strut	2	
②	ECU	1 set	
③	Wiring harness	1 set	
④	Lock latch and actuator	1	
⑤	Added tailgate switch	1	
⑥	Other parts (screws, brackets, etc.)	1 set	Omitted



1. Remove the front left side door sill panels and the switch panel.



2. Remove the rear left side door sill panel and B-pillar trim panel.




3. Remove the trunk floor mat and the door sill panel.



4. Remove the trim panel on the left side of the trunk.




5. Remove the tailgate trim panels.

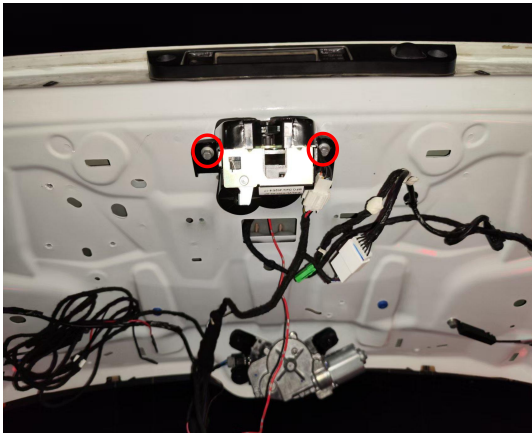

6. Remove the original latch and install our power latch.



7. Route the signal harness to the left side of the trunk.

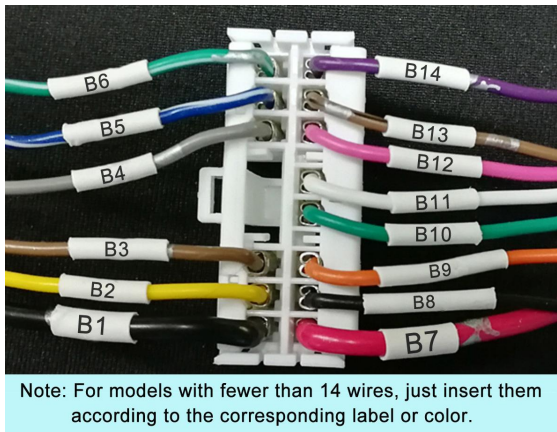


Note: For models with fewer than 14 wires, just insert them according to the corresponding label or color.




9. Remove the tailgate handle switch.



10. Connect the plugs of the lock signal harness to the handle switch.

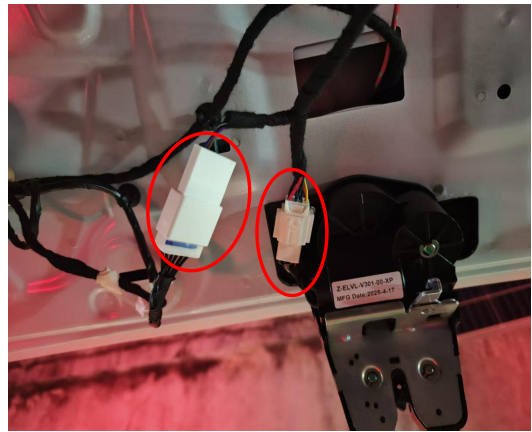


11. Connect the lock signal harness to the plugs of the power latch.

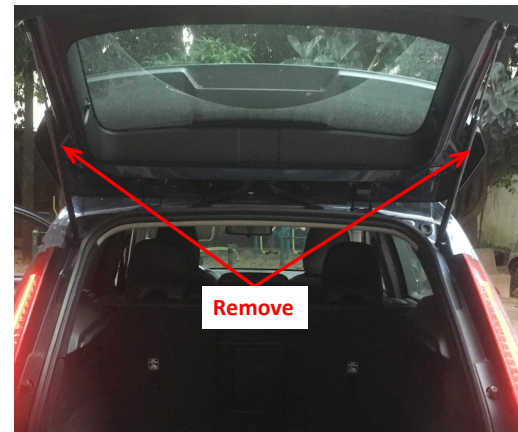

12. Remove the gas struts.



13. Install the electric struts, L on the left and R on the right (the first letter of the strut code).

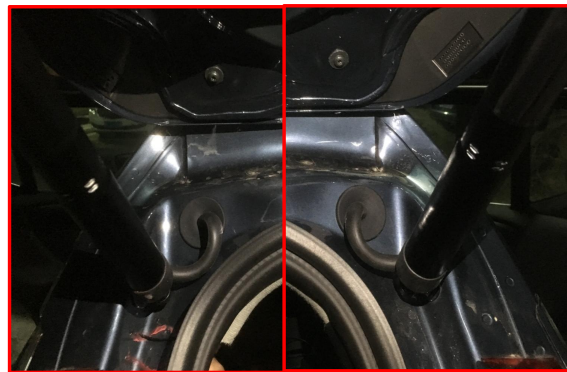

14. Thread the strut wiring harnesses through the reserved holes into the vehicle body.




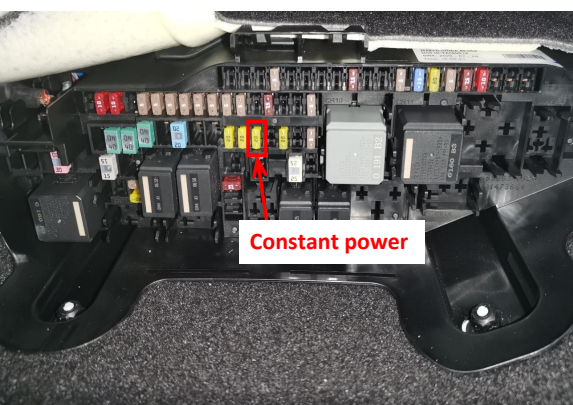
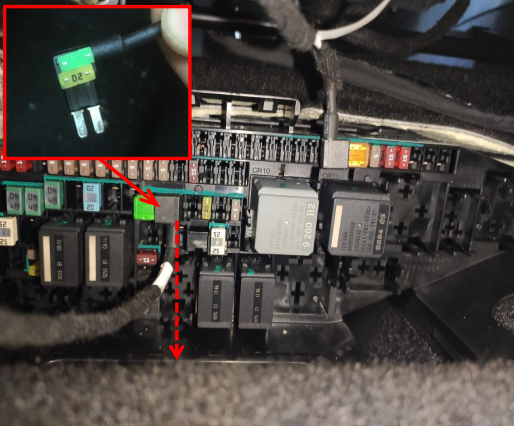
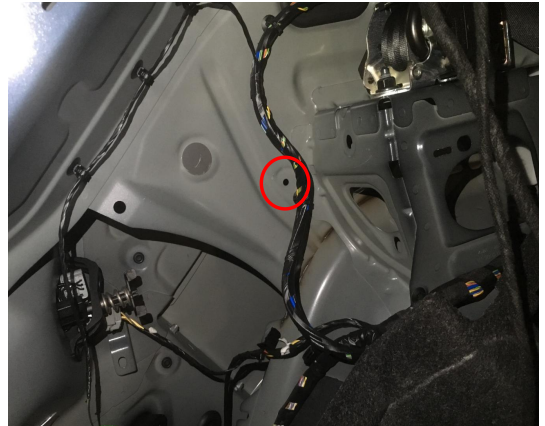

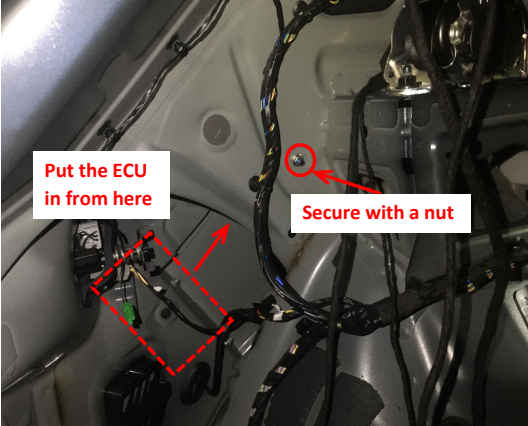




15. Route the strut wiring harnesses as indicated.



16. Route the power harness.



 <p>17. Connect the power harness to the plugs of the front tailgate switch.</p>	 <p>18. Connect the power harness to the indicated CAN plug and its socket</p>	 <p>19. Ground at the left side of the trunk.</p>	 <p>20. The fuse box is located under the driver's seat and the fuse slot for power supply is indicated above.</p>	 <p>21. Move the original fuse from the fuse box to the fuse tap and plug the fuse tap into the fuse box.</p>
 <p>22. Remove the cable clip from the indicated position for the ECU bracket.</p>	 <p>23. Insert the strut wiring harnesses ①②, lock signal harness ③, and power harness ④ into the ECU in sequence and then mount the ECU onto its bracket.</p>	 <p>24. Place the ECU at the indicated position and secure it with a nut.</p>	 <p>25. Initialize the system once and test the functions of the electric tailgate.</p>	 <p>26. Reinstall all trim panels and fit the added tailgate switch in.</p>
<p><b>5. System initialization method</b></p> <p>1. Press the added tailgate switch button to make the tailgate close automatically;</p> <p>2. Press the switch button outside the tailgate to open the tailgate and it will make a long sound of "beep".</p> <p>3. The system initialization is complete.</p> <p><b>6. Instructions for the electric tailgate</b></p> <p>1. Methods to open and close the tailgate:</p> <ul style="list-style-type: none"><li>●Press the unlock button on the remote key 3 times;</li><li>●Press the unlock button at the driver's area 3 times;</li><li>●Press the tailgate handle switch button;</li><li>●Press the added tailgate switch button;</li><li>●Press the front tailgate switch button: press 2 times (press for 1s first, release and wait for 1s, and press again for 1s).</li></ul>	<p>3. Instructions for the added tailgate switch</p> <p>①Closing speed acceleration (5 Settings)</p> <p>1.Press and hold the switch button until hearing the first short beep sound.</p> <p>2.After releasing the button, you will hear a short beep, indicating that the closing speed acceleration has taken effect.</p> <p>3.Repeat this step once to increase by one setting.</p> <p>②Opening speed acceleration (5 Settings)</p> <p>1.Press and hold the switch button until hearing the second short beep sound</p> <p>2. After releasing the button, you will hear two short beeps, indicating that the opening speed acceleration has taken effect.</p> <p>3. Repeat this step once to increase by one setting.</p> <p>③Settings of the voice module</p> <p>1.Press and hold the switch button until hearing the third short beep sound.</p> <p>2.After releasing the button, you will hear three short beeps, indicating that the voice module has entered configuration mode. (For details, see the voice module operation manual)</p> <p>④Block the voice module</p> <p>1.Press and hold the added switch button until hearing the fourth beep sound.</p> <p>2.After releasing the button, you will hear four short beeps indicating that the voice module has been blocked.</p>	<p>⑤Height setting</p> <p>1.Press and hold the switch button until hearing the fifth short beep sound.</p> <p>2.After releasing the button, you will hear a long beep sound indicating that the height setting has taken effect.</p> <p>⑥Switch between quick/slow press of the unlock button on remote key</p> <p>1.Press and hold the switch button until hearing the sixth short beep sound.</p> <p>2.After releasing the button, you will hear a long beep sound and a short beep sound indicating that the switch between quick and slow press of the unlock button has taken effect.</p> <p>⑦Switch between pressing the unlock button twice/three times</p> <p>1.Press and hold the switch button until hearing the seventh short beep sound.</p> <p>2.After releasing the button, you will hear a long beep sound and two short beeps indicating that the switch between pressing the unlock button twice/three times has taken effect.</p> <p>⑧Braking force increase (five settings)</p> <p>1.Press and hold the unlock button until hearing the eighth short beep sound.</p> <p>2.After releasing the button, you will hear a long beep sound and three short beeps indicating that the switch between pressing the unlock button twice/three times has taken effect.</p> <p>3.Repeat this step to increase by one setting.</p>	<p>⑨Restore to factory settings</p> <p>1.Press and hold the unlock button until hearing the ninth short beep sound.</p> <p>2.After releasing the button, you will hear a long beep sound and four short beeps indicating that the restoration to the factory setting has taken effect.</p> <p>4. Meanings of the buzzer sound:</p> <p>"Beep" once: Receiving an open/close or pause signal, the tailgate will immediately open/close or pause;</p> <p>"Beep" twice: The tailgate has been fully opened or closed;</p> <p>"Beep" three times: The resistance during opening or closing the tailgate is too large, and the intelligent anti-pinch has been turned on.</p>	