ACS2.0-4C015W-24PS


Machine vision light controller operating instructions

Version: V1.1

Content

1.	Controller Classification and Naming	1
2.	Specifications	.2
3、	Instructions and Operations	.3
4、	Dimensions	5
Ac	cessory List	6

1、Controller Classification and Naming

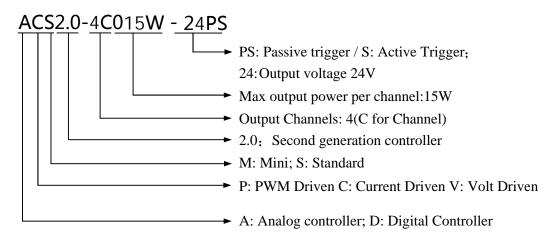

Standard Controller : Supply voltage is AC100~220V

MiniController : Supply voltage is DC24V

Passive trigger: Transmit state signal to the controller channels to trigger and control it from outside.

Active Trigger: Externally trigger the channel switch to ON / OFF (open circuit or short circuit triggers the channel pins).

2、Specifications

Features	Values	Description	
Control Mode	constant current	-	
Input Voltage	24VDC	-	
Channels	4	-	
Adjustable Brightness Level	electrodeless	Adjust by potentiometer	
Single channel output power	15W	-	
External triggering mode	Passive triggering	Effective trigger voltage range: 5-24VDC	
	H, ON→OFF<15us	H:High level trigger; ON and OFF represent the	
External trigger delay time	H, OFF→ON<15us	on and off state of LED light	
External trigger frequency	<1/T	Determined by the strobe time, such as T=1ms, the external trigger frequency rate is at most 1KHz	
	Temperature: -10~50°C		
Working condition	Humidity: 20~80%	-	
Store on vironment	Temperature: -20~70°C	_	
Storage environment	Humidity: 10~90%		
Stand-by power consumption	<3W	-	
Dimension(mm)	135×85×158mm	L×W×H	
weight	0.9Kg	-	

3、Main Functions

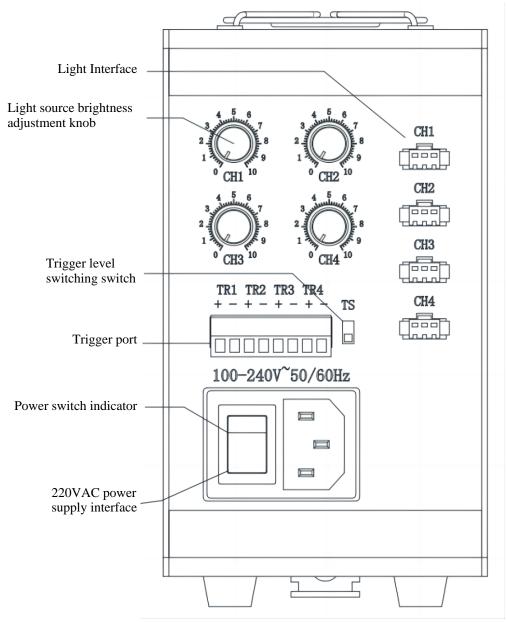


Figure 1 Front panel of the controller

When the controller is connected to the power supply (100-220VAC), turn on the power switch. Under normal working conditions, the power switch indicator light is always on. If the indicator does not light up, please check whether the plug of the input power cord is plugged in or contact our technical staff.

- ➤ CH1: Channel 1 output interface. ➤ CH2: Channel 2 output interface.
- CH3: Channel 3output interface.
- ➢ CH4: Channel 4 output interface.


TS: Trigger the mode switch. TS switch to the left, light source in constant mode;
The TS switch is set to the right, and the light source is in trigger mode (off state).
When a high level external trigger signal is given, the light source lights up. (The brightness adjustment knob must be set enough to light the light source).

➤ TR1+、TR2+、TR3+、TR4+: CH1、CH2、CH3 and CH4 trigger signal line interfaces respectively.

➤ TR1-、TR2-、TR3- and TR4-: internal connection, common terminal of trigger signal line.

The polarity of the common end is different, and the wiring method is different. The wiring diagram is as follows:


Internal wiring diagram of trigger interface:

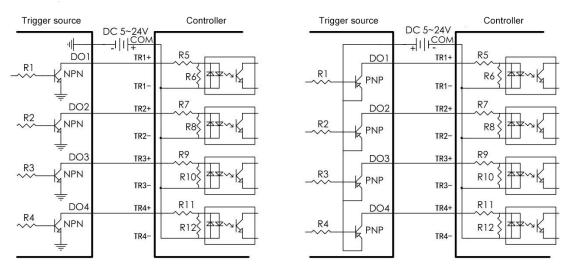

NPN type trigger wiring diagram

PNP type trigger wiring diagram

4, Dimensions

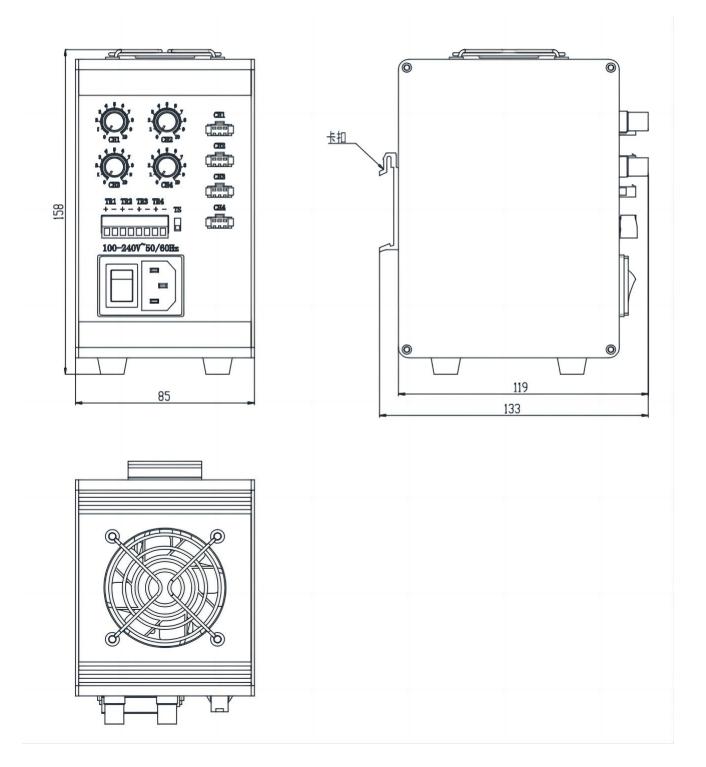

Accessory List

Name	Quantity	Remark
ACS2.0-4C015W-24PS controller	1	
220V/10A power cable	1	
8PINGreen male terminal	1	