

OIL DRUM CHARCOAL GRILL
Assembly instruction

Please check parts against the list below before assembling your Barbecue Grill. Take a few moments to familiarise yourself with the contents. Check that all holes are clear of paint before assembly, if you find a blockage, please use a screw driver to clear the blocked hole.

	Lid handle		1
	Air vent		2
	Lid		1
	Firebowl		1
	Warming rack		1
	Cooking grid		1
	Charcoal grid		1
	Cooking grid handle		2
	Rear left leg		1
0	Front left leg	(a)	1
1	Cross bar		2
2	Rear right leg		1
3	Front right leg		1
4	Cart handle		1
5	Wheel		2

A	Screw M5x50	2
В	Screw M6x16	2
С	Screw M6x25	2
D	Screw M6x45	10
E	Nut M5	2
F	Wing nut M6	10
G	Washer ∅6	14
Н	Lock washer ∅ 6	14
1	Pin Ø8x85	2
J	Cotter pin Ø1.4x30	2

# Screwdriver (not included) and wrench (not included) are required to assemble the

• Dispose of all polythene packing carefully and keep out of the reach of children Please read the section on barbecue safety prior to using your Barbecue. Two people are recommended for assembly.


Please read all instructions carefully and keep outer packaging to refer to photograph of finished product in case


Α	Screw M5x50	2	
В	Screw M6x16	2	
С	Screw M6x25	2	
D	Screw M6x45	10	
Е	Nut M5	2	
F	Wing nut M6	10	
G	Washer ∅6	14	
Н	Lock washer ∅ 6	14	
1	Pin Ø8x85	2	
J	Cotter pin Ø1.4x30	2	

Please read all instructions thoroughly before proceeding. Find a large, clean area in which to assemble your barbecue. Please refer to parts list and assembly diagram as necessary. Assembly of the barbecue involves many large components, it is advisable to have two people assemble the unit. A: Attach lid handle (1) to lid (3) ((C) Screw 2Pcs / (H) Lock washer 2Pcs / (G) Washer 2Pcs).

2Pcs / (F) Wing nut 2Pcs).


A: Attach cross bar (11) to rear left leg (9), rear right leg (12) ((D) Screw 2Pcs / (G) Washer 2Pcs / (H) Lock washer 2Pcs / (F) Wing nut 2Pcs). A: Attach cross bar (11) to front left leg (10), front right leg (13) ((D) Screw 2Pcs / (G) Washer 2Pcs / (H) Lock washer

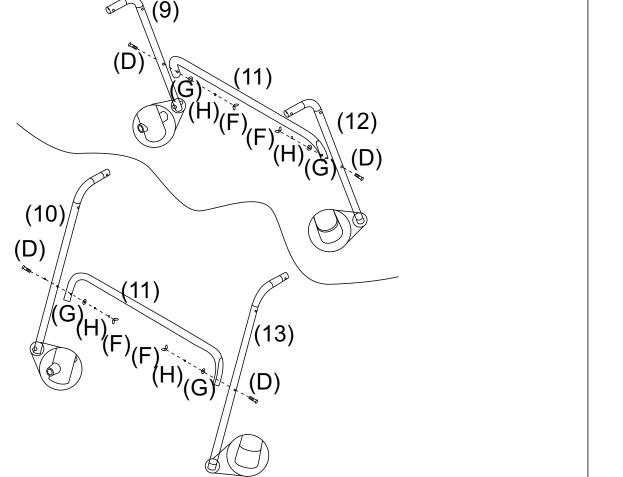

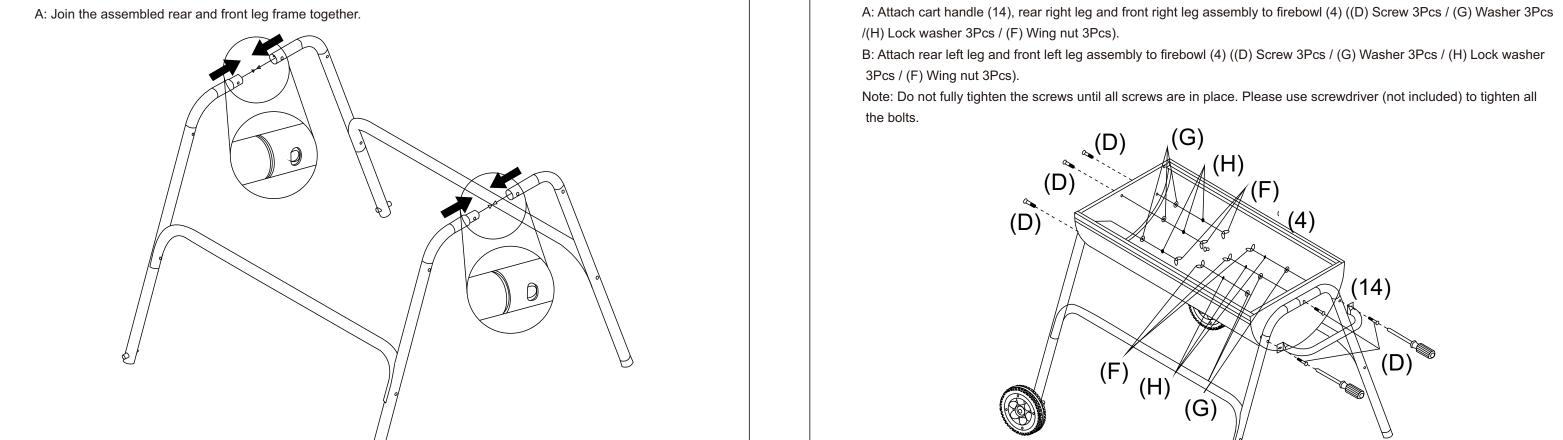


A: Attach wheel (15) onto rear left leg and front left leg ((I) Pin 2Pcs / (J) Cotter pin 2Pcs).

A: Attach lid to firebowl ((G) Washer 2Pcs / (H) Lock washer 2Pcs / (B) Screw 2Pcs). Note: Do not fully tighten the screws until all screws are in place.

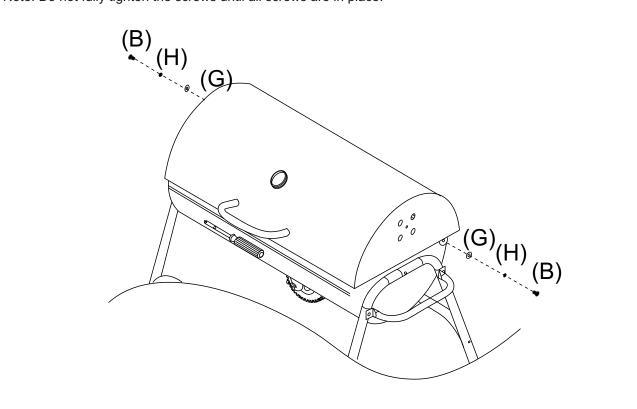

/(H) Lock washer 3Pcs / (F) Wing nut 3Pcs). B: Attach rear left leg and front left leg assembly to firebowl (4) ((D) Screw 3Pcs / (G) Washer 3Pcs / (H) Lock washer 3Pcs / (F) Wing nut 3Pcs).

Note: Do not fully tighten the screws until all screws are in place. Please use screwdriver (not included) to tighten all

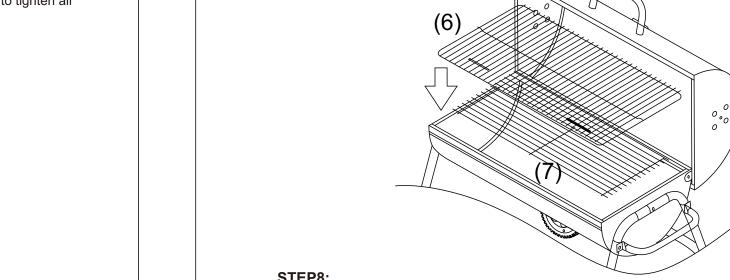


A: Place charcoal grid (7) inside the firebowl.

B: Place cooking grid (6) on the firebowl

Note: Use screwdriver (not included) and wrench (not included) to tighten the screws and nuts.

A: Attach air vent (2) and warming rack (5) to lid ((A)Screw 2Pcs / (E) Nut 2Pcs).

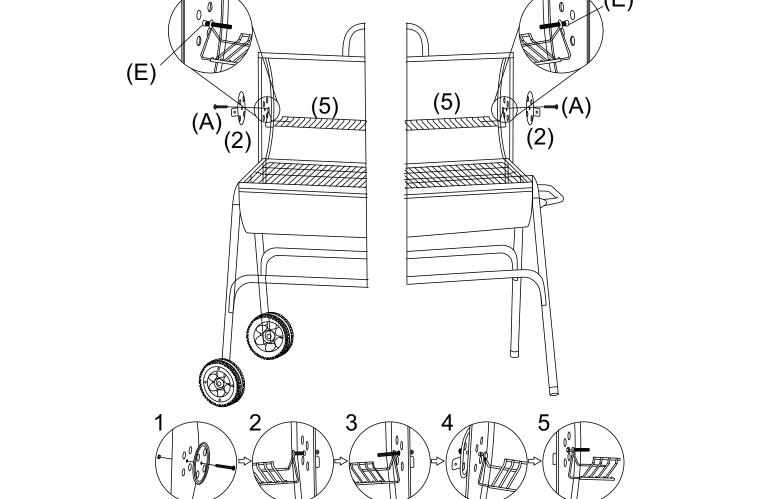

### Instructions for use

Important: Read all the assembly instructions and safety warnings before use and keep these instructions in a safe place for future reference.

1. Make sure the assembly instructions have been followed correctly. 2. Set the barbecue up in a suitable position, on a level surface away from areas likely to catch fire.

3. Use charcoal and a suitable lighting method.

4. When you need to add charcoal or adjust the air vent, please use cooking grid handle (8) to remove the cooking grid or adjust the air vent by using the cooking grid handle (8) as shown in below diagrams. Never touch the cooking grid or air vent by hand directly when the barbecue is hot or in use.



Important: Read all the safety warnings and assembly instructions before use and retain all information for future

1. WARNING! BARBECUES SHOULD NEVER BE USED INDOORS. Only use the barbecue in the open air. Risk to life from fumes when used in an enclosed space. 2. Never take a barbecue - or lit charcoal into an enclosed space, like a tent or caravan. Barbecues in enclosed

spaces are lethal. The carbon monoxide from a badly adjusted barbecue can kill. 3. This barbecue will become very hot, do not move it during operation. Keep children and animals away. Keep away

from flammable objects and materials. 4. Even though great care and attention has been taken to remove sharp edges, you should take care when

handling components to avoid possible injury. The barbecue should be heated until the fuel is red hot at least 30 minutes before cooking.

5. Always stand your barbecue outdoors and on a level ground away from trees and wooden fencing. 6.CAUTION! Do not use spirit or petrol for lighting or re-lighting. Use only firelighters complying with

7. Do not light the fire with petrol, paraffin, methylated spirit, lighter fuel or alcohol. 8. Use specially formulated BBQ lighting fluid, paste or fire lighters.

9. Do not attempt to light the fire if lighting fluid has been spilt on clothing.

10. Do not try to re-light the fire with lighting fluid as the charcoal may still be hot and cause a flare up. 11. Never touch metal parts which may be hot.

12. During use always use protective gloves when touching any part of the barbecue. 13. Make sure the barbecue has completely cooled before removing the ash.

14. Keep a water sprayer handy to extinguish the flame.

Keep a fire extinguisher or fire blanket handy.

16. Never handle charcoal after lighting.

17. Never attempt to move the barbecue after the charcoal has been lit, as it will become very hot. Always wait until the barbecue has been completely cooled before attempting to move it.

### 20. Prevent CO poisoning, Make sure exhaust from generators is properly vented away from occupied areas. Carb Monoxide (CO) is a colourless, odourless, highly poisonous gas that can kill in minutes. Carbon Monoxide poisoning

Danger of carbon monoxide poisoning fatality.

18. Do NOT operate, light or use this appliance within ten feet (3.05m) or walls, structures or buildings.

19. Minimum clearance from sides and back of unit to combustible constructions is 91.4 cm.

trees and other flammable materials. can be caused by ANY fuel that burns or smoulders. Watch out for the symptoms - Mild headache / Dizziness / Nausea Vomiting / Fatigue / Drowsiness.

21. WARNING! MAXIMUM CHARCOAL WEIGHT to be used: TOTAL 2.0 kg.



22. Do not use the barbecue in a confined and/or habitable space e.g. houses, tent, caravans, motor homes, boats 9. Most metal parts will become very hot during use. The use of protective mittens/gloves is recommended wher

Barbecue safety hints

Outdoor use only.

10. Flare-ups will occur when the hot fat from food drips onto the charcoal. Keep a jet water sprayer at hand to extinguish any flames and prevent food from burning.

12. Remember, ensure the charcoal has completely cooled before attempting to empty the barbecue and clean it. 13. To prolong the life of the metal parts, do not leave the barbecue outside and unprotected from the weather. Ideally

Remember to leave ventilation holes clear by piercing the foil where necessary.

2. Charcoal is available in lump wood form (large irregular pieces) and as briquets (uniformly sized pieces). As a briquets are more suitable for a roast as they burn longer and hotter.

3. It is not advisable to completely fill the firebowl as the barbecue may become far too hot to cook successfully 4. If the fire flares up due to dripping fat then douse the flames lightly with a fine water spray.

5. When you have finished cooking never pour cold water directly on the coals to extinguish them as this may

6. To clean your barbecue soak the cooking grill and tools in hot soapy water as soon as possible after use. Dry

thoroughly and store in a dry place. Do not leave your barbecue outside unprotected.

2. Always stand your barbecue on firm, level and heat-resist surface, well away from wooden fences, overhanging

3. The barbecue must always be under the control of a competent adult. Keep young children and pets at a safe

distance once the charcoal has ignited.

4. Never use white spirit, paraffin, petrol, methylated spirit, lighter fuel or similar solvents to light the barbecue.

To help ignition, only use firelighters that comply with EN 1860-3. Never add lighting fuel, once the charcoal 5. Never attempt to move the barbecue after the charcoal has been lit, as it will become very hot. Always wait until the

barbecue has completely cooled before attempting to move it. 6. Do not leave a lighted barbecue unattended, even for the shortest period of time.

7. The barbecue should be heated up and the fuel kept red hot for at least 30 minutes prior to the first cooking on the

8. Do not cook before the fuel has a coating of ash.

handling the grill, turning food, etc.

11. When cooking has finished, extinguish the charcoal using a fine water spray or by covering with sand.

it should be stored in a garage or garden shed when not in use. 14. If the product is broken or damaged discontinue use immediately.

## Barbecue helpful hints

1. To make it easier to clean your barbecue after use line the firebowl with aluminum cooking foil, shine side up.

guide lump-wood charcoal is best in barbecue for quickly cooked foods such as sausages and burgers whilst

damage your barbecue. Use old cinders, sand or a fine water spray.