



The grill can only be used with charcoal, no wood.

Intended use

The grill is designed exclusively for grilling food (meat, fish, vegetables, etc.) over charcoal or charcoal briquettes. The device is not designed for commercial use.

Any other use that is not described in these operating instructions is unauthorized misuse. The manufacturer is not liable for any damage resulting therefrom.

Basic security instructions

To ensure safe use of the device, the user of the device must have read and understood these operating instructions before using it for the first time.

Generally recognized accident prevention regulations and accompanying safety instructions must be observed. If you disregard the safety instructions, you endanger yourself and others.

The device may only be used

- if it is properly and completely assembled.
- if the device or part of it is defective, it must be taken out of service and professionally repaired or disposed of.
- Keep children away from the device!

Do not let the device fall into the hands of unauthorized persons. Always with caution and only good working consumption: fireproofness, illness, consumption of alcohol, the influence of medication and drugs are irresponsible, as you can no longer use the device safely.

This device is not intended to be used by persons (including children) with impaired physical, sensory or mental abilities or lack of experience and/or knowledge, unless they are authorized

to do so by someone responsible for safety supervision or received instructions from them on how to device.

Always ensure that children do not use the device.

- Always observe the applicable and international safety health regulations.
- Keep these instructions for future reference.
- If you sell the device or pass it on, make sure you also hand over these instructions.

Safety when setting up

- Only use this grill on a hard, non-flammable and stable surface (concrete, ground, etc.) that can withstand the weight of the grill.
- Use the grill on wooden or other flammable surfaces.
- When the grill is in use, keep several meters away from buildings or flammable materials (sheds, trees, floors, fences, buildings, flammable liquids or gases).
- Only use the grill outdoors in ventilated place! Do not place under a roof overhanging or over enclosed areas (e.g. garage, porch).
- Do not use in closed rooms! Do not use in a room with a door to an accumulation of toxic vapors can lead to serious injuries or even death. Do not use the grill in an outdoor area. The grill must not be strong winds. Place the grill on a flat surface. Pets cannot come too close.
- Use care when assembling and disassembling the grill. Do not let your grill get hot! Avoid scratching or

the sharp edges of the metal parts.

- Be careful when you put your hand in or under the grill. We recommend having a fire extinguisher ready in case you are the responsible authorities to find out the correct size and design of the fire alder. Completely water the area under the grill and around the grill with a water hose to get rid of any coal or embers that may have fallen during the grilling.

Safety in use

- Remove all stickers and labels from the grill before using it for the first time.
- For open and closed grills and also for permanently installed grills Do not operate the grill in closed and / or habitable areas, e.g. buildings, tents, caravans, mobile homes, boats. There is danger to life from carbon monoxide poisoning.
- Use care and caution when using your barbecue.

DANGER! This grill device gets very hot and must not be moved during operation. Block the grill to prevent it from accidentally moving.

- Use heat-resistant protective gloves during use. Do not touch any sacred surfaces of the grill. Do not wear loose clothing. Wear sleeves catch fire quickly. Be careful not to let your hair come into contact with the grill.

DANGER! Keep children and pets away. Do not leave the grill unattended while it is in use.

- Only use the grill with the charcoal grates in place. The charcoal grate must

not be removed with hot charcoal. Be careful with Adjusting the height: the holder can be hot

- The grill may only be used when it is fully assembled. Add chemicals that have not been manufactured by us for this special product are not recommended and can lead to personal injury or property damage.

- Before using the grill: for the first time, heat it up and keep the fuel hot for at least 30 minutes before grilling for the first time.
- As a matter of principle, do not use charcoal that has been pre-treated with liquid tender. Use only a high-quality, pure charcoal, charcoal briquette or charcoal-wood mixture.