

AMCP Smart Optimizer


Installation Guide

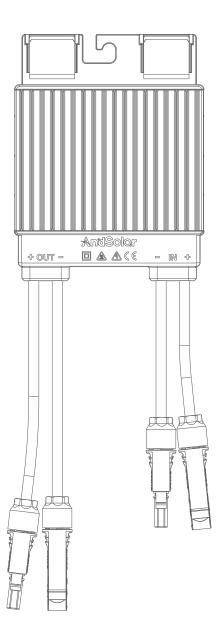

Please read this guide carefully before installation and use Please follow the precautions in the installation guide


Product introduction

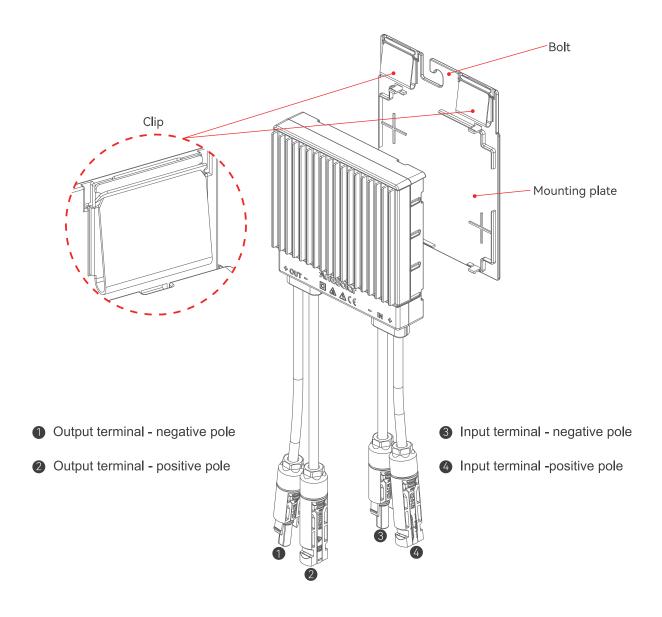

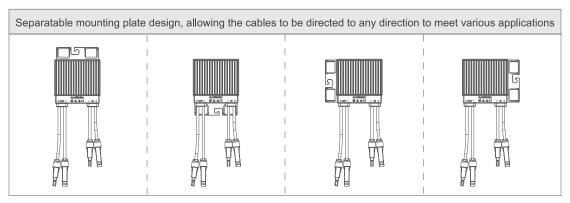



AndSolor AMCP Installation Guide

2 Installation

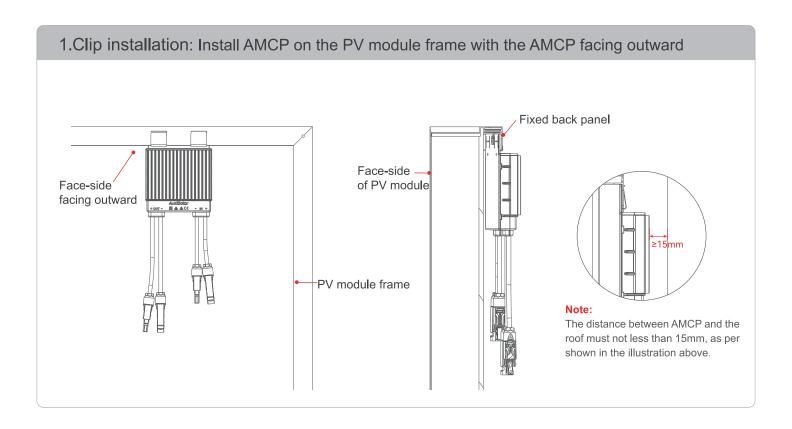



2.Bolt installation: Install AMCP on the PV module frame or stand using T-bolts

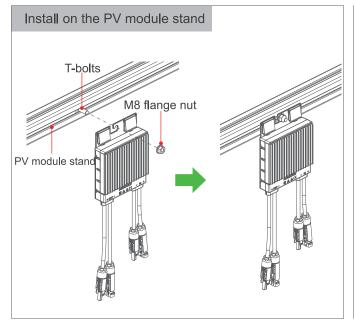

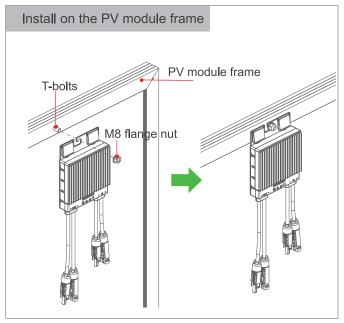

3 Cable installation

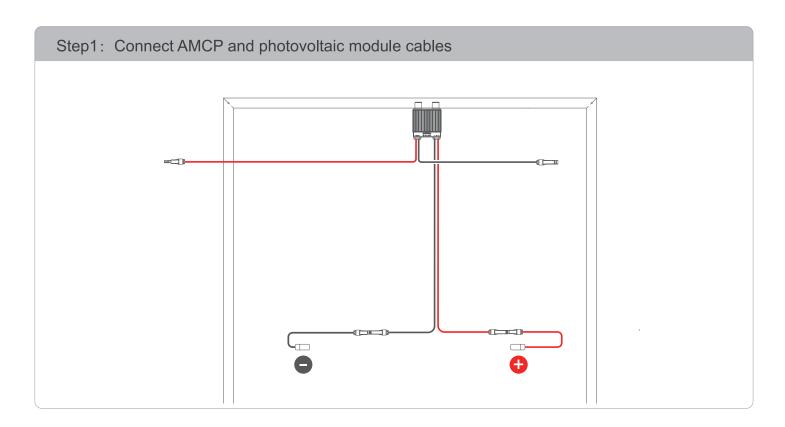

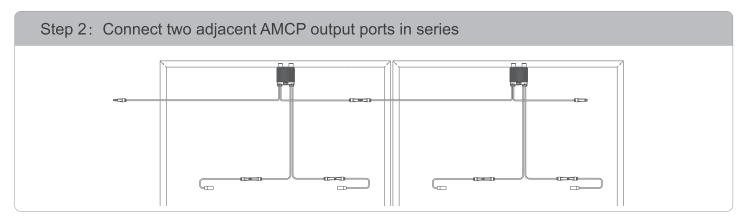

Precautions:

- 1、 Please do not short-circuit the AMCP output port, otherwise it will damage the AMCP;
- 2. When installing AMCP, please first connect the PV modules to the AMCP input port, and then connect the output ports of two adjacent AMCPs in series;
- 3. If you need to disconnect AMCP, please disconnect the adjacent AMCP output port first, and then disconnect the input port of AMCP and photovoltaic module;
- 4. Do not use AMCP with different types of DC connectors, otherwise it may cause damage to AMCP and this damage is not covered by the warranty;
- 5. It is recommended to use male and female ports of the same brand.

AndSolar

AndSolar Technology Co., Ltd.

- **☎** +86-512-8718 7881
- www.andsolartech.com
- sales@andsolartech.com