

驱动器参数RS485通讯地址对照表

Drive parameter RS485 communication address comparison table

PA group parameters								
parameter number decimal	parameter address		parameter number decimal	parameter address		parameter number decimal	parameter address	
	hexadecimal	octal		hexadecimal	octal		hexadecimal	octal
0	0X0000	0	37	0X0025	45	74	0X004A	112
1	0X0001	1	38	0X0026	46	75	0X004B	113
2	0X0002	2	39	0X0027	47	76	0X004C	114
3	0X0003	3	40	0X0028	50	77	0X004D	115
4	0X0004	4	41	0X0029	51	78	0X004E	116
5	0X0005	5	42	0X002A	52	79	0X004F	117
6	0X0006	6	43	0X002B	53	80	0X0050	120
7	0X0007	7	44	0X002C	54	81	0X0051	121
8	0X0008	10	45	0X002D	55	82	0X0052	122
9	0X0009	11	46	0X002E	56	83	0X0053	123
10	0X000A	12	47	0X002F	57	84	0X0054	124
11	0X000B	13	48	0X0030	60	85	0X0055	125
12	0X000C	14	49	0X0031	61	86	0X0056	126
13	0X000D	15	50	0X0032	62	87	0X0057	127
14	0X000E	16	51	0X0033	63	88	0X0058	130
15	0X000F	17	52	0X0034	64	89	0X0059	131
16	0X0010	20	53	0X0035	65	90	0X005A	132
17	0X0011	21	54	0X0036	66	91	0X005B	133
18	0X0012	22	55	0X0037	67	92	0X005C	134
19	0X0013	23	56	0X0038	70	93	0X005D	135
20	0X0014	24	57	0X0039	71	94	0X005E	136
21	0X0015	25	58	0X003A	72	95	0X005F	137
22	0X0016	26	59	0X003B	73	96	0X0060	140
23	0X0017	27	60	0X003C	74	97	0X0061	141
24	0X0018	30	61	0X003D	75	98	0X0062	142
25	0X0019	31	62	0X003E	76	99	0X0063	143
26	0X001A	32	63	0X003F	77	100	0X0064	144
27	0X001B	33	64	0X0040	100	101	0X0065	145
28	0X001C	34	65	0X0041	101	102	0X0066	146
29	0X001D	35	66	0X0042	102	103	0X0067	147
30	0X001E	36	67	0X0043	103	104	0X0068	150
31	0X001F	37	68	0X0044	104	107	0X006B	153
32	0X0020	40	69	0X0045	105			
33	0X0021	41	70	0X0046	106	252	0X00FC	374
34	0X0022	42	71	0X0047	107	253	0X00FD	375
35	0X0023	43	72	0X0048	110	254	0X00FE	376
36	0X0024	44	73	0X0049	111	255	0X00FF	377

Note: The octal address is the communication address for Modbus "Debug Wizard"

驱动器参数RS485通讯地址对照表

P3 group parameters								
parameter number decimal	parameter address		parameter number decimal	parameter address		parameter number decimal	parameter address	
	hexadecimal	octal		hexadecimal	octal		hexadecimal	octal
0	0X0100H	400	16	0X0110H	420	32	0X0120H	440
1	0X0101H	401	17	0X0111H	421	33	0X0121H	441
2	0X0102H	402	18	0X0112H	422	34	0X0122H	442
3	0X0103H	403	19	0X0113H	423	35	0X0123H	443
4	0X0104H	404	20	0X0114H	424	36	0X0124H	444
5	0X0105H	405	21	0X0115H	425	37	0X0125H	445
6	0X0106H	406	22	0X0116H	426	38	0X0126H	446
7	0X0107H	407	23	0X0117H	427	39	0X0127H	447
8	0X0108H	410	24	0X0118H	430	40	0X0128H	450
9	0X0109H	411	25	0X0119H	431	41	0X0129H	451
10	0X010AH	412	26	0X011AH	432	42	0X012AH	452
11	0X010BH	413	27	0X011BH	433	43	0X012BH	453
12	0X010CH	414	28	0X011CH	434	44	0X012DH	454
13	0X010DH	415	29	0X011DH	435	45	0X012DH	455
14	0X010EH	416	30	0X011EH	436			
15	0X010FH	417	31	0X011FH	437			

Note: The octal address is the communication address for Modbus "Debug Wizard"

驱动器参数RS485通讯地址对照表

P4 group parameters								
parameter number decimal	parameter address		parameter number decimal	parameter address		parameter number decimal	parameter address	
	hexadecimal	octal		hexadecimal	octal		hexadecimal	octal
0	0X0200H	1000	16	0X0210H	1020	32	0X0220H	1040
1	0X0201H	1001	17	0X0211H	1021	33	0X0221H	1041
2	0X0202H	1002	18	0X0212H	1022	34	0X0222H	1042
3	0X0203H	1003	19	0X0213H	1023	35	0X0223H	1043
4	0X0204H	1004	20	0X0214H	1024	36	0X0224H	1044
5	0X0205H	1005	21	0X0215H	1025	37	0X0225H	1045
6	0X0206H	1006	22	0X0216H	1026	38	0X0226H	1046
7	0X0207H	1007	23	0X0217H	1027	39	0X0227H	1047
8	0X0208H	1010	24	0X0218H	1030			
9	0X0209H	1011	25	0X0219H	1031			
10	0X020AH	1012	26	0X021AH	1032			
11	0X020BH	1013	27	0X021BH	1033			
12	0X020CH	1014	28	0X021CH	1034			
13	0X020DH	1015	29	0X021DH	1035			
14	0X020EH	1016	30	0X021EH	1036			
15	0X020FH	1017	31	0X021FH	1037			

Note: The octal address is the communication address for Modbus "Debug Wizard"