


# Operator's Manual HIGH PRESSURE CLEANER

**C503-1800D**

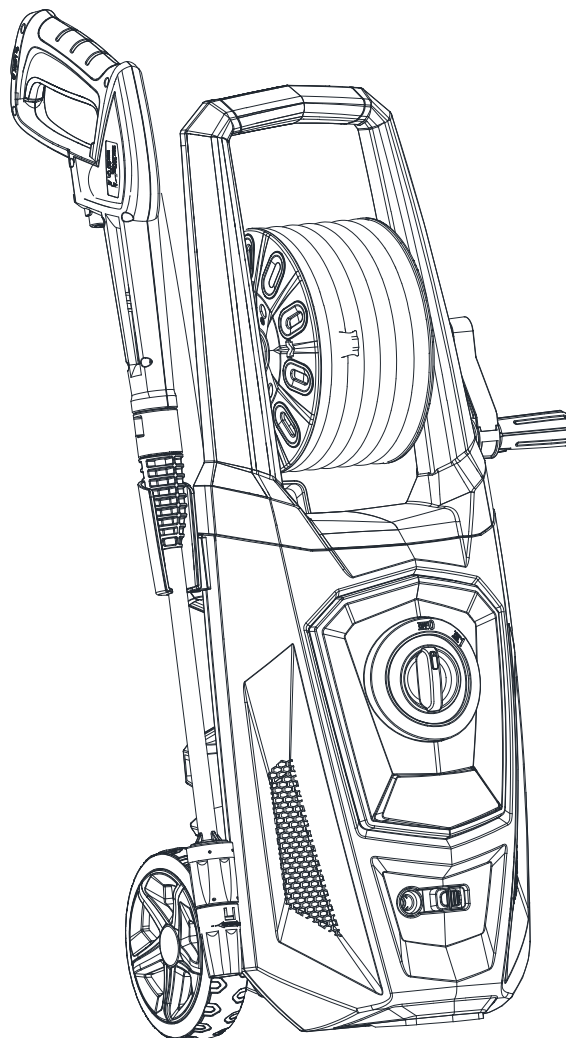

---

**WARNING:** Read the instructions before using the machine.



# Contents

| <b><u>Section</u></b>              | <b><u>Page</u></b> |
|------------------------------------|--------------------|
| Important Safety Precautions, Tips | 2                  |
| Warnings, and Usage Instructions   | 3-5                |
| Assembly Instructions              | 6-9                |
| Operating Instructions             | 10-12              |
| Using Detergents                   | 13                 |
| Clean-up and Storage               | 14                 |
| Cleaning Tips                      | 15                 |
| Technical data                     | 16                 |
| Troubleshooting Tips               | 17                 |
| CE Declaration                     | 18                 |

# IMPORTANT SAFETY TIPS

|  |
|--|
| <b><u>Never</u></b> point the high-pressure nozzle at people or animals.             |
| <b><u>Never</u></b> drink alcohol or use drugs while operating the pressure cleaner. |
| <b><u>Never</u></b> operate the pressure cleaner while standing in water.            |
| <b><u>Never</u></b> touch the electrical plug with wet hands.                        |
| <b><u>Never</u></b> let electrical connections rest in water.                        |
| <b><u>Never</u></b> operate pressure cleaner without the water turned on.            |
| <b><u>Never</u></b> use hot water with this pressure cleaner.                        |

# IMPORTANT SAFETY PRECAUTIONS

**WARNING:** When using this product, basic precautions should always be followed, including the following:


 



|   |
|---|
| 1. Read all instructions before using the product. Save all safety instructions.  |
| 2. Do not operate the pressure cleaner when fatigued or under the influence of alcohol or drugs.                        |
| 3. Risk of injection or injury – do not direct the high pressure water stream at any people or animals.                 |
| 4. Do not allow children to operate the pressure cleaner at any time.   |
| 5. To reduce the risk of injury, close supervision is necessary when the pressure cleaner is used near children.        |
| 6. Know how to stop the unit and reduce pressure immediately. Be completely familiar with the controls.                 |
| 7. Stay alert – always be aware of where you are directing the high pressure spray                                      |
| 8. Keep cleaning area clear of all people.  |
| 9. Keep good footing and balance at all times – do not overreach or stand on an unstable support.                       |
| 10. The work area should have adequate drainage to reduce the possibility of a fall due to slippery surfaces.           |
| 11. Follow the maintenance instructions specified in the manual.  |
| 12. To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch plug with wet hands. |







# GENERAL SAFETY PRECAUTIONS

|    |   |
|----|---|
| 1. | Intended for outdoor household use only.  |
| 2. | High-pressure hose can develop leaks from wear, abuse, kinking etc. Do not use a damaged hose.  |
| 3. | Do not use the pressure cleaner in areas near combustible materials, combustible fumes, or dust.  |
| 4. | Some chemicals or detergents may be harmful if inhaled or ingested causing severe injury. Use a respirator or mask whenever there is a chance that vapors may be inhaled. Read all instructions included with the mask so you are certain the mask will provide the necessary protection against inhaling harmful vapors. |
| 5. | Before starting the pressure cleaner in cold weather, check all of the parts of the equipment and be sure that ice has not formed. Do not store the unit anywhere that the temperature will fall below 0 °C (32 °F).  |
| 6. | DO NOT MAKE ANY MODIFICATIONS TO ANY OF THE COMPONENTS! Units with broken or missing parts, or without the protective housing or covers should NEVER be operated  |
| 7. | Keep the high-pressure hose connected to the pressure cleaner and the spray gun while the system is pressurized. Disconnecting the hose while the unit is pressurized is dangerous, and may cause injury.   |
| 8. | Do not leave the pressure cleaner unattended while the power switch is ON.  |
| 9. | Keep water spray away from electrical wiring or fatal electric shock may result.  |


## SYMBOLS

The labels on your tools and manual may show symbols. These represent important information about the product or instruction on its use.

|   |  |
|---|--|
|  | Indicates a potential personal injury hazard.  |
|  | Double-insulated construction.   |
|  | Do not expose to rain or use in damp locations.  |
|  | To reduce the risk of injury, user must read and understand operator's manual before using this product.                         |
|  | Always wear safety goggles or safety glasses with side shields and as necessary, a full face shield when operating this product. |

|  |   |
|--|---|
|   | To reduce the risk of injection or injury, never direct a water stream towards people or pets or place any body part in the stream.<br>Leaking hoses and fittings are also capable of causing injection injury.<br>Do not hold hoses or fittings. |
|   | To reduce the risk of injury from kickback, hold the spray lance securely with both hands when the machine is on.   |
|   | Failure to use in dry conditions and to observe safe practices can result in electric shock.  |
|   | Warning! Never point the gun to human, animals, the machine body, power supply or any electric appliances.  |
|   | Machine not intended to be connected to the potable water mains.  |
|  | Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority or retailer for recycling advice.  |

## SERVICING OF A DOUBLE-INSULATED APPLIANCE

In a double-insulated product, two systems of insulation are provided instead of grounding. No means of grounding is provided on a double-insulated product, nor should a means for grounding be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace. A double-insulated product is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED". This symbol  may also be marked on the product.

# USE OF EXTENSION CORDS

Use of an extension cord with this product is NOT RECOMMENDED. If you must use an extension cord, use only extension cords that are intended for outdoor use. These cords are identified by a marking "ACCEPTABLE FOR USE WITH OUTDOOR APPLIANCES, STORE INDOORS WHILE NOT IN USE." Use only extension cords having an electrical rating not less than the rating of the product. Examine extension cord before use. DO NOT USE DAMAGED EXTENSION CORDS! Do not pull on cord to disconnect from receptacle, always disconnect by pulling on plug. Keep cord away from heat and sharp edges. Always disconnect the extension cord from the receptacle before disconnecting the product from the extension cord.

**WARNING** – To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch the plug with wet hands.

- Do not use the appliance if a supply cord or important parts of the appliance are damaged, e.g. safety devices, high pressure hoses, trigger gun.
- If an extension cord is used, the plug and socket must be of watertight construction.
- WARNING: Inadequate extension cords can be dangerous.
- Remove the plug from the socket-outlet during cleaning or maintenance and when replacing parts or converting the machine to another function.

# PROPER USE OF THE PRESSURE CLEANER

***THIS UNIT IS INTENDED FOR USE WITH COLD WATER ONLY!  
DO NOT USE HOT WATER IN THIS PRESSURE CLEANER.***


|    |   |
|----|---|
| 1. | Operate the pressure cleaner at no more than the fluid pressure rated for the pressure cleaner. Never run the pressure cleaner without a water supply. Running the unit without a water supply will cause irreparable damage to the unit.   |
| 2. | Make sure that the water supply you use for the pressure cleaner is not dirty, sandy, and does not hold any corrosive chemical products. Using a dirty water supply will compromise the long life of the pressure cleaner.  |
| 3. | CAUTION - The pressure cleaner can be used for a variety of applications including washing cars, boats, patios, decks, garages etc. where high pressure is necessary to remove dirt and debris.<br><b>High-pressure water flow can damage the work surface if not used properly!</b> See the section titled "Operating Instructions" for more details. Always test the spray in an open area first. |
| 4. | NEVER move the unit by pulling on the high pressure hose. Use the handle provided on the top of the unit.   |
| 5. | Always hold the high pressure gun and wand with two hands. Keep one hand on the gun/trigger, while supporting the wand with the other hand (see diagram).   |
| 6. | When dispensing detergent, the pressure cleaner applies detergent to the cleaning area at low pressure only. Once the detergent has been applied, spray the detergent off of the work area by using the adjustable nozzle.  |

# ASSEMBLY INSTRUCTIONS

## Unpacking The Carton

After opening the carton, please remove all parts and check them against the following list of components that are included:


- |                             |                          |
|-----------------------------|--------------------------|
| A. Volume tube rounds       | B. Gun Holder            |
| C. Switch                   | D. Cleaning pin          |
| E. High pressure pipe clamp | F. Water inlet connector |
| G. High Pressure Hose       | H. Gun                   |
| I. Adjustable Nozzle        | J. Crank                 |

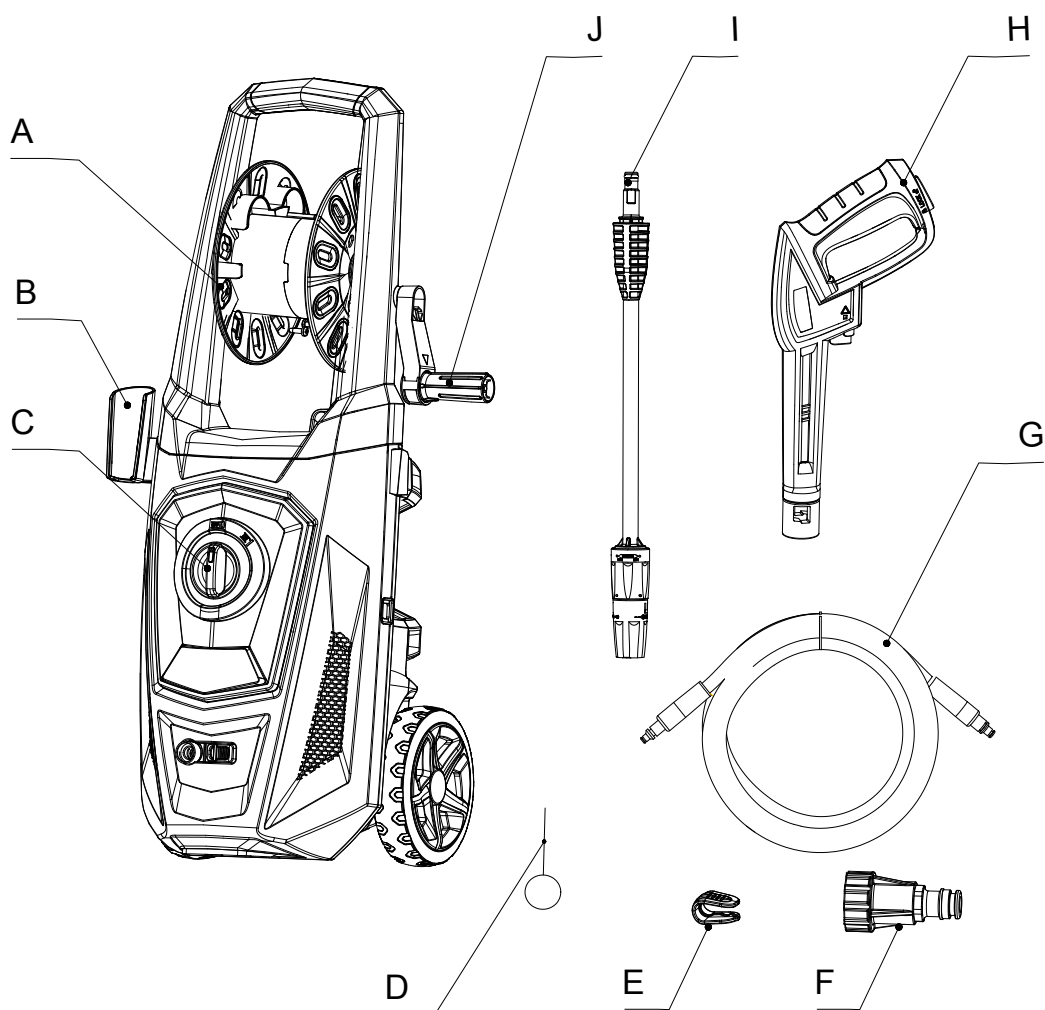

Due to transportation and packaging, some of the accessories may be supplied disassembled. Please follow the assembly instructions.



## Step 1

Install gun hook , gun holder tight to the main body as below fig.

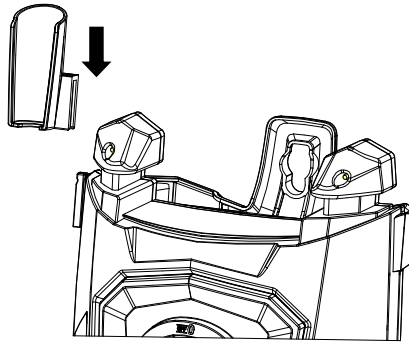



## Step 2

Screw the washer handle tight to the main body as below fig. The screws will be packed together with the main body, pls kindly check and find it when unpacked.

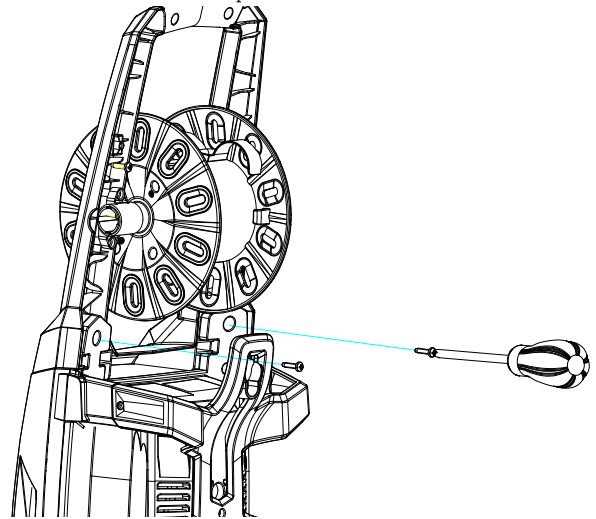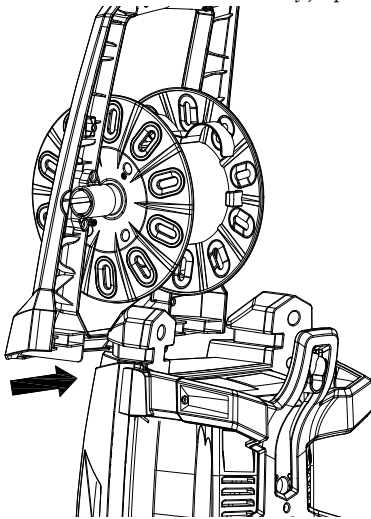

## Step 3


Insert crank, load the handle onto the host machine as shown.

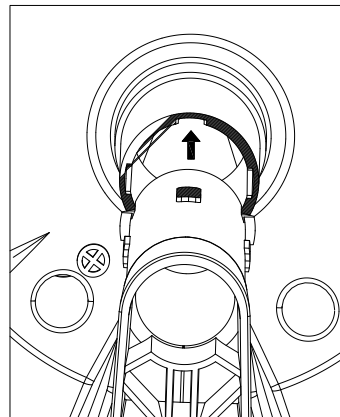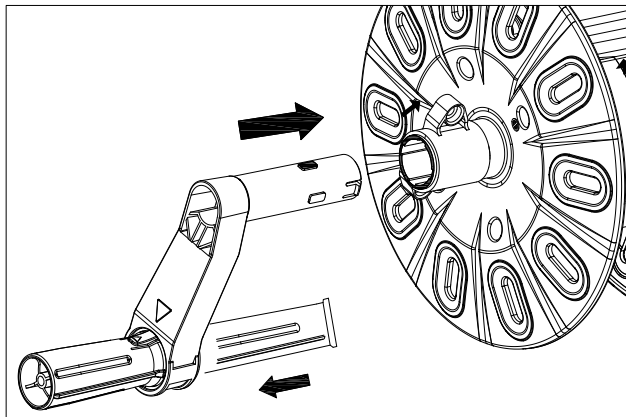




## Step 4

Insert the adjustable spray nozzle(I) into the gun. Push and turn the adjustable nozzle clockwise onto the gun(H) until hand tight to lock it in place. When the pieces are joined properly, you cannot separate the two components by pulling straight out on the adjustable nozzle. All attachments must be inserted into the gun for proper use.

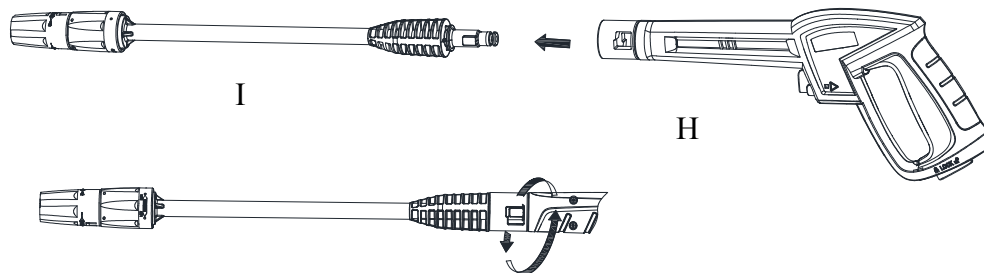


## Step 5

Remove the high-pressure tube. attach the high pressure hose(G) to the gun(H). Insert and quick-connect it tight to avoid leakage. When the pieces are joined properly, you cannot separate the two components by pulling straight out from the gun(H). Push the hose lock button, then you can pull out high pressure washer.

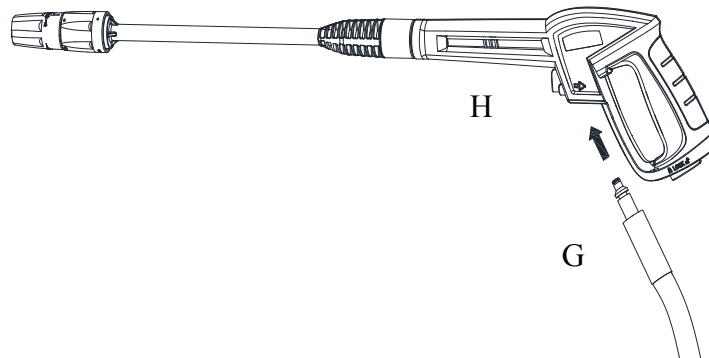


## Step 6

Attach the high pressure hose(G) to the pressure cleaner water outlet. Insert and quick-connect it tight to avoid leakage. When the pieces are joined properly, you cannot separate the two components by pulling straight out from the water outlet. Push the “Button” according to the direction of arrow, then you can pull out the high pressure hose.

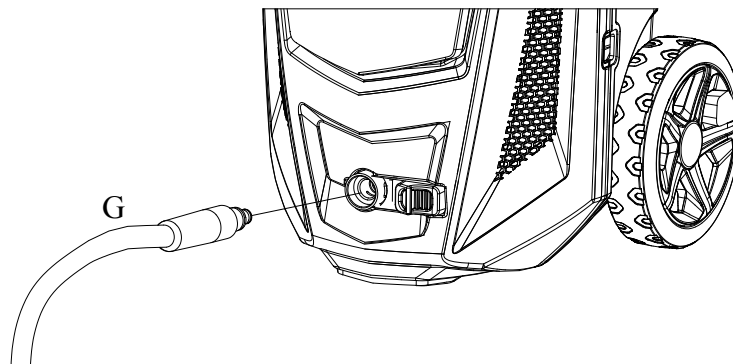

## Step 7


Attach the hose connector to pressure washer. Before attaching the connector to the male fitting, remove the plastic cap, which is inserted onto the male fitting on the pressure washer before shipping. This plastic cap can be discarded once removed. After both components have been installed, attach the garden hose with connector screw on the pressure washer. Connect the garden hose to the waterspout.

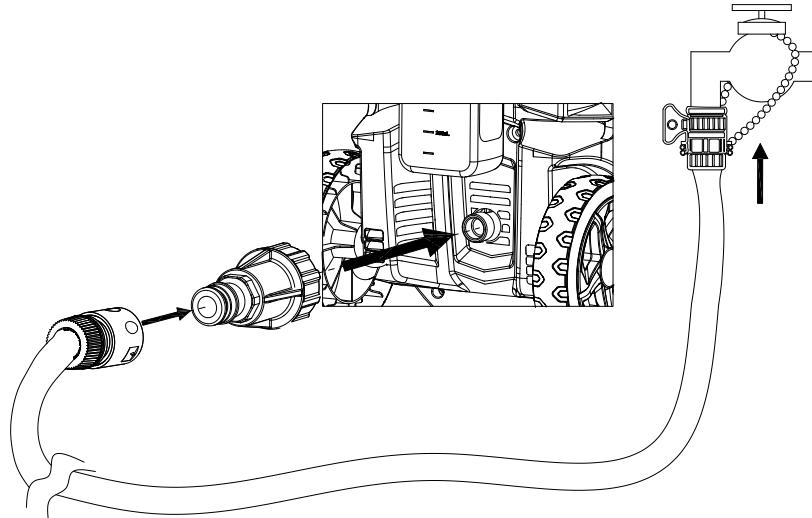

## Step 8

If the water source is lower than the machine inlet, the water drop to the machine inlet shall not be greater than 50 cm..

If the water source is higher than the machine inlet, the water surface shall not exceed 50 cm. to the top surface of the water container. At this time can not install sprinkler, after starting the machine, wait for water to flow out from the gun head, and then connect the nozzle to use.

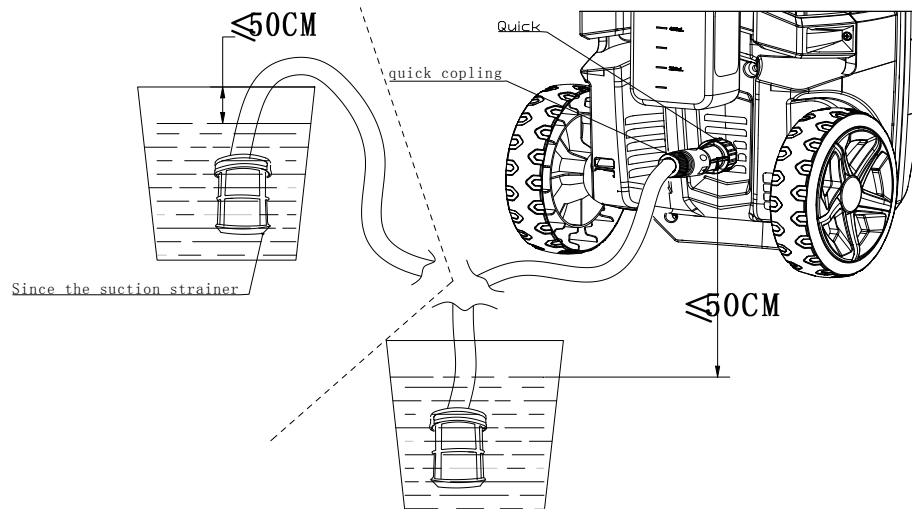

# OPERATING INSTRUCTIONS

**THIS UNIT IS INTENDED TO BE USED WITH COLD WATER ONLY! DO NOT USE HOT WATER IN THIS PRESSURE CLEANER!**

## Starting Up


After connecting the pressure cleaner to your cold water supply, proceed as follows:

- Make sure that the on/off switch is in the off position.
- Connect the garden hose to the inlet fitting.
- Attach the hose to the gun as per assembly instruction step #1.
- Insert the adjustable spray nozzle into the gun as per assembly step #3.
- Connect the high pressure hose to the high pressure outlet fitting as per assembly step #4.
- Connect the garden hose to the high pressure washer inlet fitting as per assembly step #5.
- Open the water supply valve completely.
- Before turning the unit on, press the gun trigger to bleed all the remaining air out of the pump and hose.
- Start the pressure cleaner by turning the on/off switch to the on position and squeeze the trigger. REMINDER: Motor does not run continuously, only when the trigger is squeezed.

**WARNING – RISK OF INJECTION! Unit will start spraying when trigger is squeezed. When turning the unit off after use, high pressure still exists inside the hose and unit. Point the gun in a safe direction and discharge the excess pressure. NEVER direct the high pressure water stream at people or animals.**

## Automatic On/Off

The pressure cleaner is equipped with an automatic on/off switch. The pressure cleaner will only run when the power switch is in the ON position and the trigger on the gun is squeezed. When you release the trigger to stop spraying water through the gun, the motor on the pressure cleaner will automatically shut off. Simply squeeze the trigger again to resume using the cleaner. To stop using the pressure cleaner, release the trigger and switch the unit to the OFF position. The unit should be turned completely OFF while not in use or while unattended.

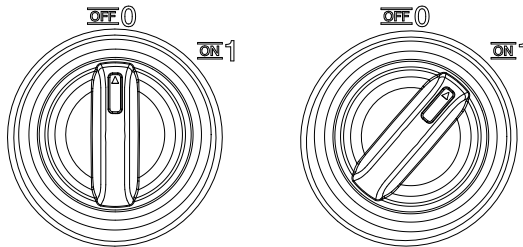


## Bleeding the Gun


It is very important to bleed the gun before using the pressure cleaner. Refer to the “Assembly Instructions” to assemble the pressure cleaner. To bleed the gun, simply connect the garden hose to the pressure cleaner and squeeze the trigger before turning the electrical supply on. This allows any air trapped inside the pressure cleaner and gun to be removed before using the unit. Continue holding trigger for approximately one minute to allow any excess air out of the unit. Water will flow through the gun at low pressure during this procedure. For more bleeding tips, see the section titled “Operating Instructions.”

## Gun Safety Lock

This pressure cleaner is equipped with a gun trigger safety lock. When not using the pressure cleaner, use the safety lock to keep from accidentally engaging the high pressure spray.

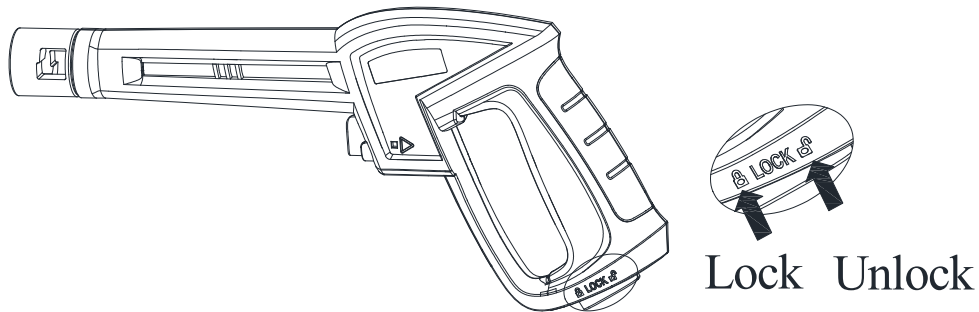

## Adjustable Spray Nozzle

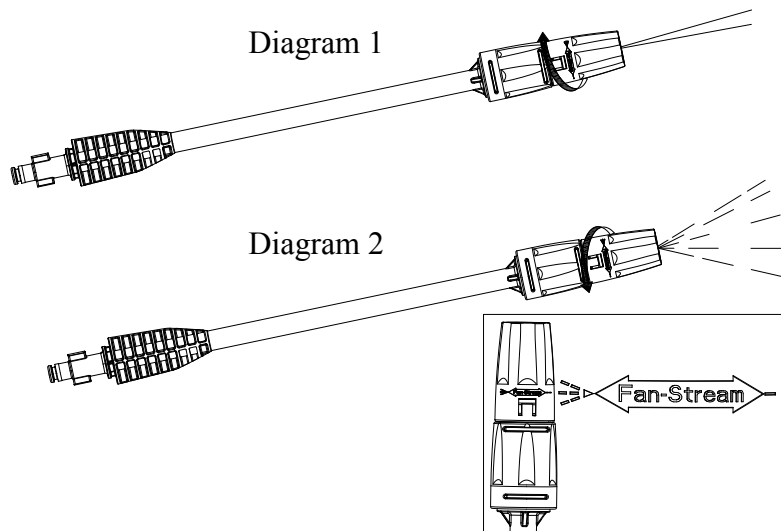


The adjustable nozzle will allow you to use any variety of spray patterns from a full fan spray (Diagram 2) to a direct stream spray (Diagram 1). When using the pressure washer to clean wood decks, siding, vehicles etc., always start using the fan spray and begin spraying from a minimum 36" away to avoid damaging the surface of the material you are cleaning. Always begin by spraying in a testing area free and clear of people and objects.

- Warning: High pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, live electrical equipment or the appliance itself.
- Do not direct the jet against yourself or others in order to clean clothes or foot-wear.

## Hose Reel


There will be a hose reel fixed on the handle, you can collect the hose around this hose reel and fix it tightly with a specified clip provided by manufacturer while no use for longer time .

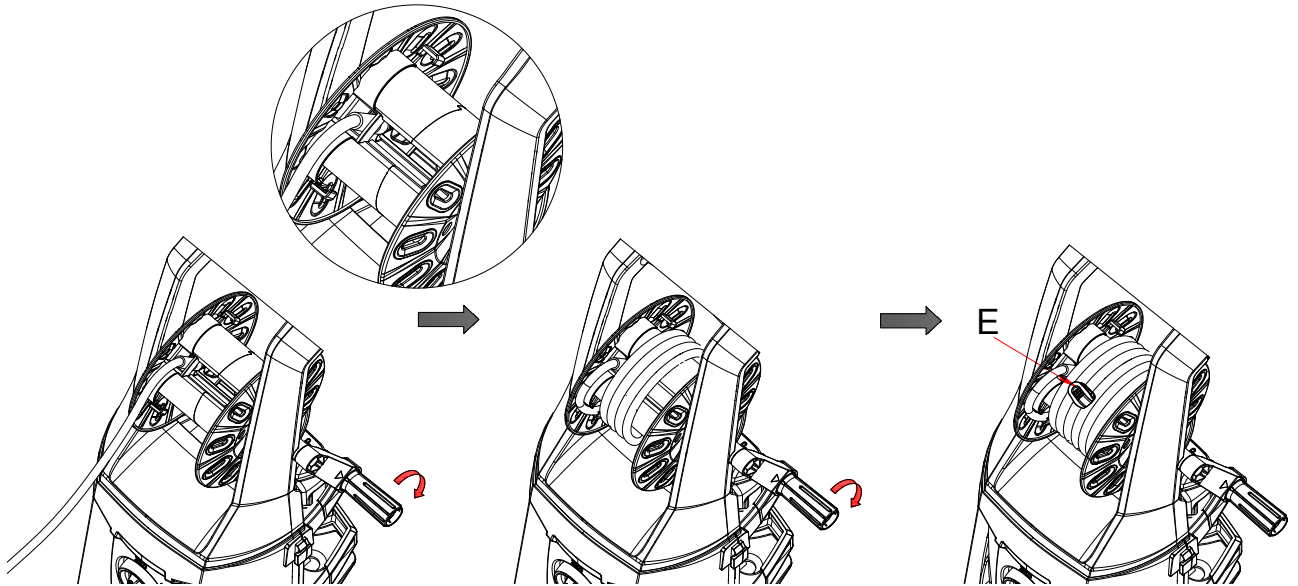

## Unblock lance

When the nozzle is clogged, it will cause the pump to build pressure and may cause unit to surge, you can clean the nozzle inserting needle into the tip to rid of the deposits.

For the adjustable nozzle, you can lubricate the nozzle collar (high pressure to low pressure) by using non-water soluble grease regularly.

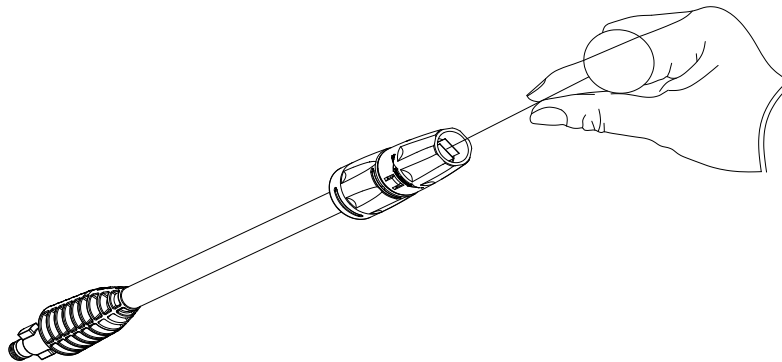

# USING DETERGENTS

THE PRESSURE CLEANER WILL DISPENSE DETERGENT AT LOW PRESSURE. USE THE ADJUSTABLE SPRAY NOZZLE TO RINSE CLEAN.

BIODEGRADABLE DETERGENTS ARE SPECIFICALLY FORMULATED TO PROTECT THE ENVIRONMENT AND YOUR PRESSURE CLEANER. THESE DETERGENTS WILL NOT CLOG THE FILTER AND WILL PROTECT THE INTERNAL PARTS OF THE PRESSURE CLEANER FOR A LONGER LIFE.

The built-in detergent dispenser will allow you to apply many forms of liquid detergent onto the work surface. Detergent application happens at low-pressure only. Insert the adjustable nozzle onto the gun, and turn it to end of “LOW”, so that the pressure washer is in low-pressure mode (see Figure A below). Remove the cap on the detergent reservoir and fill with liquid detergent only (see Figure B below). Do not put any water into the reservoir. The pressure washer will mix water and detergent automatically. When finished applying the detergent to the work surface, turn it to end of “HIGH” of the adjustable nozzle and spray off the detergent by using the high-pressure spray (see Figure A below). In high-pressure mode, the pressure washer will not dispense detergent.

FIGURE A


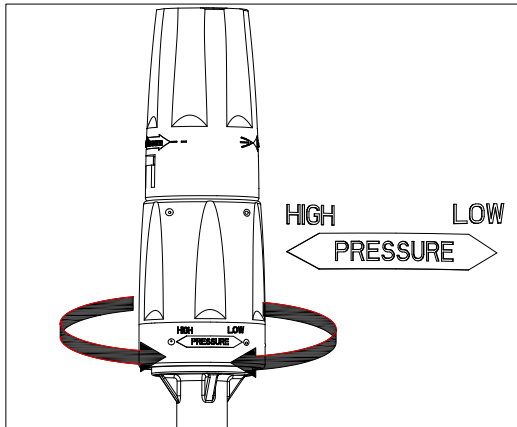


FIGURE B

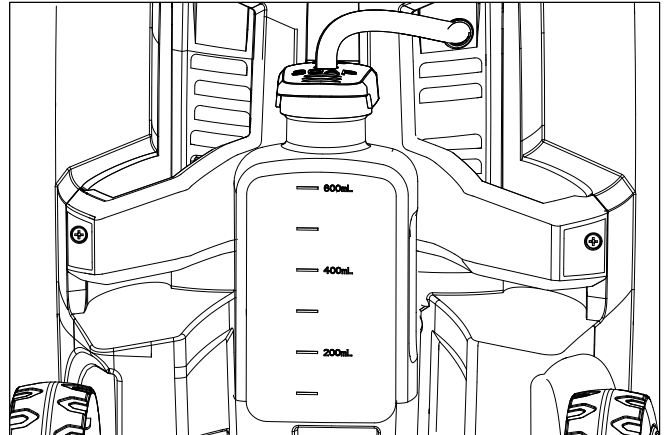

- WARNING: NEVER USE PRODUCTS WITH BLEACH OR CHLORINE OR ANY OTHER CORROSIVE MATERIALS, INCLUDING LIQUIDS CONTAINING SOLVENTS (I.E. GAS, OILS ETC), TRI-SODIUM PHOSPHATE PRODUCTS, AMMONIA, OR ACID-BASED CLEANERS. THESE CHEMICALS WILL HARM THE UNIT AND CAUSE DAMAGE TO THE SURFACE BEING CLEANED. ALWAYS READ THE LABEL.

# CLEAN-UP AND STORAGE

## Shutting Down the Pressure Cleaner

**WHEN FINISHED USING THE PRESSURE CLEANER,  
FOLLOW THESE STEPS TO SHUT  
DOWN THE UNIT:**

- Turn the pressure cleaner to the OFF position.
- Turn off the water supply.
- Before disconnecting high-pressure hose connection, point the gun in a safe direction and discharge the high-pressure water.
- Disconnect high-pressure hose from the pressure cleaner and gun.
- Disconnect garden hose from the pressure cleaner.
- Remove quick coupler fitting from garden hose and attach to the nipple portion of the fitting installed on the pressure cleaner for storage.
- Remove excess water from the pump by tipping the unit on both sides to drain any remaining water from inlet and outlet fittings.
- Remove Water Intake Filter and flush with water to remove dirt or debris. Return filter once cleaned.
- Drain detergent reservoir and flush with running water.
- Wipe away any remaining water on all parts and fittings.
- Engage the gun safety lock.
- Store the pressure cleaner, parts, and accessories in an area with a temperature above 0°C (32° F).

## Winterizing and Long-Term Storage

**FOLLOW ALL OF THE ABOVE SHUT-DOWN PROCEDURES,  
ADDING THE FOLLOWING STEPS....**

- After disconnecting the water supply, and before disconnecting the high-pressure hose, turn the pressure cleaner on for **2-3 seconds**, until any remaining water in the pump exits.

**TURN UNIT OFF IMMEDIATELY.**

**CONTINUED USE OF THE PRESSURE CLEANER WITHOUT  
WATER SUPPLY ATTACHED WILL CAUSE  
SEVERE DAMAGE TO THE UNIT!**

- Always store the pressure cleaner, parts, and accessories in an area with a temperature above 0° C (32° F).

**WARNING: FAILURE TO COMPLY WITH THESE  
STORAGE INSTRUCTIONS WILL RESULT IN  
DAMAGE TO THE PUMP ASSEMBLY.**

## Maintenance

- This pressure cleaner is supplied with a closed lubrication system, so no addition of oil is needed.
- Check all hoses and accessories for damage prior to use.
- Check the inlet filter periodically for deposits. Clean this filter regularly for maximum performance.

# CLEANING TIPS

**WARNING: ALWAYS TEST THE SPRAY IN AN AREA FREE AND CLEAR OF PEOPLE AND OBJECTS BEFORE YOU SPRAY AT THE INTENDED CLEANING SURFACE.**

## Wood and Vinyl Decks

Rinse deck and surrounding area with fresh water. If using detergent, fill the detergent reservoir and apply to the area being cleaned at low pressure. For optimal results, reduce your work area to smaller sections and clean each section one at a time. Allow the detergent to rest on the surface for a few minutes and then rinse at high pressure. Do not let the cleanser dry. Always clean from left to right and top to bottom for best results. Rinse at high pressure using the fan spray keeping the tip of the spray nozzle at least 6-9 inches from the cleaning surface. Maintain a further distance from the cleaning area when using a direct spray. **Caution: For softer woods, increase the distance from the cleaning area.**

## Cement Patios, Stone, and Brick

Rinse cleaning and surrounding area with fresh water. If using detergent, fill the detergent reservoir and apply to the area being cleaned at low pressure. Rinse at high pressure using the fan spray in a sweeping motion keeping the tip of the spray nozzle at least 3-6 inches from the cleaning surface. Maintain a further distance from the cleaning area when using a direct spray.

## Cars, Boats, and Motorcycles

Rinse cleaning and surrounding area with fresh water. If using detergent, fill the detergent reservoir and apply to the area being cleaned at low pressure. To achieve the best results, clean one side at a time. Allow the detergent to rest on the surface for a few minutes, but do not let the detergent dry. Rinse at high pressure using the fan spray in a sweeping motion keeping the tip of the spray nozzle at least 8 inches from the cleaning surface. Maintain a further distance from the cleaning area when using a direct spray. Wipe surface dry for a polished finish.

## Barbecue Grills, Power Equipment, and Garden Tools

Rinse cleaning and surrounding area with fresh water. If using detergent, fill the detergent reservoir and apply to the area being cleaned at low pressure. Allow the detergent to rest on the surface for a few minutes, but do not let the detergent dry. Rinse at high pressure using the fan spray keeping the tip of the spray nozzle at least 1-3 inches from the cleaning surface. Maintain a further distance from the cleaning area when using a direct spray.



# TECHNICAL DATA

|                            |                        |
|----------------------------|------------------------|
| Model                      | C503-1800              |
| Mains voltage              | AC220-240V, AC120-127V |
| Mains frequency            | 50 /60Hz               |
| Power input                | 1800W                  |
| Rated pressure             | 100bar                 |
| Max. pressure              | 140bar                 |
| Rated flow                 | 5.5 L/min              |
| Max. pressure water supply | 12bar                  |
| Max. water temperature     | 50°C                   |

Level of sound pressure measured

L<sub>PA</sub> (sound pressure) dB (A) 79.0

L<sub>WA</sub> (sound power) dB (A) 91.6

L<sub>WA</sub> (guaranteed sound power level) dB (A) 95

Weighted root mean square acceleration value: < 0,381 m/s<sup>2</sup>

## GUARANTEE

Refer to the enclosed guarantee conditions for the terms and conditions of guarantee.

## ENVIRONMENT

Should your machine need replacement after extended use, do not put it in the domestic way

# TROUBLESHOOTING TIPS

## WHEN THE SWITCH IS IN THE “I” POSITION THE MACHINE WILL NOT START

### **PROBABLE CAUSE**

Electrical socket is faulty  
Voltage is inadequate  
Power cord is not plugged in

### **SOLUTION**

Check plug, socket, fuses  
Check whether the voltage is adequate  
Plug in power cord

## THE PUMP DOES NOT REACH ADEQUATE PRESSURE OR FLUCTUATES

### **PROBABLE CAUSE**

Water inlet filter is clogged  
Pump is drawing air  
Suction valves are clogged/worn  
Diameter of garden hose too small  
Water supply is restricted  
Insufficient water supply

### **SOLUTION**

Remove and clean filter  
Tighten connections/bleed system  
Clean or replace valves  
Replace with ¾ inch garden hose  
Check hose for kinks or leaks  
Fully open water source

## THE PRESSURE CLEANER HAS OR WILL NOT MAINTAIN PRESSURE

### **PROBABLE CAUSE**

Excessive air in waterline and pump

### **SOLUTION**

Turn unit and water supply off/  
Bleed system/Hold trigger down

## THE PRESSURE CLEANER MAKES EXCESSIVE NOISE

### **PROBABLE CAUSE**

Intake is blocked  
Valves are worn, dirty, or clogged  
Filter is dirty

### **SOLUTION**

Check the intake valves  
Check, clean or replace valves  
Check, clean, or replace filter

## THE MOTOR STOPS RUNNING WHILE IN USE

### **PROBABLE CAUSE**

Net voltage lower than suggested

### **SOLUTION**

Check whether the voltage is adequate

# EC Declaration of Conformity

We hereby declare that the design, construction and the model for the device with the standard and the requirements of safety and health of the EU's consistent policy.

The statement will prove ineffective if the device is being modified without our approval.

Type of instrument: Pressure Cleaner C503-1800D

Anwenbare EU guidelines:

- EU Machinery Directive 2006/42/EC
- EU Low Voltage Directive 2006/95/EC
- EU Directive Electromagnetic Compatibility 2004/108/EC

Applied harmonized standards:

- EN60335-2-79 : 2009
- EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A14:2019+A2:2019
- EN 55014-1:2017/A11:2020
- EN 55014-2:2015
- EN IEC 61000-3-2:2019
- EN 61000-3-3:2013/A1:2019
- EN 62233:2008