

1 tow 2 Rapid Shutdown Devices SUNGO RSDi-2 & Data Gateway SUNGO GT Quick Installation Guide

Document version: SUNGO-RSDi-2>[™]-V1-2024 EN
 Release Date: 2024.7

1 产品概述




**1 tow 2 Rapid Shutdown Devices
 SUNGO RSDi-2**



**Data Gateway
 SUNGO GT**


The SUNGO RSDi-2 is a rapid shutdown with data monitoring, matching the data gateway GT or GTC, with a module-level rapid shutdown function that monitors the operating parameters of the PV modules and reports the operating status of the PV modules.

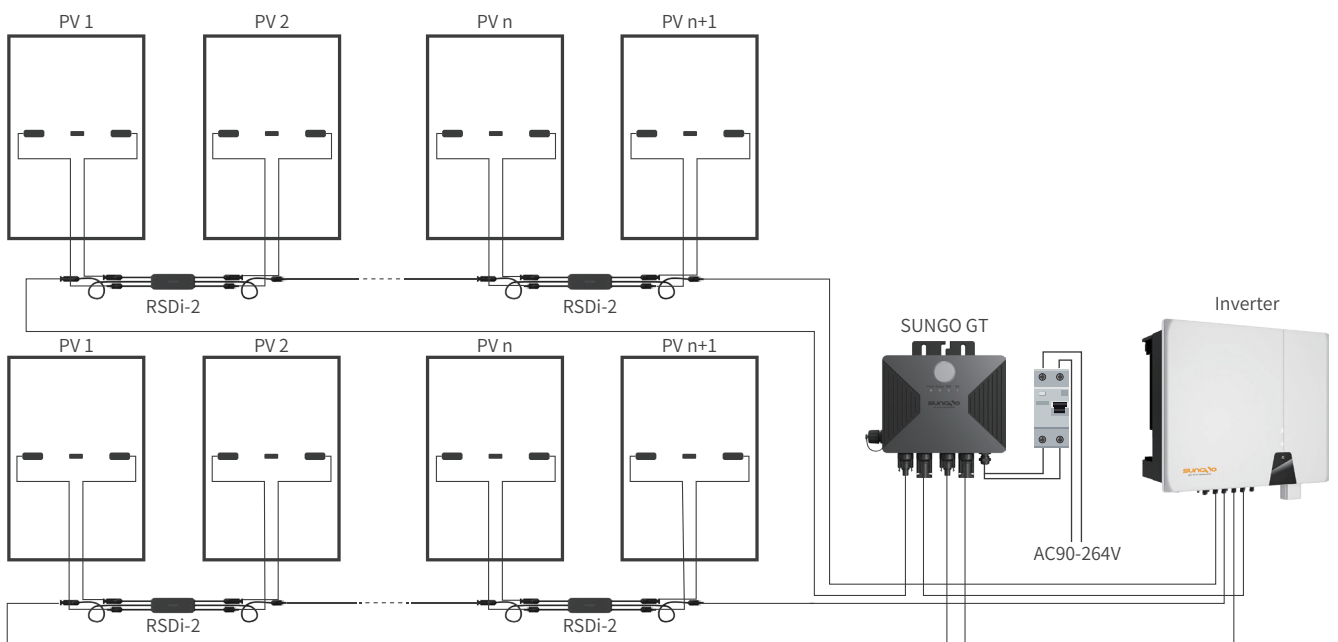


Connection Diagram

2 SUNGO RSDi-2 Product Installation


1. Install the RSDi-2 by snapping the RSDi-2 upward onto the PV module frame.

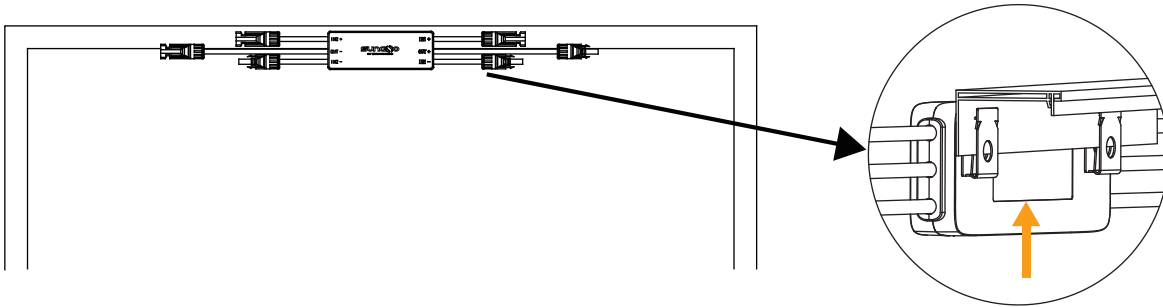

2. Connect IN+ and IN- of RSDi-2 to the positive and negative terminals of the first and second PV module junction boxes respectively, and so on.

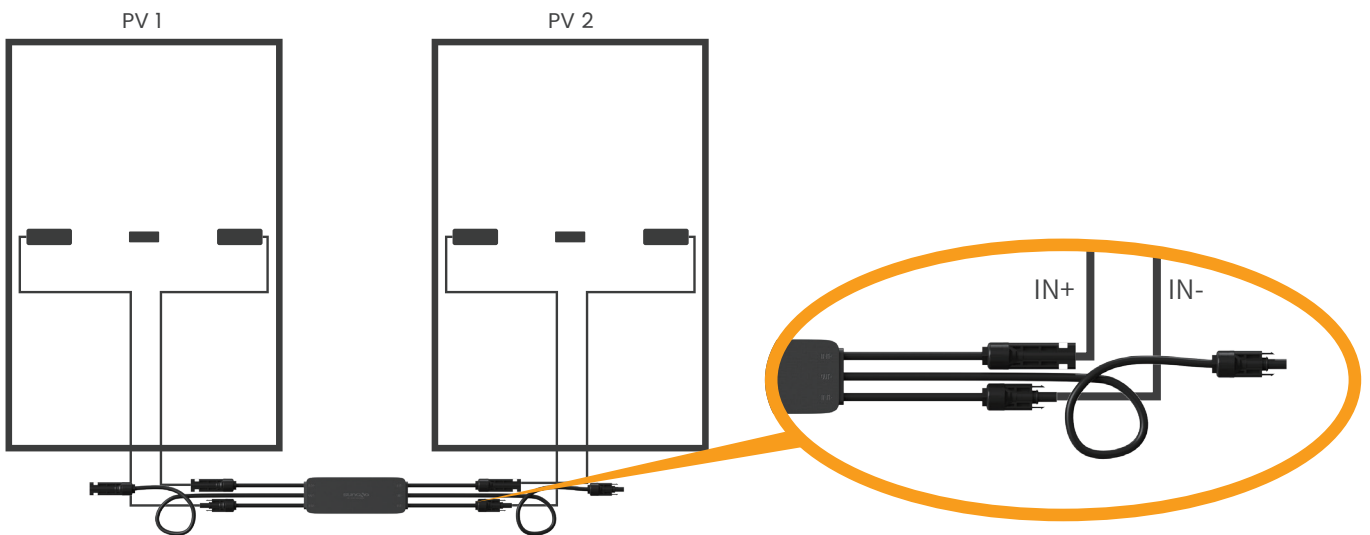


3. Connect two adjacent RSDi-2 output ports in series and then connect them near to the inverters with a homemade DC extension cable.

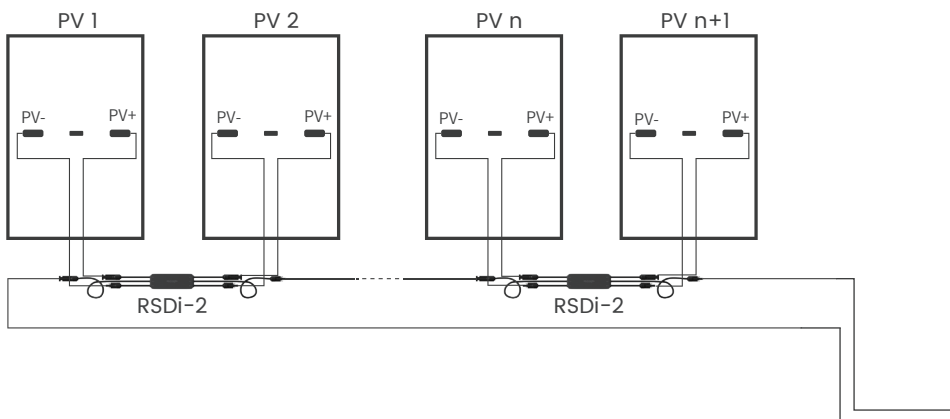

3 SUNGO GT Installation

Step 1. Data gateway connectivity

1. Install the GT near the inverter.
2. Connect the OUT+ of the last rapid shutdown to the PV+ of the inverter.
3. Connect the OUT- of the first rapid shutdown through the magnetic ring of the GT to the PV- of the inverter.
4. After confirming that the connection is correct GT connects the MCB and then connects it to the AC.

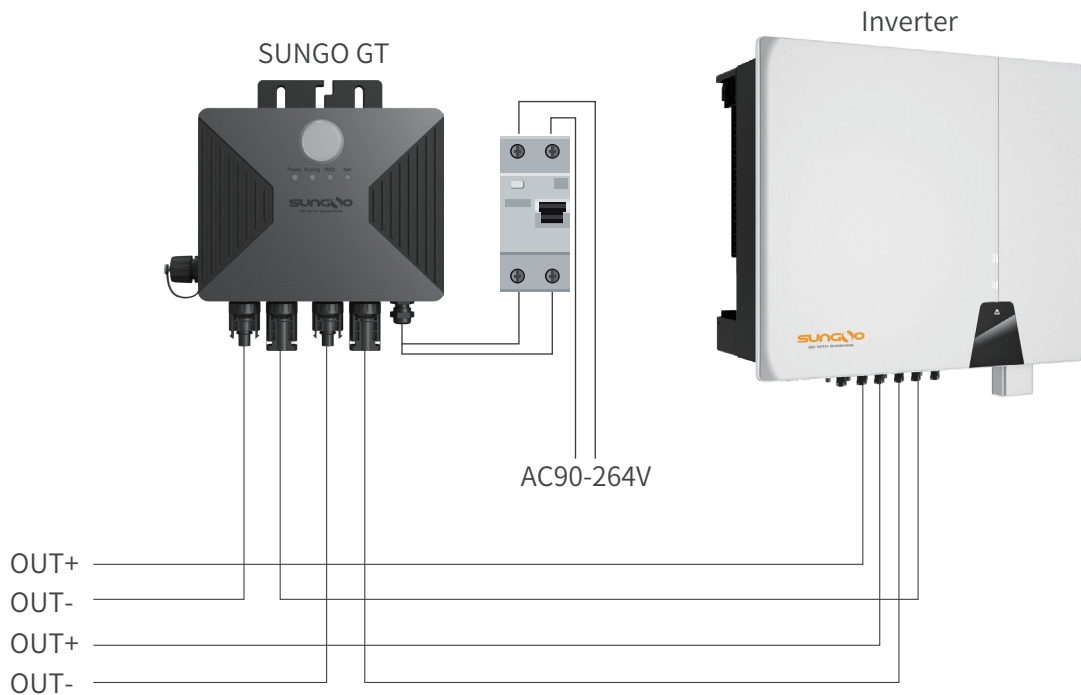

The GT itself is IP67 waterproof and can be used without a distribution cabinet.

The AC input line is connected to the AC power using the L16-2 waterproof connector.

-Check that the structural mounts are secure and that all screws are tightened.

-Check that all cables are connected with the correct polarity and that the connections are firm and reliable to ensure that there are no short circuits.

-Confirm that the system is connected correctly, the inverter DC switch is ON, and the inverter is turned on.

Note: The maximum number of group strings that can be input to a GT is 2 strings.


Step 2. Connecting the data gateway to a power source

Connect the data gateway to 90~264V AC power supply. Ensure that the power indicator green light is always on, and the running indicator green light is also always on. Check whether the inverter is working normally.

Step 3. GT status indication

Search Optimizer self-test and indicator status

Press the center button to allow the Running light to illuminate normally. Let the Rapid Shutdown (RSD) go out for an extended period. After 5 seconds, press and hold the button. After a few seconds, the GT enters the self-test mode, and when the 2, 3, 4, indicator light flashes back and forth, release the button. Wait for about 10 minutes until the Running indicator light flashes, indicating a successful self-test. Press the button again to make the Running indicator light continuously on, confirming that the optimizer is operating normally. If the 3 indicator lights are blinking, it signifies a test failure. In such a case, please check the connections and rerun the test. If the test fails three times, kindly contact the relevant technical personnel.

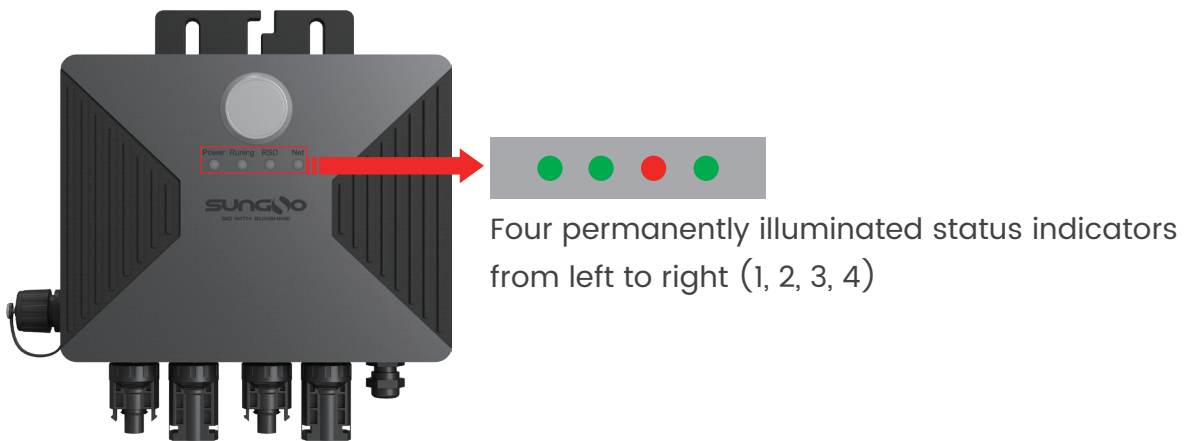

Note: Indicator status indicates

1, 2, 4 Indicator status schematic: ● Indicates normally lit ● Indicates extinguished ● Indicates blinking	
3 Indicator status schematic: ● Indicates normally lit ● Indicates extinguished ● Indicates blinking	
<p>None of the four indicator lights are lit Wrong or faulty circuit connection</p>	<p>1 on 2 off 3 on 4 on Turn off the optimizer, the network is connected normally</p>
<p>1, 2 on 3, 4 off Start optimizer, network not connected</p>	<p>1 on 2 blinking 3 blinking 4 blinking Search Optimizer self-test</p>
<p>1, 2 on 3 off 4 on Start the optimizer, the network is connected normally</p>	<p>1 on 2Blinking 3on 4 on or off Search Optimizer self-test successful</p>
<p>1 on 2 off 3 on 4 off Optimizer off, network not connected</p>	<p>1 on 2 off 3 blinking 4 on or off Search Optimizer self-test failed</p>

Step 4. GTC entry whitelisting


I. Process

Recommended application process:

1. First power up the GT/GTC.
2. Use the USB to RS485 cable to connect GT/GTC and the computer
3. Select the corresponding serial port
4. Read MAC Addr and Version, if normal display, represents the current connection is normal, otherwise check whether the cable is properly connected.
5. Enter the RSDi-2 code into the List list, and then click Write to write it to GT/GTC; there are two ways to enter the code as follows
 - ① Through Import button, recognize the selected picture to import.
 - ② Enter the number manually through the keyboard, and note that each number is separated by a comma.
6. Monitor the current status of the rapid shutdown through To Monitor.

II. Wiring

Use USB to RS485 to connect the GT/GTC to the computer, the connection is shown below:


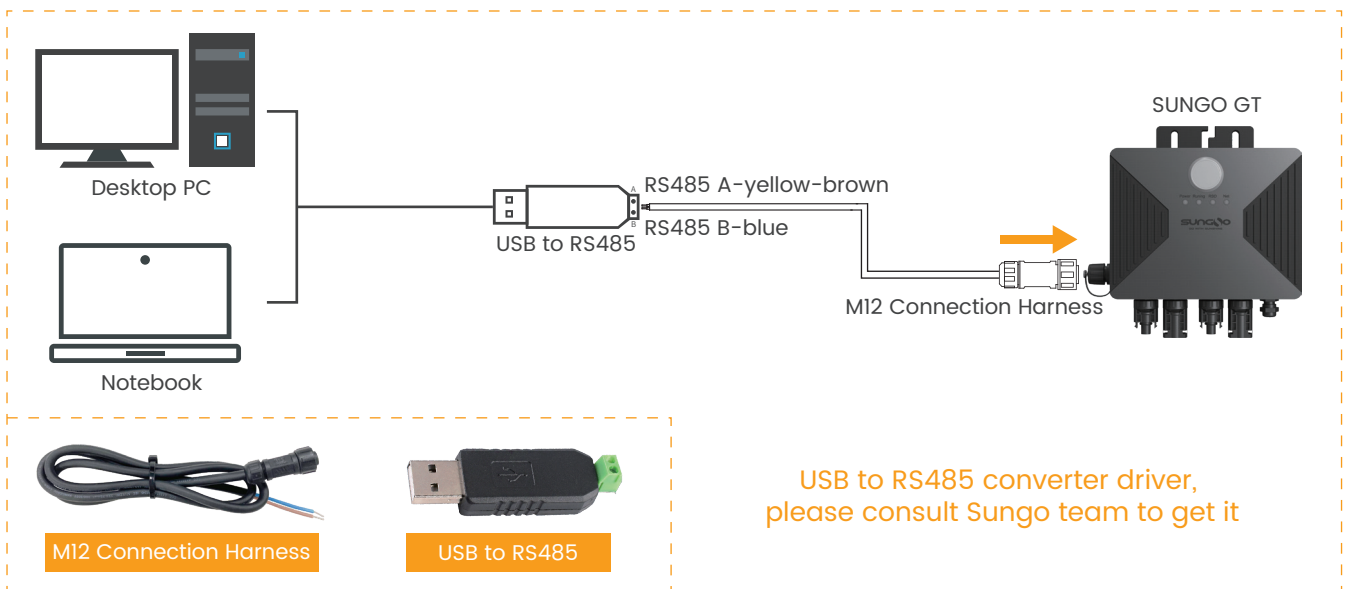


Wiring Diagram


III. Description

1. Select the corresponding serial port

After success, the green circle is displayed as follows

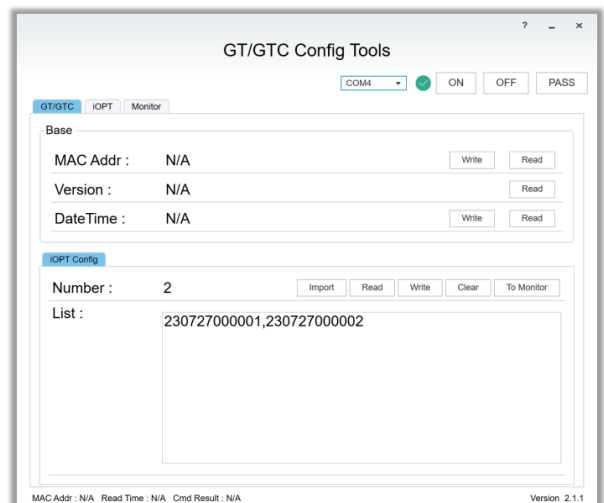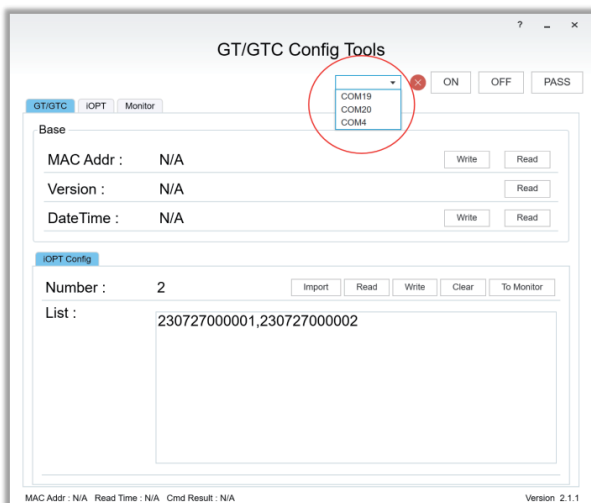

2. Description of GT/GTC functions

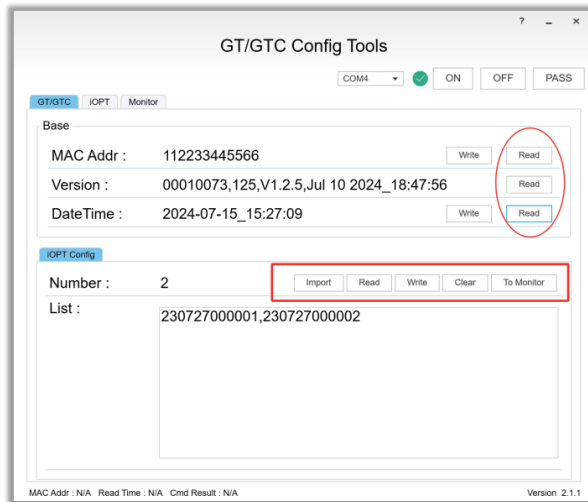

①MAC Addr:

Click Read to read the address of GT/GTC, and click Write to write the address in the left input box to GT/GTC.

②Version



Click Read to read the software version number of GT/GTC.

③DateTime

Click Read to read the time of GT/GTC, and click Write to write the system time into GT/GTC.

④iOPT Config - Import

Click Import to import the RSDi-2 code through the image, as follows
Click Import to import the recognized codes into the List box.

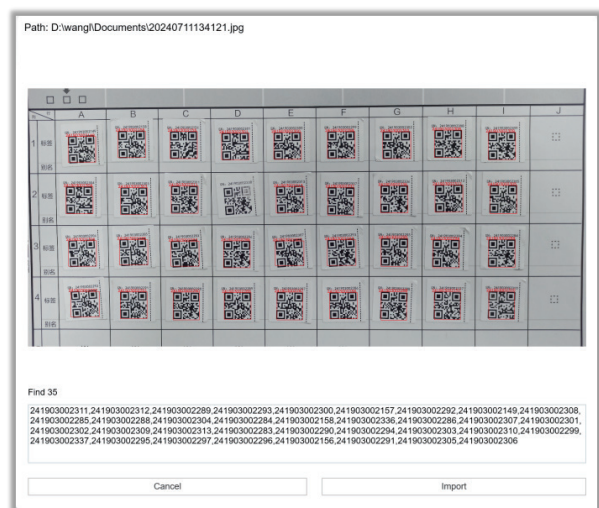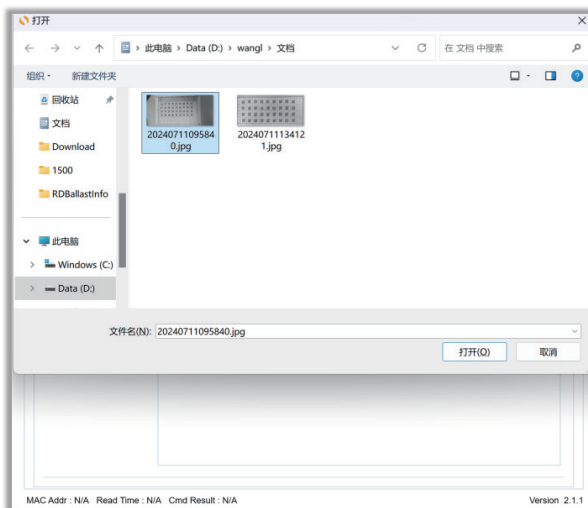

⑤iOPT Config - Read

Click Read to read the RSDi-2 list of the current GT/GTC configuration.

⑥iOPT Config - Write

Click Write to write the RSDi-2 list to GT/GTC.


⑦iOPT Config - Clear

Click Clear to delete all the RSDi-2 in GT/GTC.

⑧RSDi-2 Config - To Monitor


Click Monitor to display the RSDi-2 in List on the Monitor page.

3. Read single RSDi-2 working parameters function description

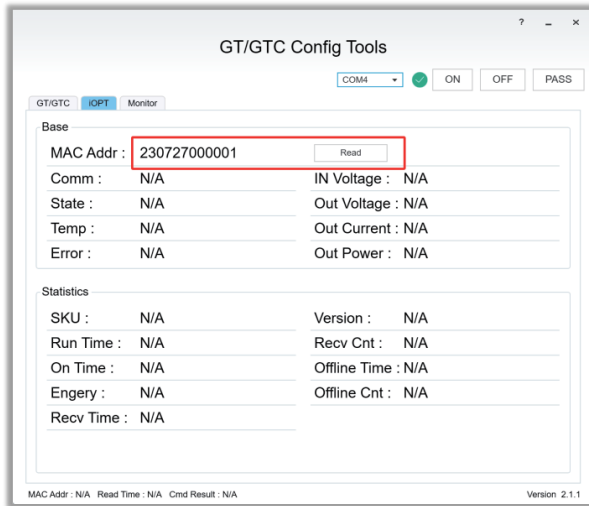

Input the RSDi-2 number you need to read, click Read to read its current status.
 Comm: communication status, Online stands for online, Offline stands for offline.
 State: current state, ON working, OFF closed.
 Temp: current temperature, Celsius degrees
 Error: current fault, Normal stands for normal.
 IN Voltage: input voltage
 Out Voltage: Output Voltage
 Out Current: Output Current
 Out Power: Output Power
 SKU: Product Model
 Run Time: Run Time
 On Time: Working Time
 Engery: Power Generation
 Recv Time: Receive Time


4. Monitor Function Description

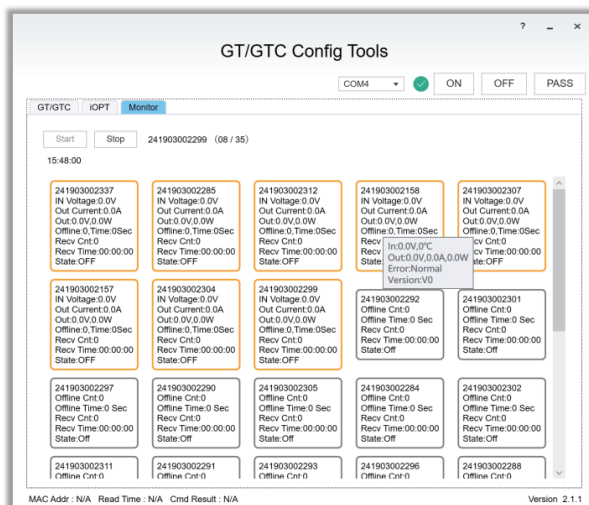


Click Start to start monitoring, the software will refresh the status of RSDi-2 in List regularly.

4 GT distribution network

Step 1. Download APP and register account

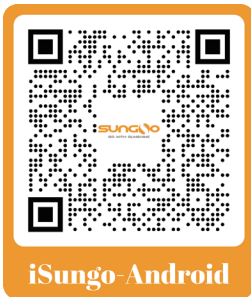


Scan the QR code to download APP

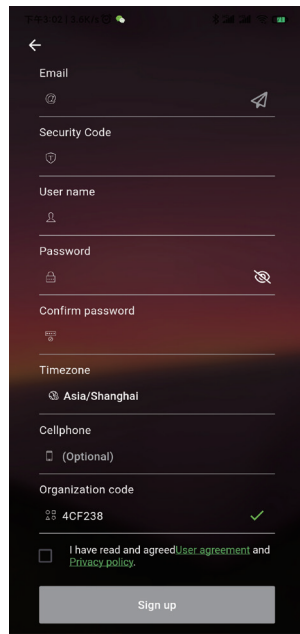


Open the APP to register an account

Step 2. Creation of PV power plants

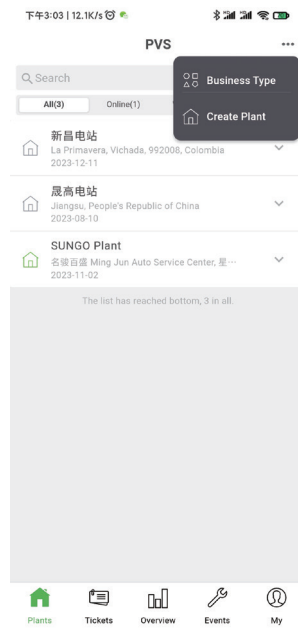

Click on the top right corner to create a power station


Step 3. Fill in the power station information

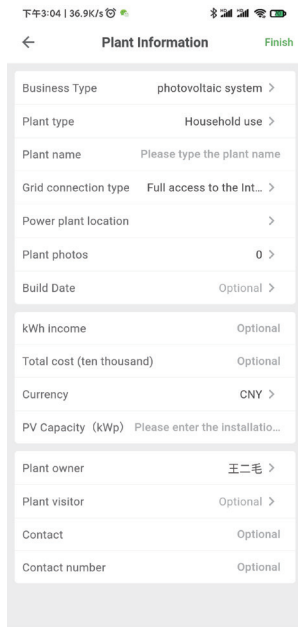

Step 4. Sweeping Code Collection Data Gateway




WiFi Serial Number:
XXXXXXXXXXXXXXXXXX

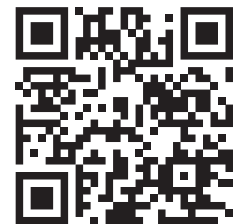


Example of QR code on the left side of GT

Click the arrow on the right side of the power station, scroll down, and click 'Add Collector.' Then, scan the WiFi serial number on the left side of the Data Gateway GT by using the QR Code.


Step 5. GT WIFI Distribution Network

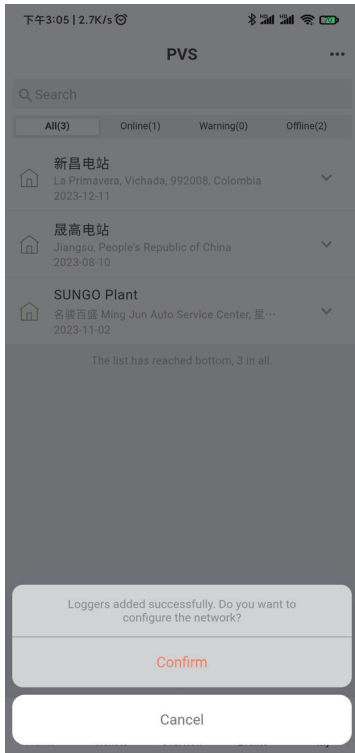


1

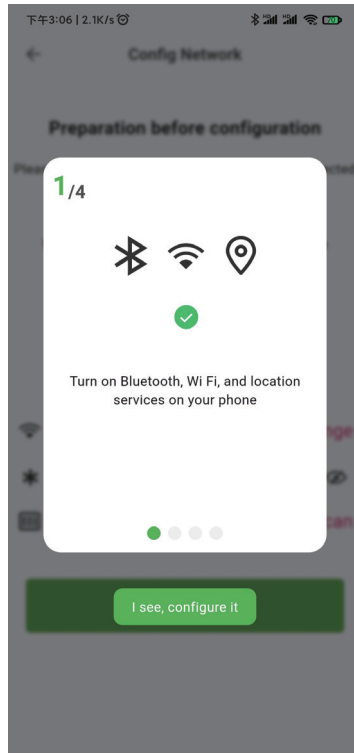


2

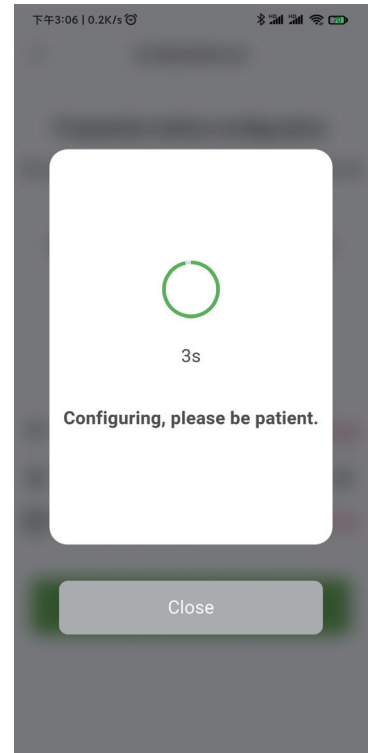

3

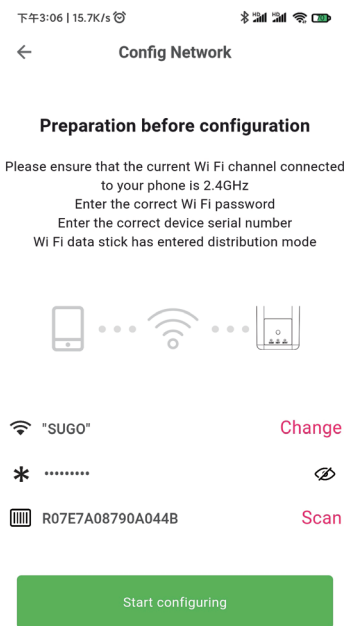


4

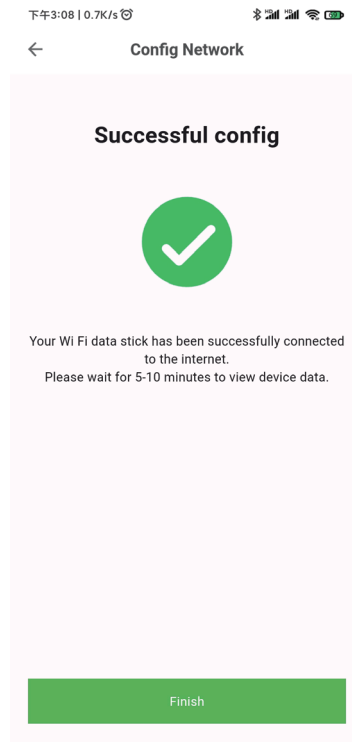

5


Just follow the instructed process to show the successful distribution of the network.

Step 7. Check the status of the power station

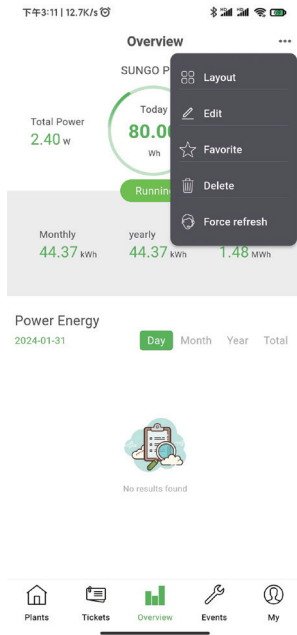

Click on APP OVERVIEW, then open the drop-down menu in the upper right corner of the page. Click on the layout to see the status.

After clicking Layout, the status of the power plant is displayed in several states as shown below.

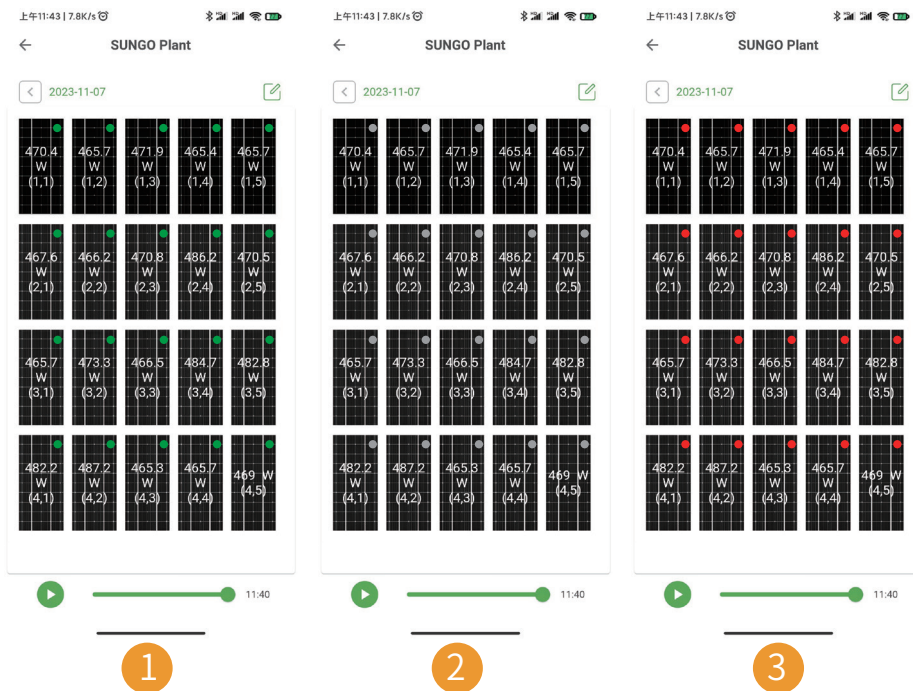

State of affairs	Clarification
Figure 1 - Green circle in the upper right corner	Rapid shutdown is running fine
Figure 2 - Gray circle in the upper right corner	Rapid shutdown is offline, please check that the SN and location information is correct and then search the device again!
Figure 3 - Red circle in the upper right corner	Rapid shutdown failure, need to replace rapid shutdown

Global Headquarters

SUNGO Energy Technology (Jiangsu) Co., Ltd.

Add: Unit 01, Floor 1, NO.179 Suhong West Road, Suzhou Industrial Park, Suzhou City, Jiangsu Province, China

Europe Headquarters

SUNGO Energy Technology B.V.

Add: Hoofdweg-Noord 9T, 2913LB Nieuwerkerk aan den IJssel, The Netherlands

Optimizer&Energy Storage Production base

KONKA&SUNGO Smart Energy (Zhejiang) Co., Ltd.

Add: Building 3#, Small and Micro Industrial Park, No. 69 Xingmei Avenue, Chengtan Street, Xinchang County, Shaoxing City, Zhejiang Province, China

Sungo Energy UK

Add: 60 Windsor Avenue, London SW19 2RR, United Kingdom

Sungo Energy Japan

SungoEnergy株式会社

Add: 4-16-5-206 Sekimae, Musashino City, Tokyo

Sungo Energy USA

SUNGO ENERGY TECHNOLOGY INC.

Add: 5900 Balcones Drive, STE 100 Austin TX 78731

Web: www.sungoess.com

E-mail: sales@sungoess.com

Global Headquarters Tel: +86 (0)512 6512 2036

Europe Headquarters Tel: +31 (0)10 307 21 68

SUNGO Energy UK Tel: +44 (0) 330 122 6559

After-sales e-mail: after-sales@sungoess.com



Linkedin



Facebook



Tiktok



Youtube

© Sungo reserves all rights. All other trademarks mentioned in this document are trademarks of their respective owners. The information in this document is for reference only and does not constitute any offer or commitment. Sungo may modify the above information without prior notice.