

- ① REC-: Under the monitoring screen, press the "REC-" button to record, and press it again to save. In the menu, the REC-" button as the up key.
- ② OK: Under the monitoring or recording, press the "Ok" button to zoom in on the screen (0-5 levels). In the menu, it as the down key, and in the playback interface, it as the confirm button.
- ③ MENU/ESC: Under the monitoring or recording, press the "MENU/ESC" button to enter the menu, and press it again to exit the menu. Press the "MENU/ESC" in the submenu returns to the previous level.
- ④ <: Under the monitoring screen, press the "<" button to enter the playback interface. In the menu, it serves as the left key.
- ⑤ >: Under the monitoring or recording screen, press the ">" key to take a photo. In the menu, it serves as the right key.
- ⑥ ⏻: Power button of the screen.

## How to Record video

Press "REC-" to start record video and press it again to save the file.



## How to Take Picture

Press ">" to take picture.




# How to View Picture or Video

1. Press "<" to view the picture/video file, Press "<"">" to select the file.  
(JPG is an image file, and AVI is a video file)
2. Press "Ok" to play the picture/video, when playing the video, you can press "Ok" to pause the video. And then press "MENU/ESC" to exit. When play the file, you can switch files by pressing "<" or ">" buttons



# How to Delete Picture or Video

1. Press "<" to view the picture/video file, Press "<"">" to select the file.
2. Press "REC-" to enter the delete interface. Use the "<" and ">" buttons to navigate to "confirm". Press "Ok" button to delete.

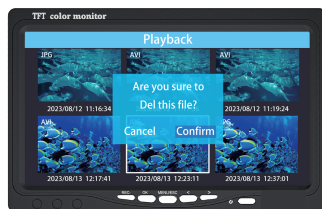



# How to Rotate the Screen Image

1. Press "MENU/ESC" to access the menu interface, Press "REC-" or "Ok" to switch the third icon.
2. Press "<" or ">" to enter the submenu. Press "REC-" or "Ok" to switch to the Rotate, press "<" or ">" to adjust the option content.



# How to Change the System Language

1. Press "MENU/ESC" to access the menu interface, Press "REC-" or "Ok" to switch the fourth icon.
2. Press "<" or ">" to enter the submenu, then press "REC-" or "Ok" to switch to Language. Press "<" or ">" to toggle between languages.

