

User Manual

Online UPS User Manual

**3KVA/5KVA/6KVA
(with Charging function)**

Table Of Contents

ABOUT THIS MANUAL	1
Purpose.....	1
Scope.....	1
SAFETY INSTRUCTIONS	1
Standard.....	2
INTRODUCTION	3
Features.....	3
Product Overview.....	4
INSTALLATION	5
Unpacking and Inspection.....	5
Preparation.....	5
UPS Rack Mounting.....	5
Battery Connection.....	6
AC Input/Output Connection.....	7
Communication Connection.....	9
Software Installation.....	9
EPO Function.....	9
OPERATION	10
Operation and Display Panel.....	10
LCD Display Icons.....	11
LCD Setting.....	13
Display Setting.....	16
Operating Mode Description.....	18
Fault Reference Code.....	19
Warning Indicator.....	20
Battery Equalization.....	21
SPECIFICATIONS	23
Table 1 Line Mode Specifications.....	23
Table 2 Battery Mode Specifications.....	24
Table 3 Charge Mode Specifications.....	25
Table 4 ECO/Bypass Mode Specifications.....	25
TROUBLE SHOOTING	26
PARALLEL FUNCTION	27
Appendix I: Approximate Back-up Time Table	40

ABOUT THIS MANUAL

Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

SAFETY INSTRUCTIONS



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION** --To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION** – Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this UPS, please follow required spec to select appropriate cable size. It's very important to correctly operate this UPS.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
10. Fuses are provided as over-current protection for the battery supply.
11. GROUNDING INSTRUCTIONS -This UPS should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this UPS.
12. NEVER cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this UPS back to local dealer or service center for maintenance.

Standard

* Safety	
IEC/EN 62040-2	
* EMI	
Conducted Emission..... :IEC/EN 62040-2	Category C2
Radiated Emission..... :IEC/EN 62040-2	Category C2
* EMS	
ESD..... :IEC/EN 61000-4-2	Meets the requirements of Performance Criterion B
RS..... :IEC/EN 61000-4-3	Meets the requirements of Performance Criterion A
EFT..... :IEC/EN 61000-4-4	Meets the requirements of Performance Criterion A
SURGE..... :IEC/EN 61000-4-5	Meets the requirements of Performance Criterion B
CS..... :IEC/EN 61000-4-6	Meets the requirements of Performance Criterion A
Power-frequency Magnetic field..... :IEC/EN 61000-4-8	Meets the requirements of Performance Criterion A
Low Frequency Signals..... :IEC/EN 61000-2-2	Meets the requirements of Performance Criterion A


INTRODUCTION

This is a multi-function UPS, combining functions of inverter and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current and acceptable input voltage based on different applications.

Features

- Pure sine wave output
- Configurable input voltage range for home appliances and personal computers via LCD setting
- Configurable battery charging current based on applications via LCD setting
- Auto restart while AC is recovering
- Overload/ Over temperature/ short circuit protection
- Smart battery charger design for optimized battery performance
- Cold start function
- Zero-transfer Time

Product Overview

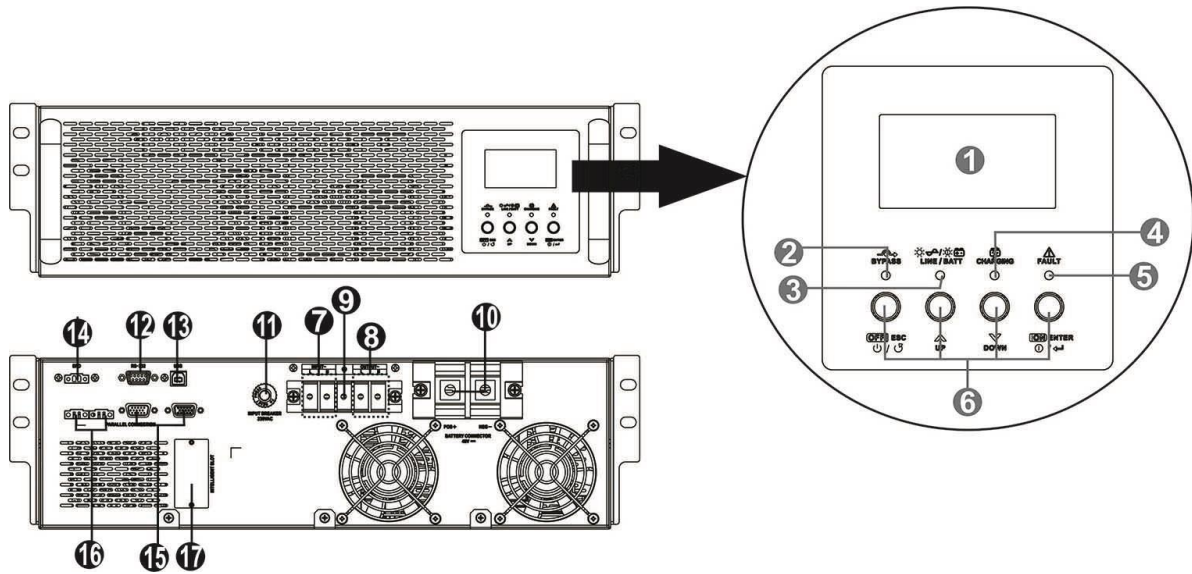

1. LCD display
2. Bypass indicator
3. Status indicator
4. Charging indicator
5. Fault indicator
6. Function keys (Please refer to operation chapter for the detailed operation)
7. AC input terminals
8. AC output terminals
9. Grounding terminal
10. Battery input
11. Circuit breaker
12. RS-232 communication port
13. USB communication port
14. EPO port (Emergency power off)
15. Parallel communication port (only for parallel model)
16. Current sharing port (only for parallel model)
17. Intelligent slot

NOTE: For parallel model installation and operation, please check Parallel Function chapter for the details.

INSTALLATION


Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- The unit x 1
- User manual x 1
- Communication cable x 2
- Software CD x 1

Preparation


Before connecting all wirings, please take off bottom terminal cover by removing two screws as shown below.

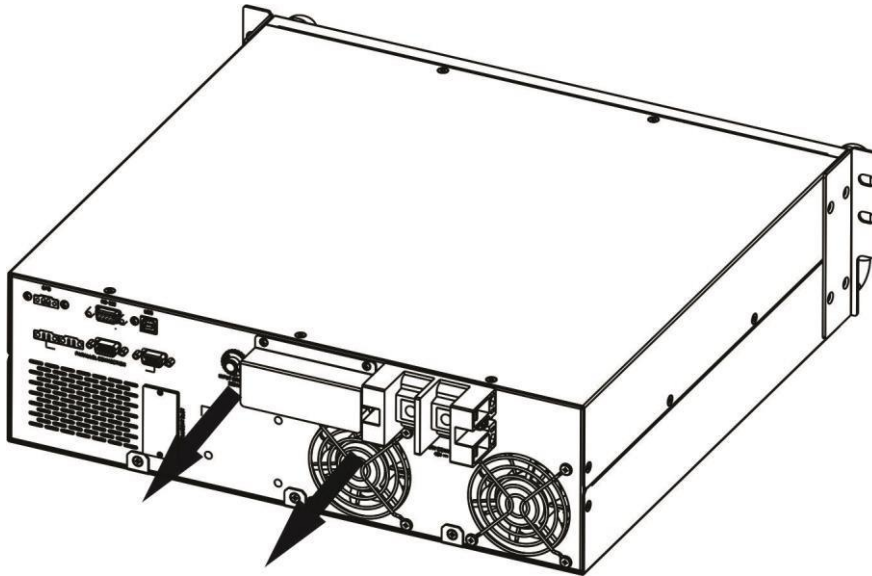

UPS Rack Mounting

Consider the following points before selecting where to install the UPS:

- Do not put the UPS on flammable construction materials.
- Dusty conditions on the unit may impair the performance of this UPS.
- The ambient temperature should be between 0°C and 40°C to ensure optimal operation.
- For proper operation, please use appropriate cables.

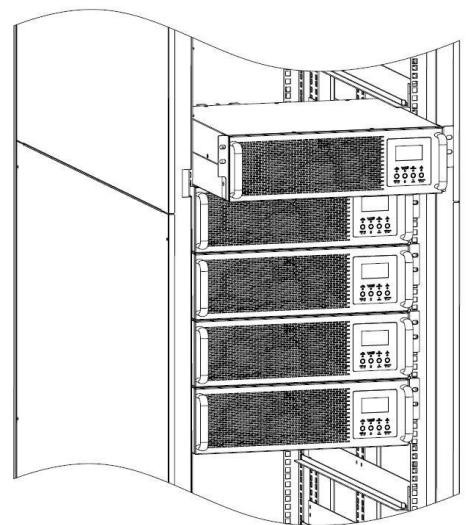


Battery Connection

CAUTION: For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and UPS. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

WARNING! All wiring must be performed by a qualified personnel. **WARNING!** It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.


Ring terminal:

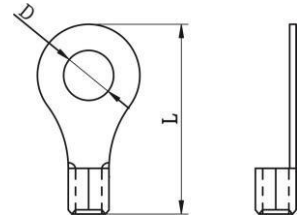



Recommended battery cable and terminal size:

Capacity	Maximum Amperage	Battery capacity	Wire Size	Ring Terminal			Torque value
				Cable mm ²	Dimensions		
					D (mm)	L (mm)	
3KVA	80A	200AH	1*4AWG	22	8.4	33.5	5~ 6 Nm
			2*6AWG	28	8.4	33.5	
5KVA/6KVA	137A	200AH	1*1/0AWG	60	8.4	33.5	5~ 6 Nm
			2*4AWG	44	8.4	33.5	

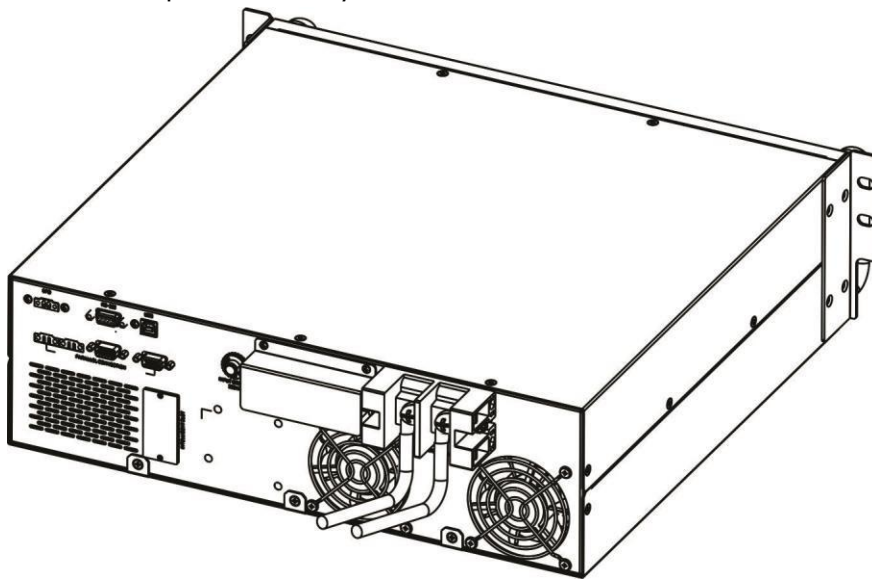Please follow below chart to implement battery connection:



 **WARNING: Shock Hazard**
Installation must be performed with care due to high battery voltage in series.

 **CAUTION!!** Do not apply anti-oxidant substance on the terminals before terminals are connected tightly.
CAUTION!! Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

AC Input/Output Connection

CAUTION!! Before connecting to AC input power source, please install a **separate** AC breaker between UPS and AC input power source. This will ensure the UPS can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of **AC breaker is 30A for 3KVA and 50A for 5KVA/6KVA.**

CAUTION!! There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.


WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input/output connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

Recommended cable requirement and terminal size or AC wires:

Capacity	Gauge	Ring Terminal			Torque Value
		Cable mm ²	Dimensions		
			D (mm)	L (mm)	
3KVA	12AWG	3.3	5.3	19	1.4~ 1.6Nm
5KVA	10AWG	5.5	5.3	19	1.4~ 1.6Nm
6KVA	10AWG	5.5	5.3	19	1.4~ 1.6Nm

Ring terminal:

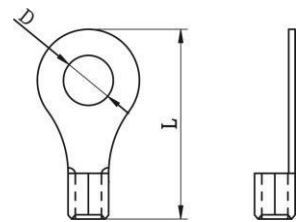


Please follow below steps to implement AC input/output connection:

1. Before making AC input/output connection, be sure to open DC protector or disconnecter first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N 3 mm. Then, insert one conductor into one ring terminal as an assembled wire.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor (⊕) first.

⊕ → **Ground (yellow-green)**

L → **LINE (brown or black)**

N → **Neutral (blue)**

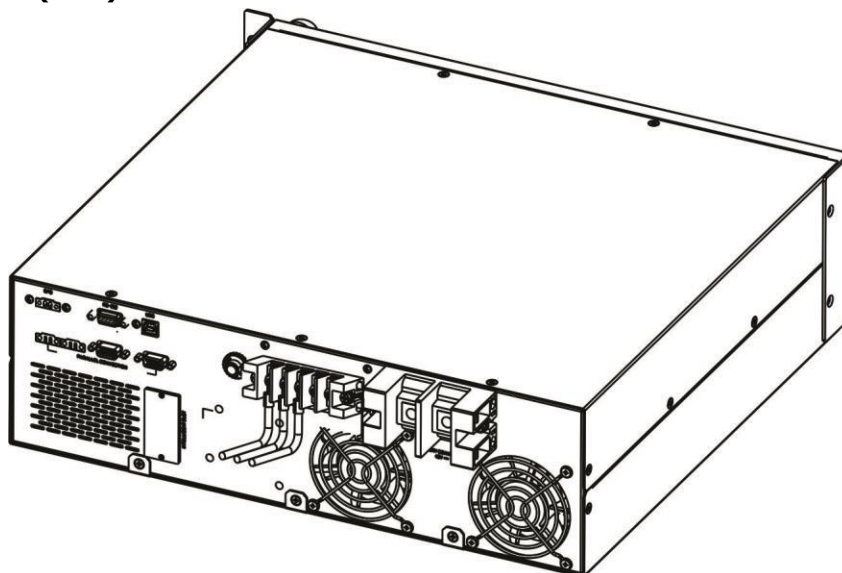

WARNING:

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.


4. Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws.

Be sure to connect PE protective conductor (⊕) first.

⊕ → **Ground (yellow-green)**

L → **LINE (brown or black)**

N → **Neutral (blue)**

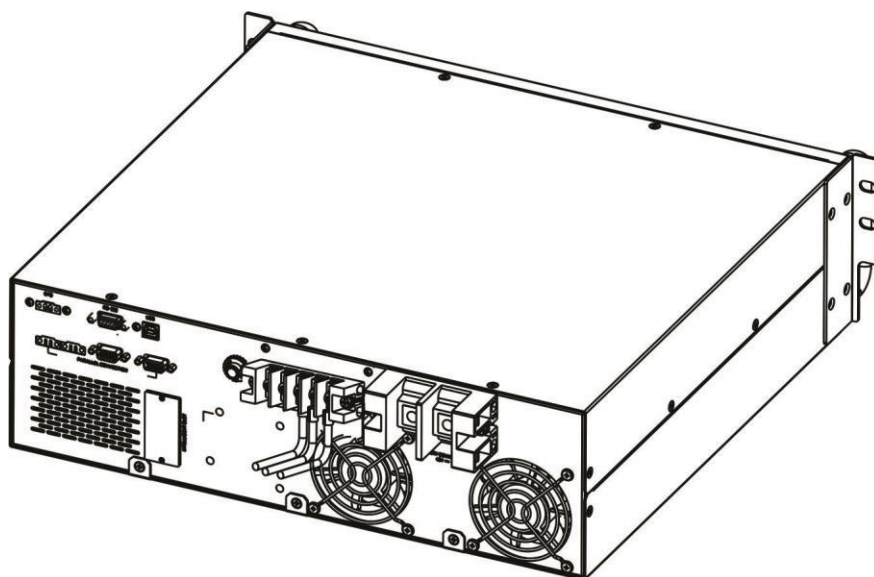

5. Make sure the wires are securely connected.

CAUTION: Important

Be sure to connect AC wires with correct polarity. If L and N wires are connected reversely, it may cause utility short-circuited when these UPSs are worked in parallel operation.

CAUTION: Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this UPS will trigger overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.


Communication Connection

Communication port:


USB port



RS-232 port



Intelligent slot



To allow for unattended UPS shutdown/start-up and status monitoring, connect the communication cable one end to the USB/RS-232 port and the other to the communication port of your PC. With the monitoring software installed, you can schedule UPS shutdown/start-up and monitor UPS status through PC.

The UPS is equipped with intelligent slot perfect for either SNMP or AS400 card. When installing either SNMP or AS400 card in the UPS, it will provide advanced communication and monitoring options.

Software Installation


For optimal computer system protection, install UPS monitoring software to fully configure UPS shutdown. Use supplied RS-232 or USB communication cable to connect RS-232/USB port of UPS and RS-232/USB port of PC. Then, follow below steps to install monitoring software.

1. Insert the included installation CD into CD-ROM drive and then follow the on-screen instructions to proceed software installation. If there no screen shows 1 minute after inserting the CD, please execute setup.exe file for initiating software installation.
2. Follow the on-screen instructions to install the software.

When your computer restarts, the monitoring software will appear as an orange plug icon located in the system tray, near the clock.

EPO Function


This UPS is equipped with EPO function. By default, the UPS is delivered from factory with Pin 1 and pin 2 closed (a metal plate is connected to Pin 1 and Pin2) for UPS normal operation. To activate EPO function, remove two screws on EPO port and metal plate will be removed.

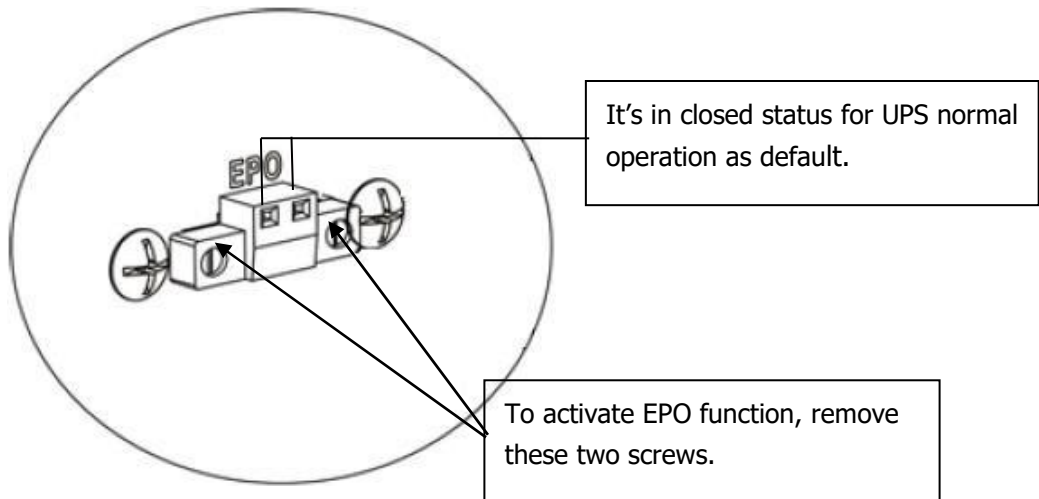

OPERATION

Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the UPS. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

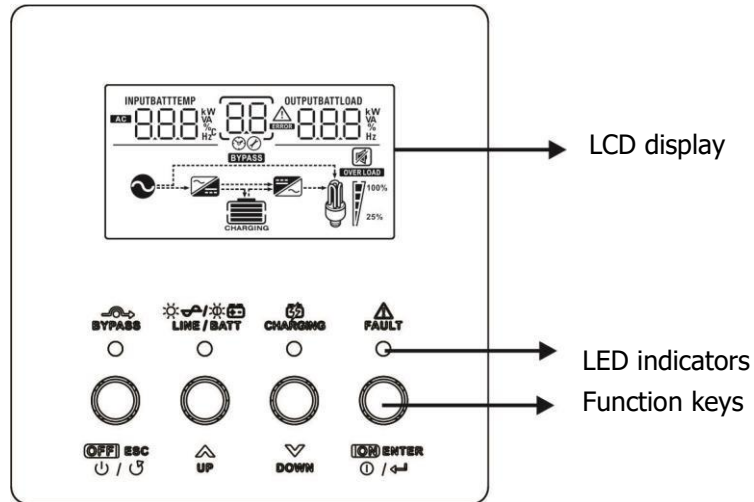

























Function Keys




Key	Function	Operation
	Turn on the UPS	Press and hold the key for more than 1s.
	To confirm the selection	Press this key in setting mode
	Turn off the UPS	Press and hold the key for more than 1s.
	To exit setting mode	Press this key in setting mode
	Return to default display	Press this key in display mode
	To go to previous selection	Press this key
	To go to next selection	Press this key
	To enter setting mode	Press and hold these two keys simultaneous for more than 1s in display mode

LED Indicators


LED Indicator		Messages	
	yellow	Solid On	Output is powered by utility in Bypass/ECO/Fault mode.
	Green	Solid On	Output is powered by utility in Line/ECO mode.
		Flashing	Output is powered by battery in battery mode.
	yellow	Solid On	Battery is fully charged.
		Flashing	Battery is charging.
	Red	Solid On	Fault occurs in the UPS.
		Flashing	Warning condition occurs in the UPS.







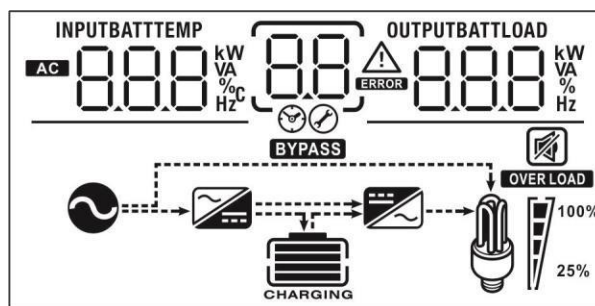

There are 4 LEDs on front panel to show the UPS working status:

LED Mode	 BYPASS	 LINE BATT	 CHARGING	 FAULT
UPS On				
Bypass mode			--	
Line mode			--	
Battery mode				
ECO mode			--	
Fault mode	--		--	
Warning mode	--	--	--	

Note:  means LED is lit,  means LED is flashing,  means LED is faded, -- means LED is lit or faded.









LCD Display Icons









Icon	Function description	
Input Source Information		
	Indicates the AC input.	
	Indicate input voltage, input frequency, charger current, charger power, battery voltage.	
Configuration Program and Fault Information		
	Indicates the setting programs.	
	Indicates the warning and fault codes. Warning:  flashing with warning code. Fault:  lighting with fault code	
Output Information		
	Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current.	
Battery Information		
	Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100% in battery mode and charging status in line mode.	
In AC mode, it will present battery charging status.		
Status	Battery voltage	LCD Display
Constant	<2V/cell	4 bars will flash in turns.
	2 ~ 2.083V/cell	Bottom bar will be on and the other three

Current mode / Constant Voltage mode	2.083 ~ 2.167V/cell	bars will flash in turns. Bottom two bars will be on and the other two bars will flash in turns.
	> 2.167 V/cell	Bottom three bars will be on and the top bar will flash.
Floating mode. Batteries are fully charged.		4 bars will be on.






In battery mode, it will present battery capacity.

Load Percentage	Battery Voltage	LCD Display
Load >50%	< 1.85V/cell	
	1.85V/cell ~ 1.933V/cell	
	1.933V/cell ~ 2.017V/cell	
	> 2.017V/cell	
Load < 50%	< 1.892V/cell	
	1.892V/cell ~ 1.975V/cell	
	1.975V/cell ~ 2.058V/cell	
	> 2.058V/cell	


Load Information

	Indicates overload.			
	Indicates the load level by 0-24%, 25-49%, 50-74% and 75-100%.			
	0%~24%	25%~49%	50%~74%	75%~100%
				

Mode Operation Information

	Indicates unit connects to the mains.
	Indicates unit will work in Bypass mode
	Indicates unit will work in ECO mode
	Indicates the utility charger circuit is working.
	Indicates the DC/AC inverter circuit is working.

Mute Operation

	Indicates unit alarm is disabled.
---	-----------------------------------














LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.

Setting Programs:

Program	Description	Selectable option	
00	Exit setting mode	Escape 00 ESC	
02	Maximum charging current: To configure total charging current.	10A (default) 02 10 ^A	The setting range is from 10A to 60A and increment of each click is 10A.
05	Battery type	AGM (default) 05 AGM	Flooded 05 FLD
		User-Defined 05 USE	If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26, 27 and 29.
06	Auto restart when overload occurs	Restart disable (default) 06 LFD	Restart enable 06 LFE
07	Auto restart when over temperature occurs	Restart disable (default) 07 TFD	Restart enable 07 TFE
09	Output frequency	50Hz (default) 09 50 ^{Hz}	60Hz 09 60 ^{Hz}
10	Operation Logic	Automatically (default) 10 AUT	If selected and utility is available, UPS will work in line mode. Once utility frequency is unstable, UPS will work in bypass mode if bypass function is not forbidden in program 23.
		Online mode 10 ONL	If selected, UPS will work in line mode when utility is available.
		ECO Mode 10 ECO	If selected and bypass is not forbidden in program 23, UPS will work in ECO mode when utility is available.
18	Alarm control	Alarm on (default) 18 BON	Alarm off 18 BOF







19	Auto return to default display screen	Return to default display screen (default) 19 ESP	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		Stay at latest screen 19 FEP	If selected, the display screen will stay at latest screen user finally switches.
20	Backlight control	Backlight on (default) 20 LON	Backlight off 20 LOF
22	Beeps while primary source is interrupted	Alarm on (default) 22 AON	Alarm off 22 AOF
23	Bypass function:	Bypass Forbidden 23 byF	If selected, UPS won't work in bypass/ECO modes.
		Bypass disable 23 byd	If selected and power ON button is pressed on, UPS can work in bypass/ECO mode only if utility is available.
		Bypass enable (default) 23 byE	If selected and no matter power ON button is pressed on or not, UPS can work in bypass mode if utility is available.
25	Record Fault code	Record enable 25 FEN	Record disable (default) 25 FdS
26	Bulk charging voltage (C.V voltage)	Default setting: 56.4V CU 26 56.4 ^{BATT} v	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 48.0V to 64.0V. Increment of each click is 0.1V.	
27	Floating charging voltage	Default setting: 54.0V FLU 27 54.0 ^{BATT} v	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 48.0V to 64.0V. Increment of each click is 0.1V.	
28	AC output mode *This setting is able to set up only when the UPS is in standby mode. Be sure that AC output is off status. Otherwise, please refer to chapter "Power ON/OFF" to press "ESC" button to turn off AC output.	Single: 28 ^{OUTPUT} S1 0	When the units are used in parallel with single phase, please select "PAL". It is required to have at least 3 UPS or maximum 6 UPS to support three-phase equipment. It's required to have at least one UPS in each phase or it's up to four UPS in one phase. Please refers to 5-2 for detailed
		Parallel: 28 ^{OUTPUT} PAL	
		L1 phase: 28 ^{OUTPUT} 3P 1	













		<p>L2 phase: </p> <p>L3 phase: </p>	<p>information. Please select "3P1" in program 28 for the UPS connected to L1 phase, "3P2" in program 28 for the UPS connected to L2 phase and "3P3" in program 28 for the UPS connected to L3 phase.</p> <p>Be sure to connect share current cable to units which are on the same phase. Do NOT connect share current cable between units on different phases.</p>
29	Low DC cut-off voltage	<p>Default setting: 42.0V </p>	<p>If self-defined is selected in program 5, this program can be set up. Setting range 40.0V to 54.0V. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.</p>
32	Bulk charging time	<p>auto-charging time (default) </p>	<p>5min </p> <p>If "User-Defined" is selected in program 05, this program can be set up. Setting range is from 5min to 900min. Increment of each click is 5min. Otherwise, Keeping auto-charging time.</p>
33	Battery equalization	<p>Battery equalization enable </p>	<p>Battery equalization disable (default) </p> <p>If "Flooded" or "User-Defined" is selected in program 05, this program can be set up.</p>
34	Battery equalization voltage	<p>Default setting: 58.4V </p>	<p>Setting range is from 48.0V to 64.0V. Increment of each click is 0.1V.</p>
35	Battery equalized time	<p>60min (default) </p>	<p>Setting range is from 5min to 900min. Increment of each click is 5min.</p>
36	Battery equalized timeout	<p>120min (default) </p>	<p>Setting range is from 5min to 900 min. Increment of each click is 5 min.</p>
37	Equalization interval	<p>30days (default) </p>	<p>Setting range is from 0 to 90 days. Increment of each click is 1 day</p>
39	Equalization activated immediately	<p>Disable (default) </p>	<p>Enable </p>

		<p>If equalization function is enabled in program 33, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows "EQ". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 37 setting. At this time, "EQ" will not be shown in LCD main page.</p>
--	--	---







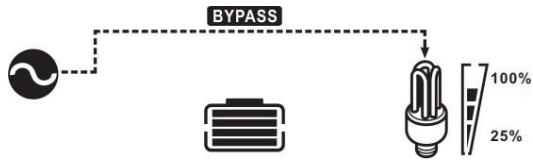

Display Setting

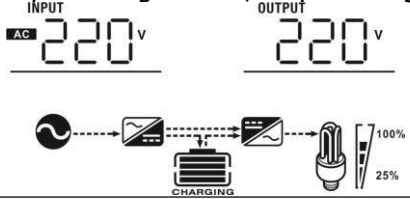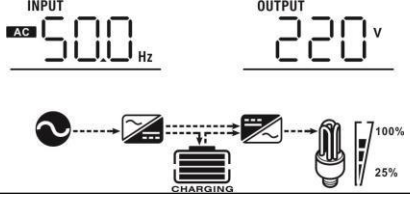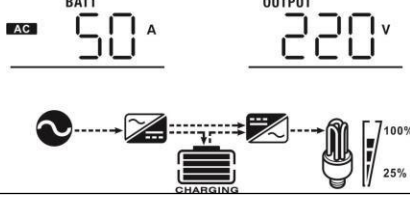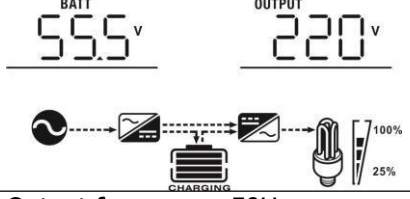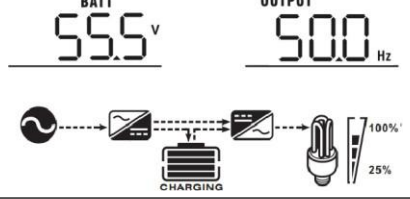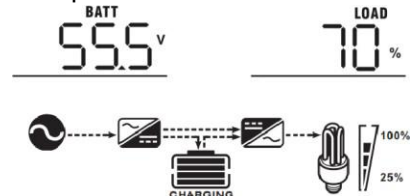


The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: input voltage, input frequency, charging power, battery voltage, output voltage, output frequency, load percentage, load in VA, load in Watt, DC discharging current, main CPU Version and second CPU Version.

Selectable information	LCD display
Input voltage/Output voltage (Default Display Screen)	<p>Input Voltage=220V, output voltage=220V</p> 
Input frequency	<p>Input frequency=50Hz</p> 
Charging current	<p>charging current=50A</p> 
Battery voltage and output voltage	<p>Battery voltage=55.5V, output voltage=220V</p> 
Output frequency	<p>Output frequency=50Hz</p> 
Load percentage	<p>Load percent=70%</p> 

<p>Load in VA</p>	<p>When connected load is lower than 1kVA, load in VA will present xxxVA like below chart.</p> <p style="text-align: center;">  </p> <p style="text-align: center;">  </p> <p>When load is larger than 1kVA ($\geq 1\text{kVA}$), load in VA will present x.xkVA like below chart.</p> <p style="text-align: center;">  </p> <p style="text-align: center;">  </p>
<p>Load in Watt</p>	<p>When load is larger than 1kW, load in W will present xxxW like below chart.</p> <p style="text-align: center;">  </p> <p style="text-align: center;">  </p> <p>When load is larger than 1kW ($\geq 1\text{kW}$), load in W will present x.xkW like below chart.</p> <p style="text-align: center;">  </p> <p style="text-align: center;">  </p>
<p>Battery voltage/DC discharging current</p>	<p>Battery voltage=55.5V, discharging current=1A</p> <p style="text-align: center;">  </p> <p style="text-align: center;">  </p>
<p>Main CPU version checking.</p>	<p>Main CPU version 00014.04.</p> <p style="text-align: center;">  </p> <p style="text-align: center;">  </p>

Operating Mode Description

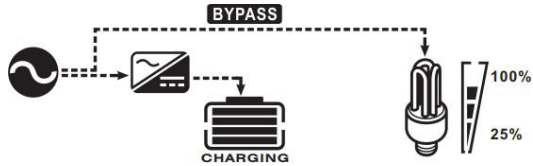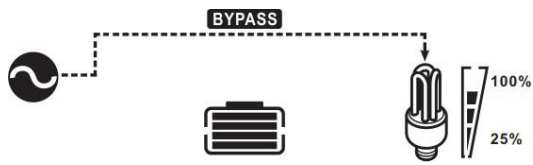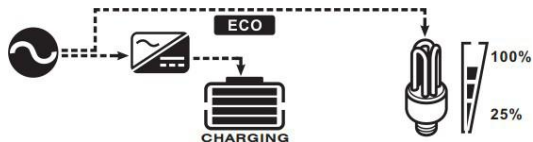










Operation mode	Description	LCD display
<p>Standby mode</p> <p>Note:</p> <p>*Standby mode: The UPS is not turned on yet but at this time, the UPS can charge battery without AC output.</p>	<p>No output is supplied by the unit but it still can charge batteries.</p>	<p>Charging by utility.</p>  <p>No charging.</p> 
<p>Bypass Mode</p>	<p>The unit will provide output power from the utility. The utility can charge batteries.</p>	<p>Charging by utility</p>  <p>No charging</p> 
<p>ECO Mode</p>	<p>The unit will provide output power from the utility. The utility can charge batteries.</p>	<p>Charging by utility</p>  <p>No charging</p> 
<p>Fault mode</p> <p>Note:</p> <p>*Fault mode: Errors are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.</p>	<p>Utility can bypass.</p>	<p>No charging and Bypass</p>  <p>No charging</p> 

Line Mode	The unit will provide output power from the mains. It will also charge the battery if connecting to battery.	<p>No charging.</p>  <p>Charging by utility.</p> 
Battery Mode	The unit will provide output power from battery.	<p>Power from battery only.</p> 

Fault Reference Code

Fault Code	Fault Event	Icon on
01	Fan is locked when UPS is off.	
02	Over temperature	
03	Battery voltage is too high	
04	Battery voltage is too low	
05	Output short circuited or over temperature is detected by internal converter components.	
06	Output voltage is too high.	
07	Overload time out	
08	Bus voltage is too high	
09	Bus soft start failed	
50	PFC over current	
51	OP over current	
52	Bus voltage is too low	
53	UPS soft start failure	
55	Over DC voltage in AC output	
56	Battery is not connected	
57	Current sensor failed	
58	Output voltage is too low	

Warning Indicator

Warning Code	Warning Event	Audible Alarm	Icon flashing
01	Fan is locked when UPS is on.	Beep three times every second	
02	Over temperature	None	
03	Battery is over-charged	Beep once every second	
04	Low battery	Beep once every second	
07	Overload	Beep once every 0.5 second	
10	Output power derating	Beep twice every 3 seconds	
12	EPO activated	None	
13	Manual Bypass activated	None	
17	Phase Lock failed	None	
E9	Battery equalization	None	
bP	Battery is not connected	None	

Battery Equalization

Equalization function is added into charge controller. It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.


- **How to Apply Equalization Function**

You must enable battery equalization function in monitoring LCD setting program 33 first. Then, you may apply this function in device by either one of following methods:

1. Setting equalization interval in program 37.
2. Active equalization immediately in program 39.


- **When to Equalize**

In float stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

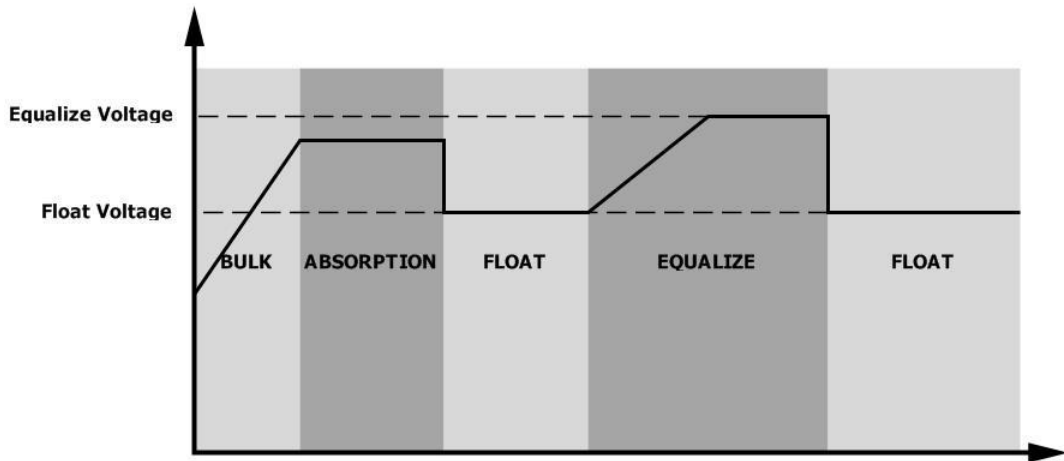


- **Equalize charging time and timeout**

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

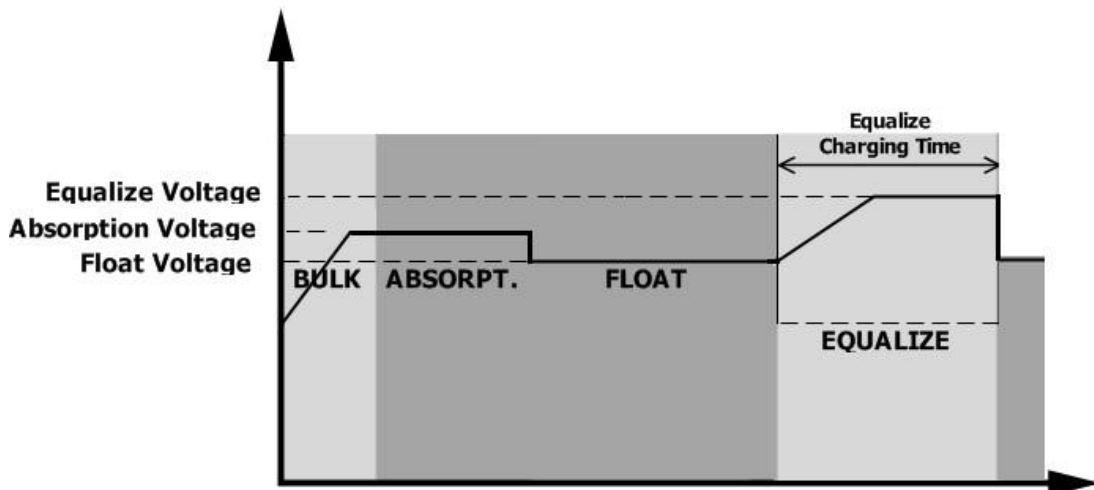

However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

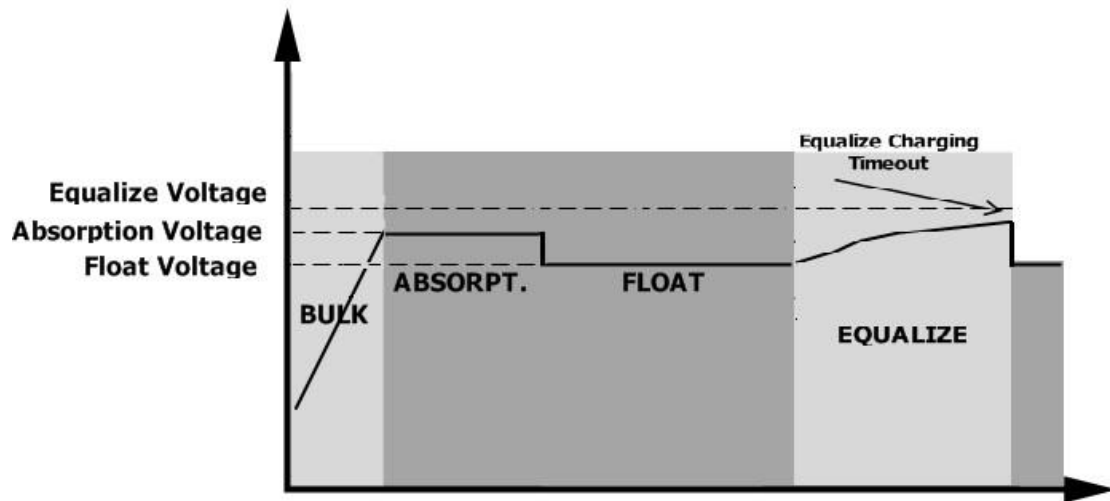

SPECIFICATIONS

Table 1 Line Mode Specifications

MODEL	3KW	5KW	6KW
Input Voltage Waveform	Sinusoidal		
Nominal Input Voltage	220Vac		
Low Loss Voltage	110Vac±7V		
Low Loss Return Voltage	120Vac±7V		
High Loss Voltage	280Vac±7V		
High Loss Return Voltage	270Vac±7V		
Max AC Input Voltage	300Vac		
Nominal Input Frequency	50Hz / 60Hz (Auto detection)		
Low Loss Frequency	46(56)±1Hz		
Low Loss Return Frequency	46.5(57)±1Hz		
High Loss Frequency	54(64)±1Hz		
High Loss Return Frequency	53(63)±1Hz		
Power Factor	>0.98		
Output Short Circuit Protection	Line mode: Circuit Breaker Battery mode: Electronic Circuits		
Efficiency (Line Mode)	93% (Peak Efficiency)		
Transfer Time	Line mode←→Battery mode 0ms Line mode / Battery mode ←→Bypass mode 4ms		

Table 2 Battery Mode Specifications

MODEL	3KVA	5KVA	6KVA
Rated Output Power	3KVA/3KW	5KVA/5KW	6KVA/5.1KW
Output Voltage Waveform	Pure Sine Wave		
Output Voltage Regulation	220Vac±5%		
Output Frequency	50Hz or 60Hz		
Peak Efficiency	90%		
Overload Protection	5s@≥150% load; 10s@105%~150% load		
Surge Capacity	2* rated power for 5 seconds		
Nominal DC Input Voltage	48Vdc		
Operating Range	40Vdc -66Vdc		
Cold Start Voltage	46Vdc		
Low DC Warning Voltage @ load < 50% @ load ≥ 50%	45.0Vdc 44.0Vdc		
Low DC Warning Return Voltage @ load < 50% @ load ≥ 50%	47.0Vdc 46.0Vdc		
High DC Recovery Voltage	64Vdc		
High DC Cut-off Voltage	66Vdc		
No Load Power Consumption	<67W @48V		

Table 3 Charge Mode Specifications

Utility Charging Mode	
MODEL	3KVA/5KVA/6KVA
Charging Current @ Nominal Input Voltage	Default: 10A, max: 60A
Bulk Charging Voltage	Flooded Battery 58.4Vdc
	AGM / Gel Battery 56.4Vdc
Floating Charging Voltage	54Vdc
Overcharge Protection	66Vdc
Charging Algorithm	3-Step
Charging Curve	

Table 4 ECO/Bypass Mode Specifications

Bypass Mode	
MODEL	All model
Input Voltage Waveform	Sinusoidal
Low Loss Voltage	176Vac±7V
Low Loss Return Voltage	186Vac±7V
High Loss Voltage	280Vac±7V
High Loss Return Voltage	270Vac±7V
Nominal Input Frequency	50Hz / 60Hz (Auto detection)
Low Loss Frequency	46(56)±1Hz
Low Loss Return Frequency	46.5(57)±1Hz
High Loss Frequency	54(64)±1Hz
High Loss Return Frequency	53(63)±1Hz

Table 5 General Specifications

MODEL	All model
Parallel-able	YES
Communication	RS232 and USB
Safety Certification	CE
Operating Temperature Range	0°C to 55°C
Storage temperature	-15°C~ 60°C
Humidity	5% to 95% Relative Humidity (Non-condensing)
Dimension (D*W*H), mm	420 x 438 x 130.8
Net Weight, kg	15

TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication.	1. The battery voltage is far too low. (<1.4V/Cell) 2. Battery polarity is connected reversed.	1. Check if batteries and the wiring are connected well. 2. Re-charge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	Green LED is flashing.	Insufficient quality of AC power. (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS→Appliance)
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 07	Overload error. The UPS is overload 110% and time is up.	Reduce the connected load by switching off some equipment.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
	Fault code 02	Internal temperature of UPS component is over 100°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 03	Battery is over-charged.	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 01	Fan fault	Replace the fan.
	Fault code 06/58	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	1. Reduce the connected load. 2. Return to repair center
	Fault code 08/09/53/57	Internal components failed.	Return to repair center.
	Fault code 50	PFC over current or surge.	Restart the unit, if the error happens again, please return to repair center.
	Fault code 51	OP over current or surge.	
	Fault code 52	Bus voltage is too low.	
	Fault code 55	Output voltage is unbalanced.	
	Fault code 56	Battery is not connected well or fuse is burnt.	If the battery is connected well, please return to repair center.

PARALLEL FUNCTION

1. Introduction

This UPS can be used in parallel with two different operation modes.

1. Parallel operation in single phase with up to 9 units. The maximum supported output power is **45.9KW/54KVA for 6KVA model and 27W/27KVA for 3KVA model.**
2. Maximum nine units work together to support three-phase equipment. Seven units support one phase maximum. For 6KVA model, the maximum supported output power is **45.9KW/54KVA** and one phase can be up to **35.7KW/42KVA**. For 3KVA model, the maximum supported output power is **27W/27KVA** and one phase can be up to **21KW/21KVA**.

WARNING! Please make sure all output N wires of each UPS must be connected always. Otherwise, it will cause UPS fault in error code # 72.

NOTE: If this unit is bundled with share current cable and parallel cable, this UPS is default supported parallel operation. You may skip section 3. If not, please purchase parallel kit and install this unit by following instruction from professional technical personnel in local dealer.

2. Package Contents

In parallel kit, you will find the following items in the package:



Parallel communication cable



Current sharing cable

3. Wiring Connection

NOTICE: It's requested to connect to battery for parallel operation

The cable size of each UPS is shown as below:

Recommended battery cable and terminal size for each UPS:


Model	Maximum Amperage	Battery capacity	Wire Size	Ring Terminal			Torque value
				Cable mm ²	Dimensions		
					D (mm)	L (mm)	
BWT-25003KSO	80A	200AH	1*4AWG	22	8.4	33.5	5~ 6 Nm
			2*6AWG	28	8.4	33.5	
BWT-25005KSO/6KSO	137A	200AH	1*1/0AWG	60	8.4	33.5	5~ 6 Nm
			2*4AWG	44	8.4	33.5	

WARNING: Be sure the length of all battery cables is the same. Otherwise, there will be voltage difference between UPS and battery to cause parallel UPS not working.

Recommended AC input and output cable size for each UPS:

Model	Gauge	Ring Terminal			Torque Value
		Cable mm ²	Dimensions		
			D (mm)	L (mm)	
BWT-25003KSO	12AWG	3.3	5.3	19	1.4~ 1.6Nm
Other model	10AWG	5.5	5.3	19	1.4~ 1.6Nm

Ring terminal:

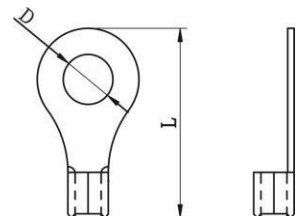

You need to connect the cables of each UPS together. Take the battery cables for example: You need to use a connector or bus-bar as a joint to connect the battery cables together, and then connect to the battery terminal. The cable size used from joint to battery should be X times cable size in the tables above. "X" indicates the number of UPS connected in parallel.

Regarding AC input and output, please also follow the same principle.

CAUTION!! Please install the breaker at the battery and AC input side. This will ensure the UPS can be securely disconnected during maintenance and fully protected from over current of battery or AC input. The recommended mounted location of the breakers is shown in the figures in 5-1 and 5-2.

Recommended breaker specification of battery for each UPS:

Model	1 unit*
BWT-25003KSO	100A/80VDC
BWT-25005KSO/6KSO	150A/80VDC

*If you want to use only one breaker at the battery side for the whole system, the rating of the breaker should be X times current of 1 unit. "X" indicates the number of UPS connected in parallel.

Recommended breaker specification of AC input with single phase:

Capacity	2 units	3 units	4 units	5 units	6 units	7 units	8 units	9 units
3KVA	100A	150A	200A	250A	300A	350A	400A	450A
5KVA/6KVA	100A	150A	200A	250A	300A	350A	400A	450A

Note1: Also, you can use 50A breaker for only 1 unit and install one breaker at its AC input in each UPS.

Note2: Regarding three-phase system, you can use 4-pole breaker directly and the rating of the breaker should be compatible with the phase current limitation from the phase with maximum units

Recommended battery capacity


UPS parallel numbers	2	3	4	5	6	7	8	9
Battery Capacity	800AH	1200AH	1600AH	2000AH	2400AH	2800AH	3200AH	3600AH

WARNING! Be sure that all UPS will share the same battery bank. Otherwise, the UPS will transfer to fault mode.


3-1. Parallel Operation in Single phase

Two UPS in parallel:

Power Connection

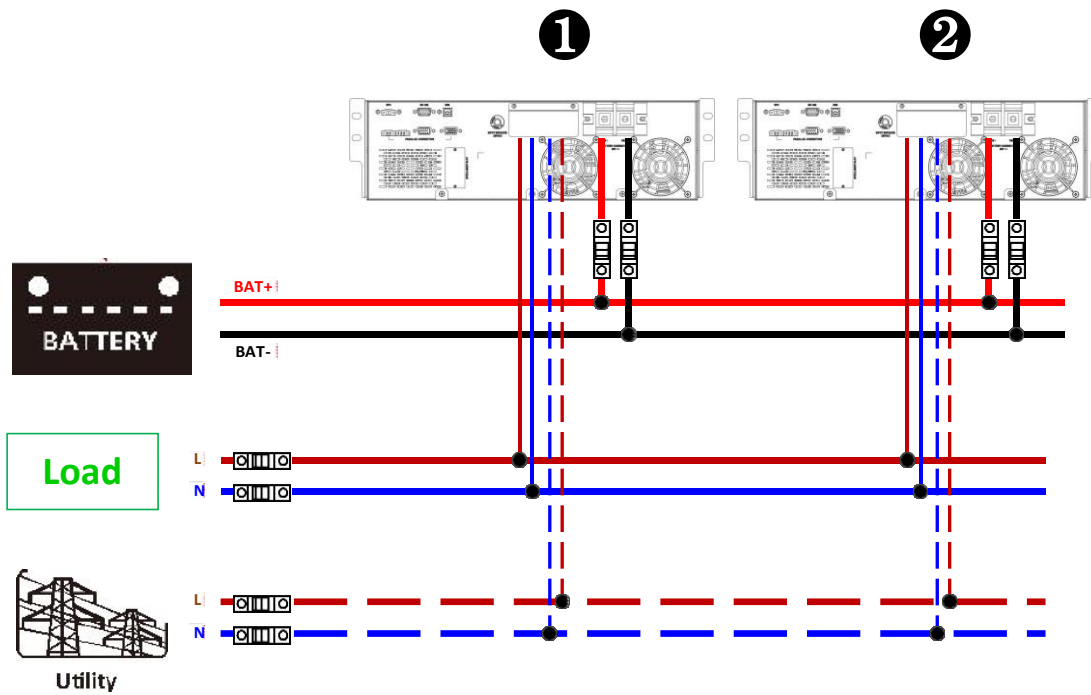


Communication Connection

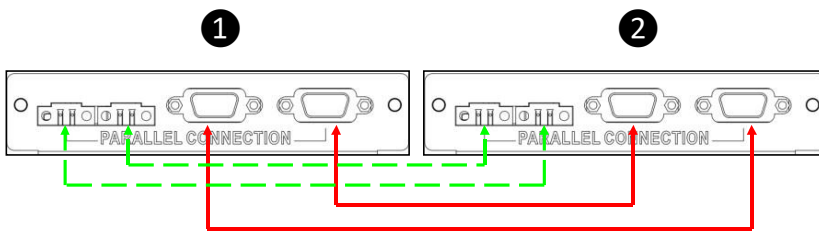


Three UPS in parallel:

Power Connection

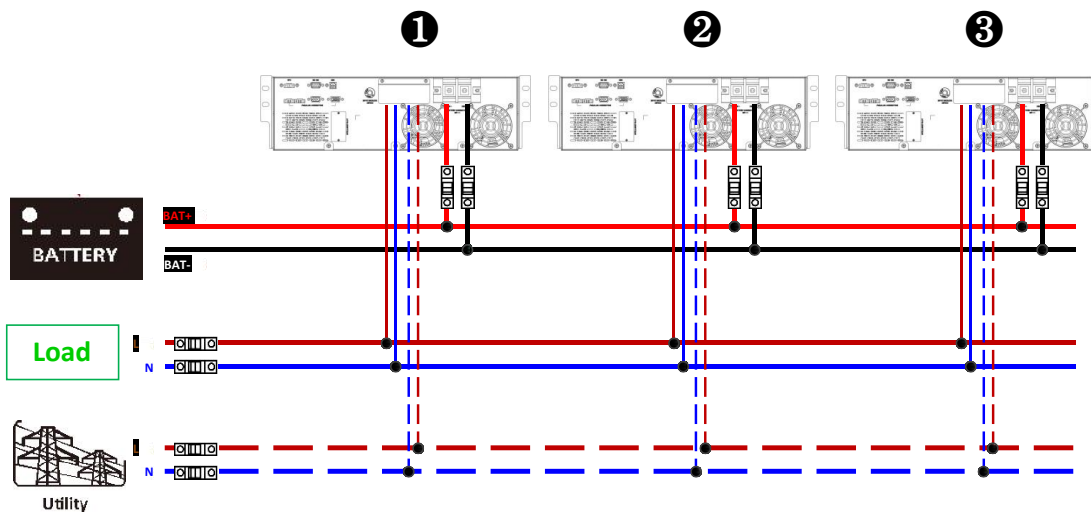


Communication Connection

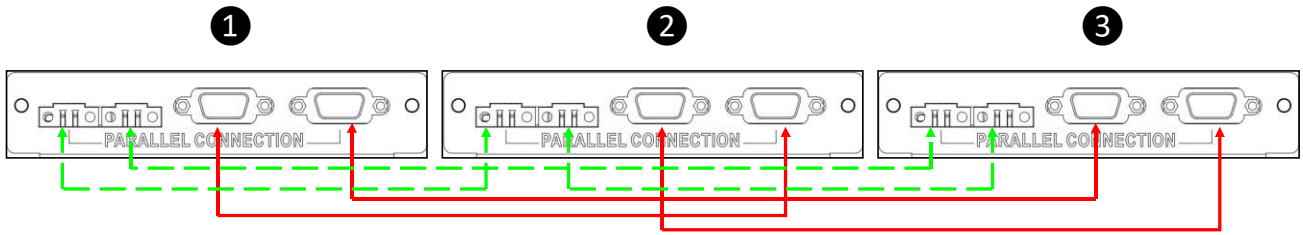


Four UPS in parallel:

Power Connection

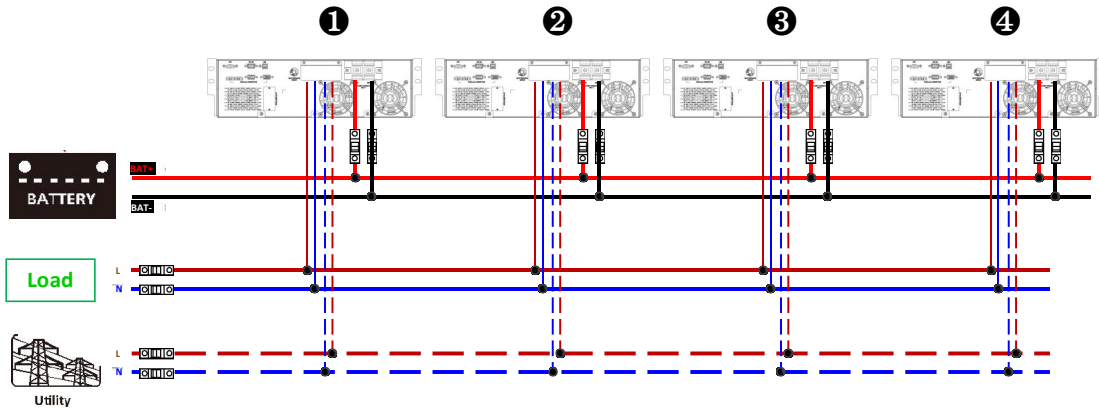


Communication Connection

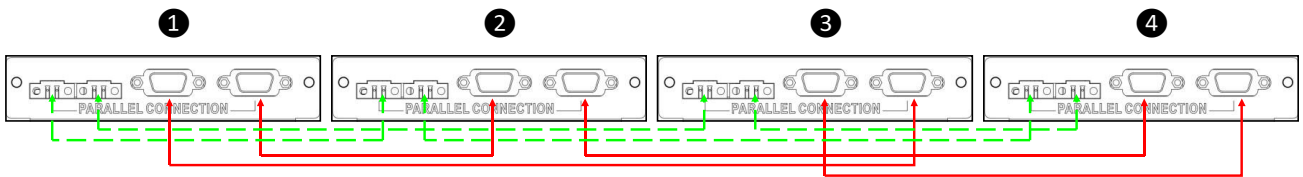


Five UPS in parallel:

Power Connection

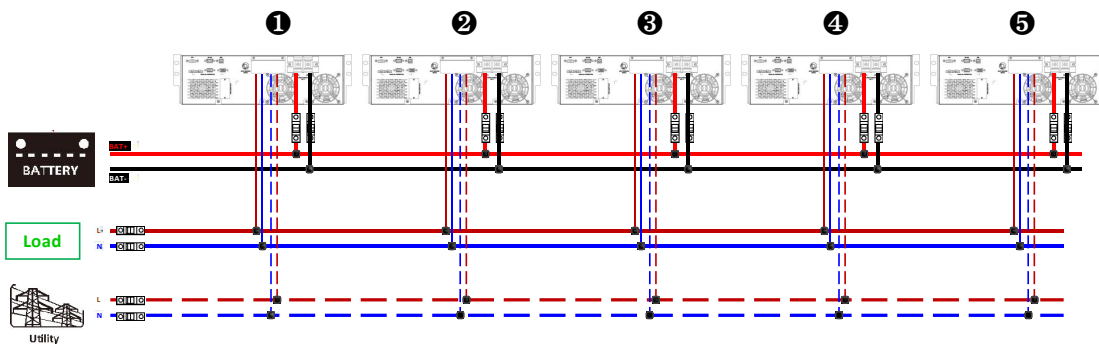


Communication Connection

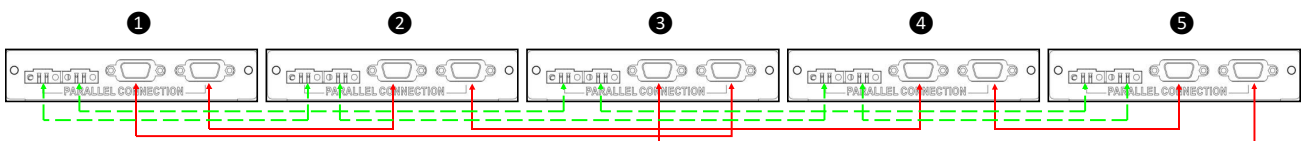


Six UPS in parallel:

Power Connection

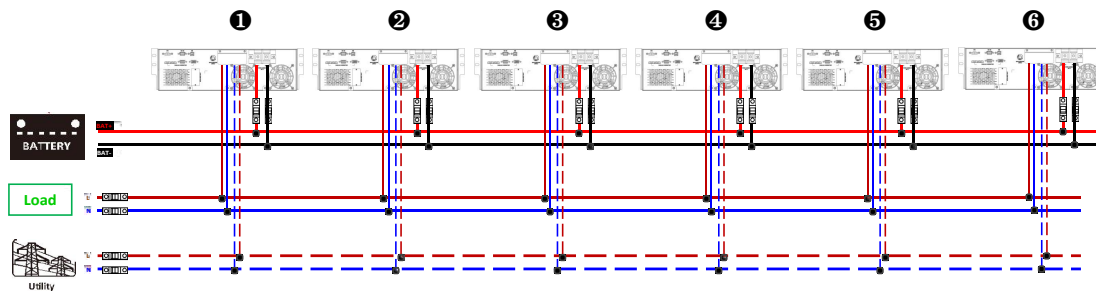


Communication Connection




Seven UPS in parallel:

Power Connection

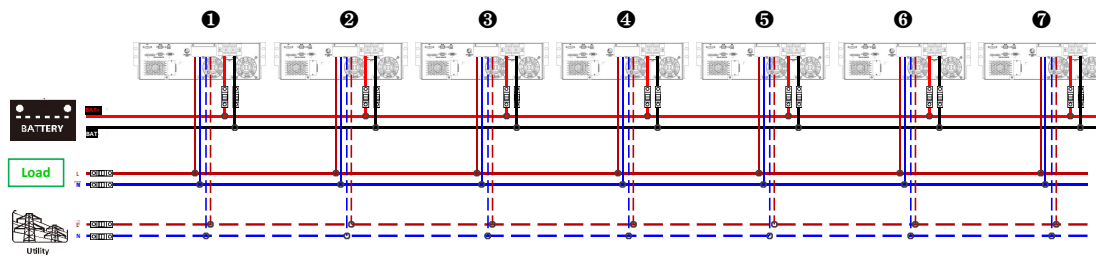


Communication Connection




Eight UPS in parallel:

Power Connection

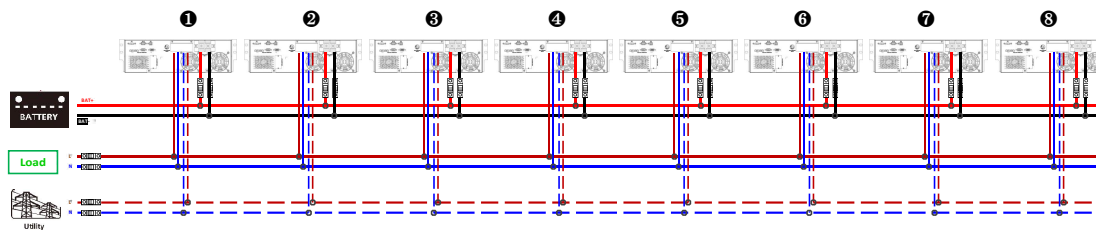


Communication Connection



Nine UPS in parallel:

Power Connection

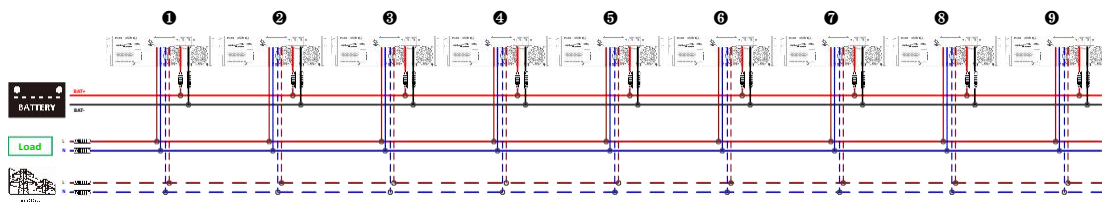


Communication Connection




3-2. Support 3-phase equipment

Three UPS in each phase:

Power Connection

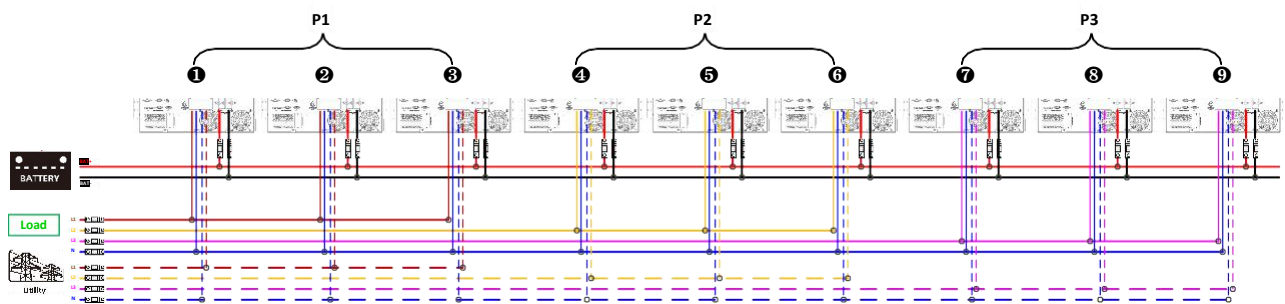


Communication Connection

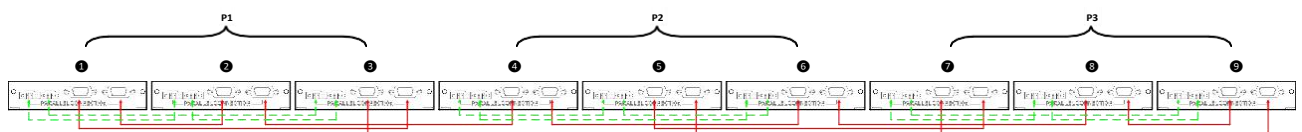


Three UPS in one phase, three UPS in second phase and two UPS for the third phase:

Power Connection

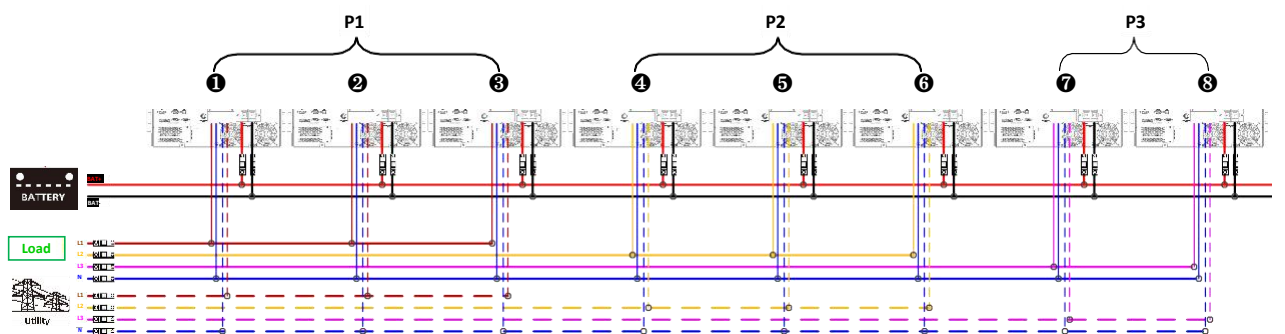


Communication Connection

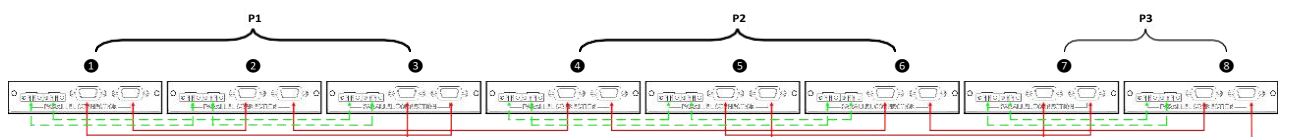


Three UPS in one phase, two UPS in second phase and two UPS for the third phase:

Power Connection

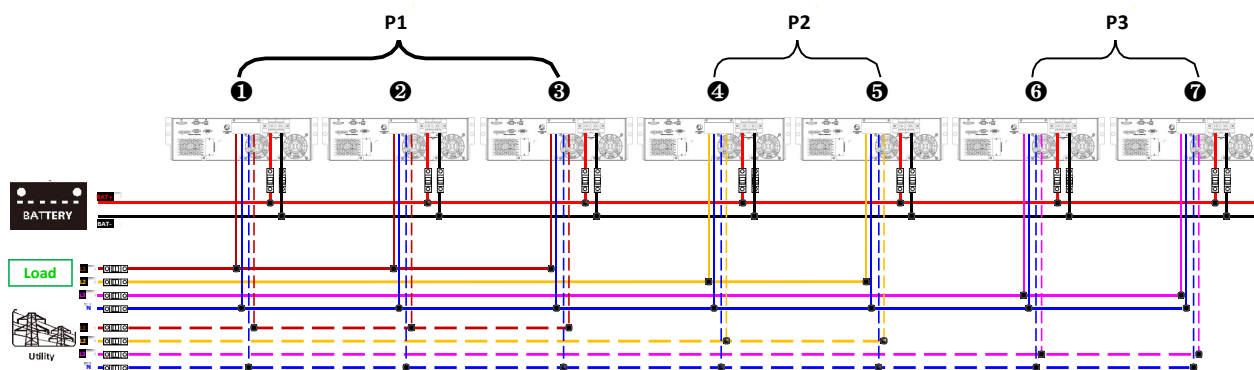


Communication Connection

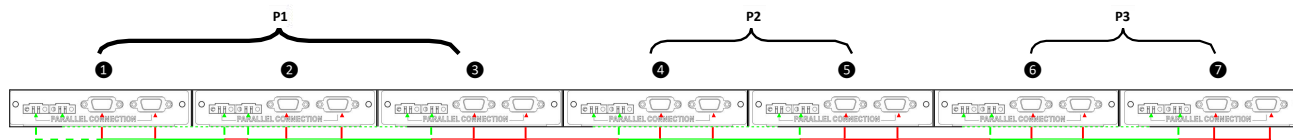


Two UPS in each phase:

Power Connection

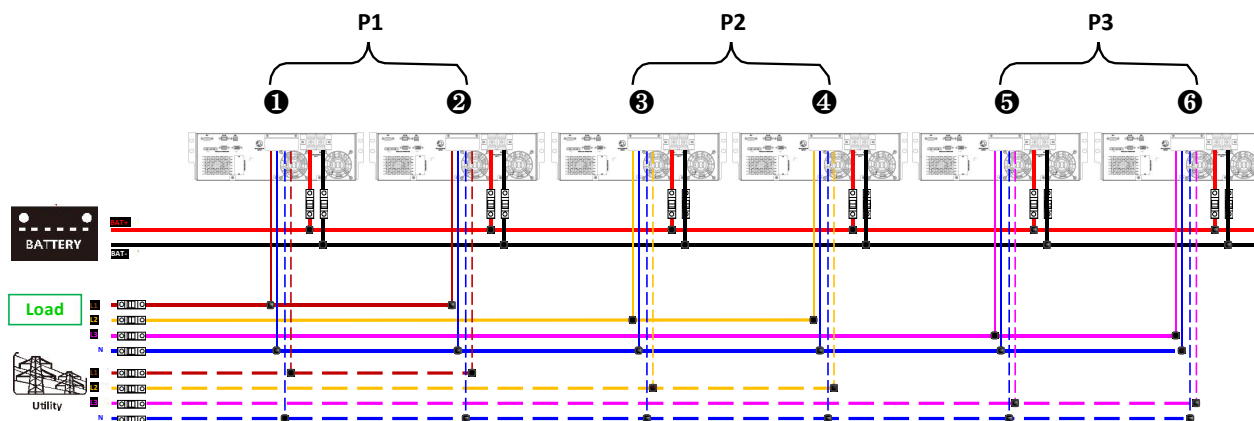


Communication Connection

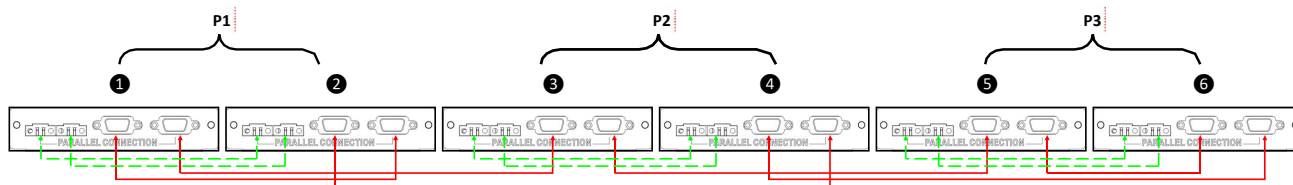


Four UPS in one phase and one UPS for the other two phases:

Power Connection

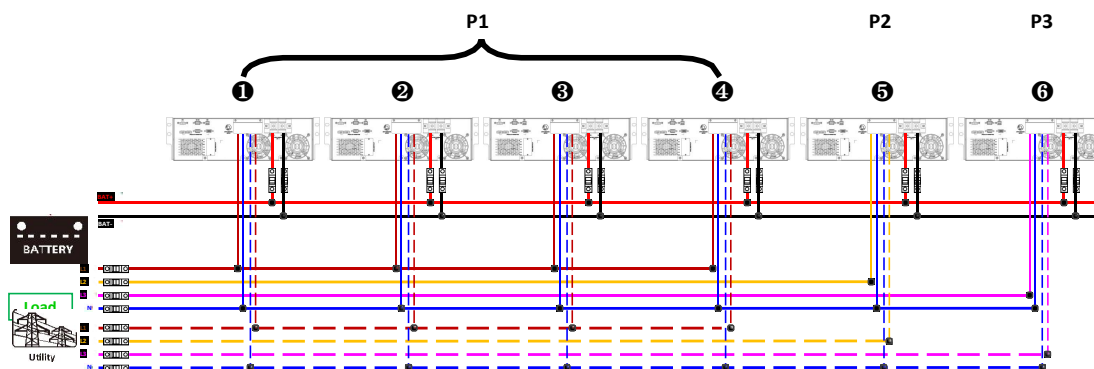


Communication Connection

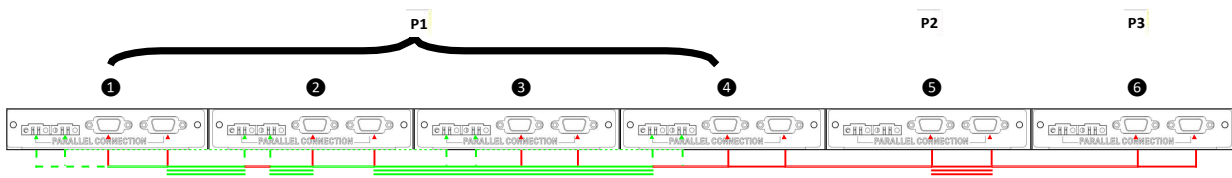


Three UPS in one phase, two UPS in second phase and one UPS for the third phase:

Power Connection

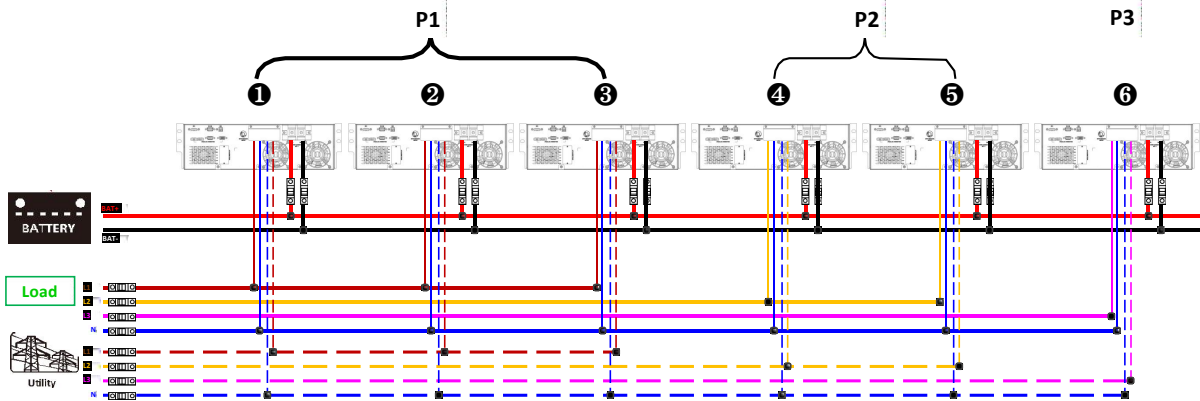


Communication Connection

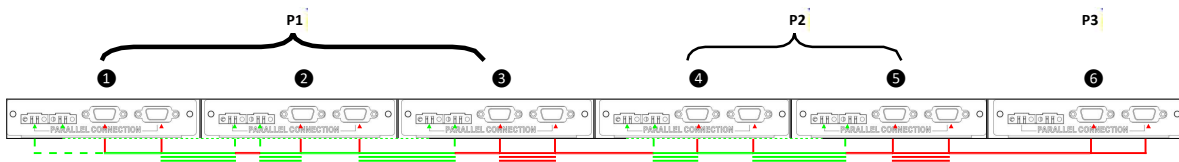


Three UPS in one phase and only one UPS for the remaining two phases:

Power Connection

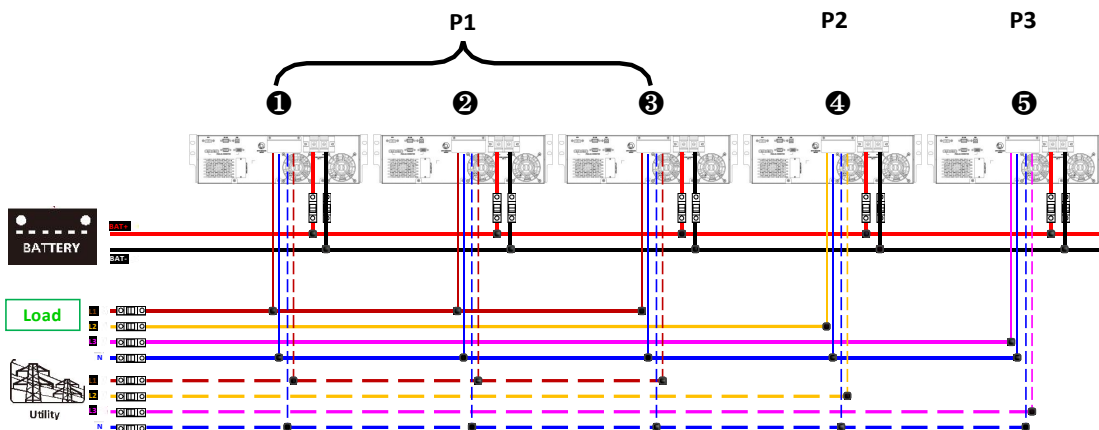


Communication Connection

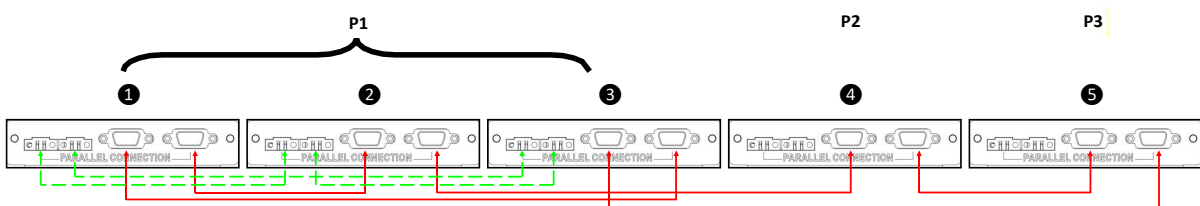


Two UPS in two phases and only one UPS for the remaining phase:

Power Connection

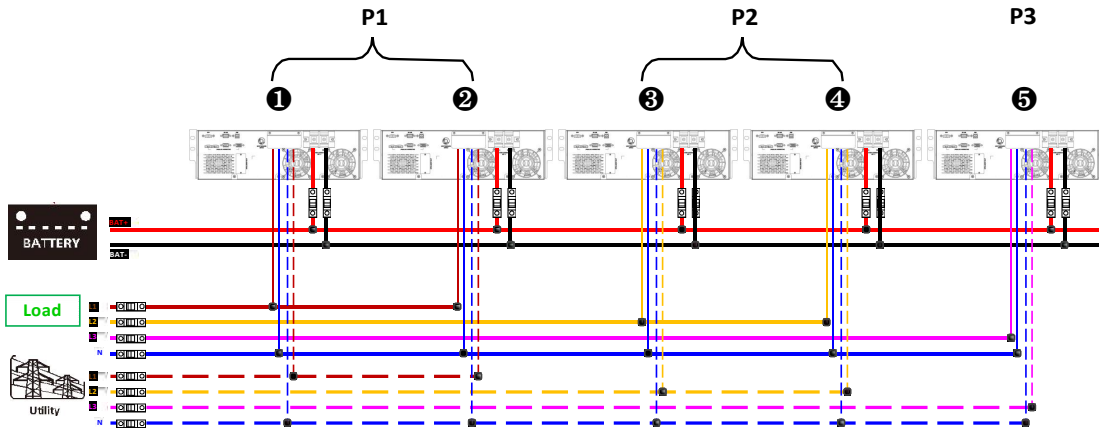


Communication Connection

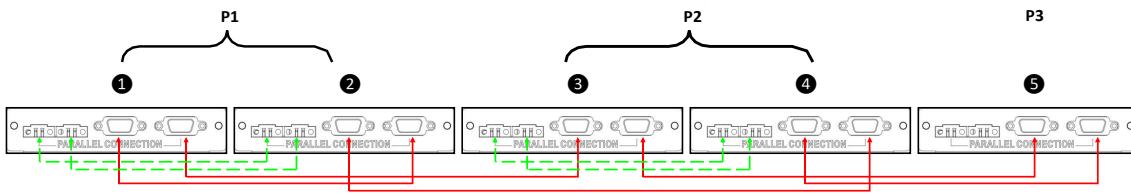


Two UPS in one phase and only one UPS for the remaining phases:

Power Connection

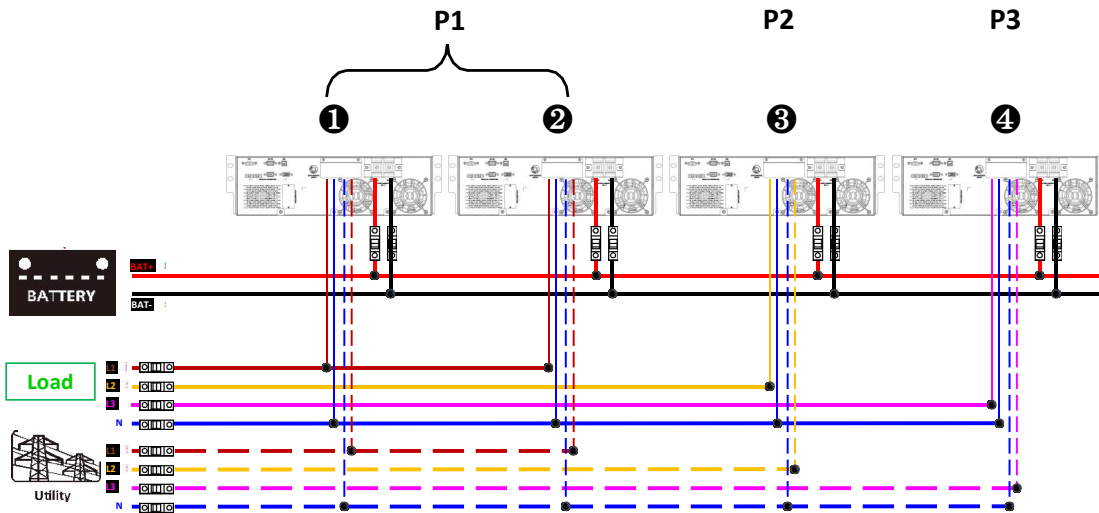


Communication Connection

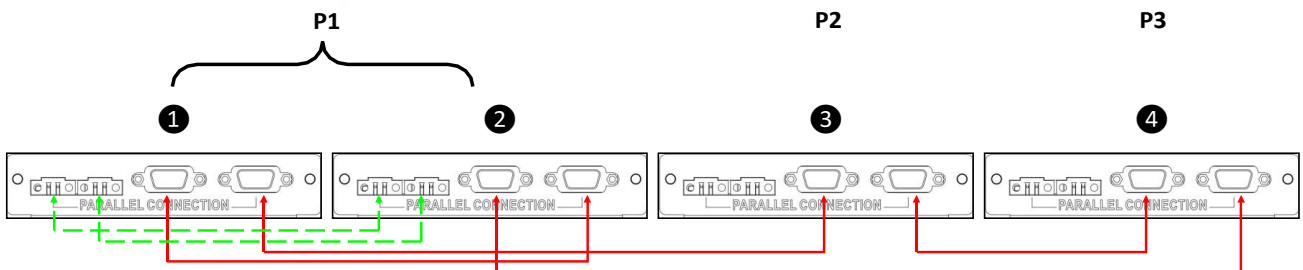


One UPS in each phase:

Power Connection

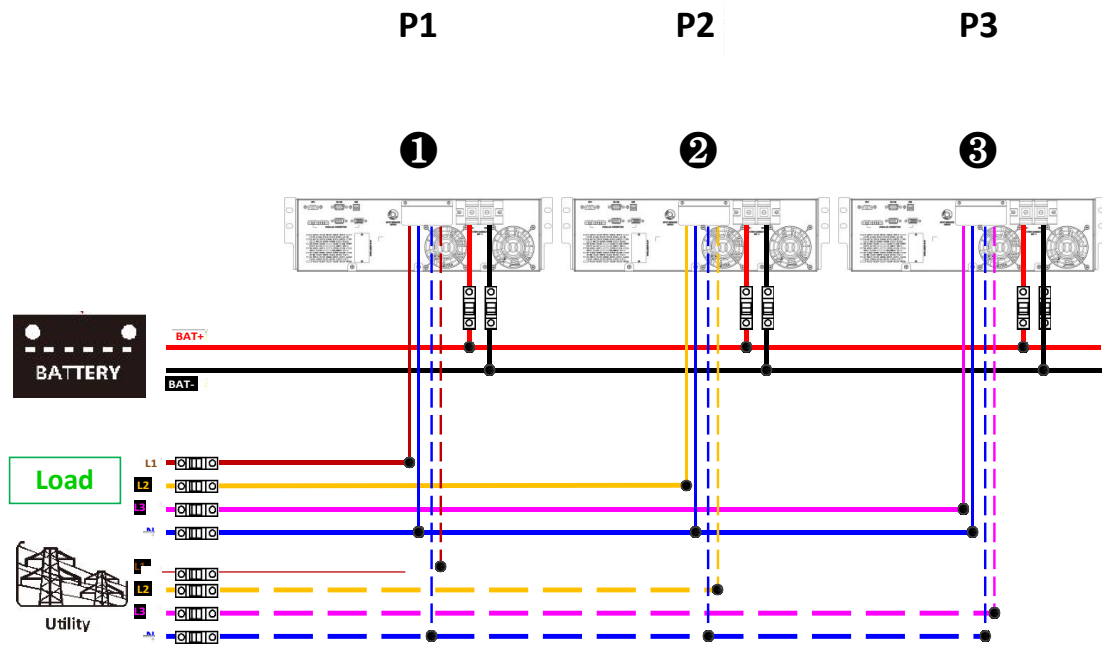

Communication Connection

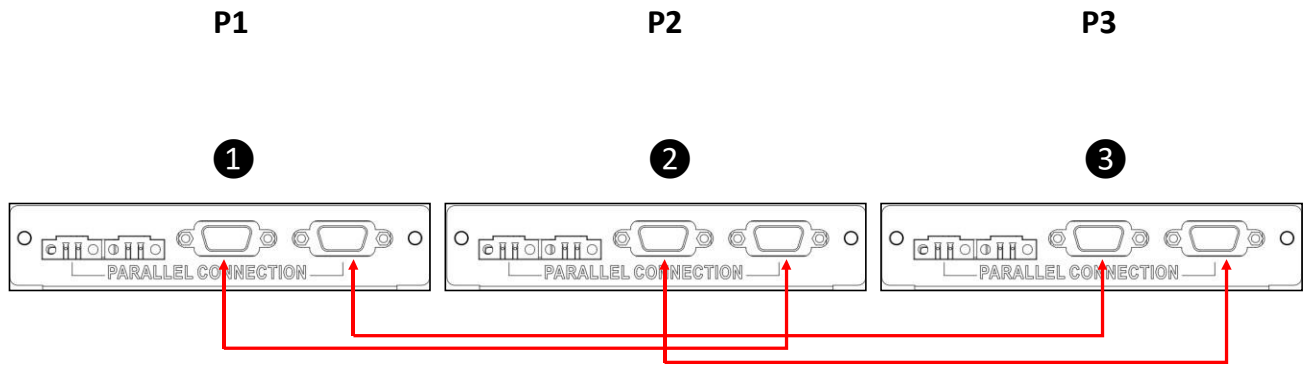











WARNING: Do not connect the current sharing cable between the UPS which are in different phases. Otherwise, it may damage the UPS.

4. LCD Setting and Display

Setting Program:

Program	Description	Selectable option	
28	AC output mode *This setting is able to set up only when the UPS is in standby mode. Be sure that AC output is off status. Otherwise, please refer to chapter "Power ON/OFF" to press "ESC" button to turn off AC output.	Single: 28 ^{OUTPUT} 51 0	When the units are used in parallel with single phase, please select "PAL" in program 28. It is required to have at least 3 UPS or maximum 6 UPS to support three-phase equipment. It's required to have at least one UPS in each phase or it's up to four UPS in one phase. Please refers to 5-2 for detailed information. Please select "3P1" in program 28 for the UPS connected to L1 phase, "3P2" in program 28 for the UPS connected to L2 phase and "3P3" in program 28 for the UPS connected to L3 phase. Be sure to connect share current cable to units which are on the same phase. Do NOT connect share current cable between units on different phases.
		Parallel: 28 ^{OUTPUT} PAL	
		L1 phase: 28 ^{OUTPUT} 3P 1	
		L2 phase: 28 ^{OUTPUT} 3P 2	
		L3 phase: 28 ^{OUTPUT} 3P 3	

Fault code display:

Fault Code	Fault Event	Icon on
60	Power feedback protection	
71	Firmware version inconsistent	
72	Current sharing fault	
80	CAN fault	
81	Host loss	
82	Synchronization loss	
83	Battery voltage detected different	
84	AC input voltage and frequency detected different	
85	AC output current unbalance	
86	AC output mode setting is different	

5. Commissioning

Parallel in single phase

Step 1: Check the following requirements before commissioning:

- Correct wire connection
- Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.

Step 2: Turn on each unit and set "PAL" in LCD setting program 28 of each unit. And then shut down all units.

NOET: It's necessary to turn off switch when setting LCD program. Otherwise, the setting can not be programmed.

Step 3: Turn on each unit.

LCD display in Master unit	LCD display in Slave unit

NOTE: Master and slave units are randomly defined.

Step 4: Switch on all AC breakers of Line wires in AC input. It's better to have all UPS connect to utility at the same time. If not, it will display fault 82 in following-order UPS. However, these UPS will automatically restart. If detecting AC connection, they will work normally.

LCD display in Master unit	LCD display in Slave unit

Step 5: If there is no more fault alarm, the parallel system is completely installed.

Step 6: Please switch on all breakers of Line wires in load side. This system will start to provide power to the load.

Support three-phase equipment

Step 1: Check the following requirements before commissioning:

- Correct wire connection
- Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.

Step 2: Turn on all units and configure LCD program 28 as P1, P2 and P3 sequentially. And then shut down all units.

NOET: It's necessary to turn off switch when setting LCD program. Otherwise, the setting can not be programmed.

Step 3: Turn on all units sequentially.

LCD display in L1-phase unit	LCD display in L2-phase unit	LCD display in L3-phase unit

Step 4: Switch on all AC breakers of Line wires in AC input. If AC connection is detected and three phases are matched with unit setting, they will work normally. Otherwise, the AC icon will flash and they will not work in line mode.

LCD display in L1-phase unit	LCD display in L2-phase unit	LCD display in L3-phase unit

Step 5: If there is no more fault alarm, the system to support 3-phase equipment is completely installed.

Step 6: Please switch on all breakers of Line wires in load side. This system will start to provide power to the load.

Note 1: To avoid overload occurring, before turning on breakers in load side, it's better to have whole system in operation first.

Note 2: Transfer time for this operation exists. Power interruption may happen to critical devices, which cannot bear transfer time.

6. Trouble shooting

Situation		Solution
Fault Code	Fault Event Description	
60	Current feedback into the UPS is detected.	<ol style="list-style-type: none"> 1. Restart the UPS. 2. Check if L/N cables are not connected reversely in all UPS. 3. For parallel system in single phase, make sure the sharing are connected in all UPS. For supporting three-phase system, make sure the sharing cables are connected in the UPS in the same phase, and disconnected in the UPS in different phases. 4. If the problem remains, please contact your installer.
71	The firmware version of each UPS is not the same.	<ol style="list-style-type: none"> 1. Update all UPS firmware to the same version. 2. Check the version of each UPS via LCD setting and make sure the CPU versions are same. If not, please contact your instraller to provide the firmware to update. 3. After updating, if the problem still remains, please contact your installer.
72	The output current of each UPS is different.	<ol style="list-style-type: none"> 1. Check if sharing cables are connected well and restart the UPS. 2. If the problem remains, please contact your installer.
80	CAN data loss	<ol style="list-style-type: none"> 1. Check if communication cables are connected well and restart the UPS. 2. If the problem remains, please contact your installer.
81	Host data loss	
82	Synchronization data loss	
83	The battery voltage of each UPS is not the same.	<ol style="list-style-type: none"> 1. Make sure all UPS share same groups of batteries together. 2. Remove all loads and disconnect AC input. Then, check battery voltage of all UPS. If the values from all UPS are close, please check if all battery cables are the same length and same material type. Otherwise, please contact your installer to provide SOP to calibrate battery voltage of each UPS. 3. If the problem still remains, please contact your installer.
84	AC input voltage and frequency are detected different.	<ol style="list-style-type: none"> 1. Check the utility wiring connction and restart the UPS. 2. Make sure utility starts up at same time. If there are breakers installed between utility and UPS, please be sure all breakers can be turned on AC input at same time. 3. If the problem remains, please contact your installer.
85	AC output current unbalance	<ol style="list-style-type: none"> 1. Restart the UPS. 2. Remove some excessive loads and re-check load information from LCD of UPS. If the values are different, please check if AC input and output cables are in the same length and material type. 3. If the problem remains, please contact your installer.
86	AC output mode setting is different.	<ol style="list-style-type: none"> 1. Switch off the UPS and check LCD setting #28. 2. For parallel system in single phase, make sure no 3P1, 3P2 or 3P3 is set on #28. For upporting three-phase system, make sure no "PAL" is set on #28. 3. If the problem remains, please contact your installer.

Appendix I: Approximate Back-up Time Table

Model	Load (W)	Backup Time @ 48Vdc 100Ah (min)	Backup Time @ 48Vdc 200Ah (min)
BWT-25003KSO	300	1054	2107
	600	491	1054
	900	291	668
	1200	196	497
	1500	159	402
	1800	123	301
	2100	105	253
	2400	91	219
	2700	71	174
	3000	63	155

Model	Load (VA)	Backup Time @ 48Vdc 200Ah (min)	Backup Time @ 48Vdc 400Ah (min)
BWT-25005KSO/6KSO	500	1226	2576
	1000	536	1226
	1500	316	804
	2000	222	542
	2500	180	430
	3000	152	364
	3500	130	282
	4000	100	224
	4500	88	200
	5000	80	180

Note: Backup time depends on the quality of the battery, age of battery and type of battery. Specifications of batteries may vary depending on different manufacturers.